


JPW-G10S
JPW-G18S

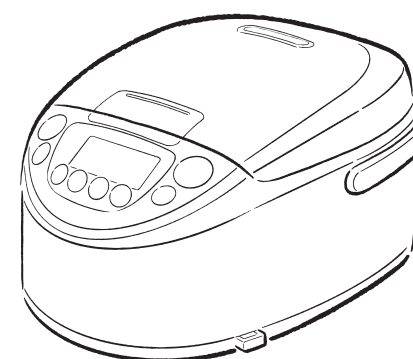

For household use

Induction Heating Rice Cooker

Operating Instruction

Thank you for purchasing this product. Please read all information in this manual before using the appliance. Afterward, keep this manual in a handy location for future reference by anyone who will use this product.

家庭用

IH电饭煲

使用说明书

非常感谢您购买本公司的产品。在您使用之前，请仔细阅读本说明书，并妥善保管，以便随时参阅。

家庭用

IH電子鍋

使用說明書

感謝您購買本公司產品。使用前，請您務必詳讀使用說明書，以便正確使用。
並請在閱讀後妥善保管本說明書，以便使用者隨時能夠翻閱。



TIGER CORPORATION

Head Office: 3-1 Hayami-cho, Kadoma City, Osaka 571-8571, Japan

Table of Contents

Introduction

- 3 - IMPORTANT SAFEGUARDS
- 8 - Menu Introduction
- 15 - Names of Component Parts and Accessories
- 17 - Setting the Current Time

Basic Cooking

- 18 - How to Cook Rice
- 22 - Keeping Rice Warm
- 23 - Reheating Cooked Rice

Timer and Soak Timer Functions

- 24 - Using the Timer Function
- 26 - Setting the Soak Timer Function

Other Food/Cake

- 28 - How to Make Other Foods (Cook•Soup)
- 30 - How to Make Cakes

Menu Guide

- 32 - Menu Guide

Cleaning and Maintenance

- 36 - How to Clean
- 38 - How to Remove and Attach Each Component Part
- 39 - How to Perform Cleaning

When a Problem Occurs

- 40 - If Rice Does Not Cook Properly
- 43 - If Other Food or Cakes Are Not Made Properly
- 44 - Troubleshooting
- 47 - Error Displays and Actions to Be Taken

Others

- 47 - Adjusting the Steaming Time (Exp. Limited Cups Menu)
- 48 - Adjusting the Sound Volume
- 49 - Specifications
- 49 - If There Is a Power Outage
- 49 - Purchasing Consumables and Optional Accessories

IMPORTANT SAFEGUARDS

Read and follow all safety instructions before using the rice cooker.

- The WARNINGS and CAUTIONS described below are intended to protect the user and other individuals from physical and property damage. To ensure safety, please follow them carefully.
- Do not remove the caution/warning labels attached to the rice cooker.

Safety instructions are classified and described according to the level of harm and damage caused by improper use, as shown below.



WARNING

This symbol indicates there is a possibility of serious injury*¹ or death when the product is handled improperly.



CAUTION

This symbol indicates there is a possibility of injury*² or damage to property*³ when the product is handled improperly.

*1 Serious injury is defined here as loss of sight, physical injury, burns (high or low temperature), electric shock, broken bones, poisoning, or other injuries severe enough to involve permanent damage and require hospitalization or extended outpatient care.
*2 Injury is defined here as a physical injury, burns, or electric shock that does not require a hospital stay or extended outpatient care.
*3 Damage to property is defined here as damage that affects a building, furniture, livestock, or pets.

Description of Symbols



△ indicates a warning or caution. The specific details of the warning or caution are indicated inside the symbol or in an illustration or text near the symbol.



⊘ indicates a prohibited action. The specific details of the prohibited action are indicated inside the symbol or in an illustration or text near the symbol.



● indicates an action that must be taken or an instruction that must be followed. The specific details of the action or instruction are indicated inside the symbol or in an illustration or text near the symbol.

WARNING



Use only rated voltage power.
This is to avoid fire or electric shock.



Use an electrical outlet rated 7 A or higher and do not plug in other devices at the same time.
Connecting other devices to the same outlet may cause the outlet to overheat, resulting in fire.



Do not use a damaged power cord. Also, do not damage the power cord.
(Do not forcefully bend, pull, twist, fold, or modify the cord. Do not place the cord near high-temperature surfaces or under/between heavy objects.)
Doing so may cause fire or electric shock.



Wipe the power plug thoroughly if dust or other foreign objects are collected on it.
This is to avoid fire.



If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
Otherwise, a malfunction or accident may occur.



Insert the power plug completely into the outlet.
Failure to do so may cause electric shock, short circuit, smoke, or fire.



Do not use the rice cooker when the power cord or power plug is damaged or the plug is loose in the outlet.
This is to avoid electric shock, short circuits, and fire.



Do not handle the power plug with wet hands.
Doing so may cause electric shock or injury.




Never open the lid during cooking.
Contents may spray out, causing burns or other injuries.

IMPORTANT SAFEGUARDS

WARNING


-  **Do not place your face or hands near the steam vents.**
Doing so may cause burns. Never allow small children near the steam vent.
-  **Children should be supervised to ensure that they do not play with the appliance.**
-  **This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
This is to avoid burns, electric shock, or injury.
-  **Do not immerse this appliance in water.**
This is to avoid electric shock, shorting, or fire.
-  **Do not attempt to modify the rice cooker. Disassembly or repairs should only be performed by an authorized service representative.**
Otherwise, fire, electric shock, or injury may occur.
-  **Metal objects such as knives, forks, spoons, and lids should not be placed on the appliance.**
Metal objects may become very hot.
-  **Do not expose the power plug to steam.**
Doing so may cause electric shock or fire. When using the rice cooker on a sliding tabletop, be careful not to expose the power plug to steam.
-  **Do not insert any pins, wires, or other metal objects into the air inlet or air outlet, or any gaps between parts.**
Doing so may cause electric shock or injury due to malfunction.

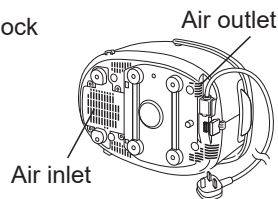

-  **When closing the lid, remove any cooked rice or grains of rice adhering to the upper casing or around the hook, and close the lid firmly.**
Steam may leak or contents may spray out from the opened lid, causing burns or other injuries.
-  **Do not use this product in any way not described in the operating instructions.**
Steam or contents may spray out, causing burns or other injuries.
Examples of cooking that is not allowed:
 - Heating ingredients or seasoning in a plastic bag, etc.
 - Using parchment paper, aluminum foil, or plastic wrap
 - Using a lot of oil
 - Cooking amaranth or other small grains that may cause clogging
-  **If the surface is cracked, switch off the appliance immediately.**
Failure to do so may cause electric shock.
-  **Stop using the rice cooker immediately in case of any malfunction or failure.**
Using the rice cooker with a problem may cause fire, electric shock, or injury.
Examples of malfunction and failure:
 - The power cord or power plug becomes abnormally hot.
 - Smoke is emitted from the rice cooker or a burning odor is detected.
 - The rice cooker is cracked or there are loose or wobbly parts.
 - The inner pot is deformed.
 - There are other problems or abnormalities.
 Immediately disconnect the power cord from the outlet and contact the place of purchase for inspection and repair service.
-  **Do not use the rice cooker on an unstable surface, heat-sensitive table, mat, etc.**
Doing so may cause fire or damage to the table or mat.

WARNING

-  **Do not use the rice cooker near walls or furniture.**
Steam and heat may cause damage, discoloration, or deformation. Use the rice cooker at least 30 cm away from walls or furniture. When using the rice cooker on a kitchen rack or cabinet, make sure that steam is not trapped.
-  **Be careful to avoid any spillage on the connector during using.**
-  **The heating element surface is subjected to residual heat after use. Do not touch high-temperature surfaces during or immediately after cooking.**
Doing so may result in burns.

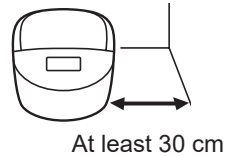

-  **Risks of injuries if you do not use this appliance correctly.**
-  **Wait until the rice cooker has cooled down before cleaning it.**
(Read P.36 to 39 for how to clean the appliance.)


CAUTION

-  **Do not use the rice cooker in a small space where the operation panel is exposed to steam.**
Steam and heat may result in deformation of the operation panel or damage, discoloration, deformation, or malfunction of the rice cooker. When using the rice cooker on a sliding tabletop, pull the tabletop out so that the operation panel is not exposed to the emitted steam.
-  **Do not use the rice cooker on a sliding tabletop that does not have sufficient load-bearing capacity.**
Otherwise, the rice cooker may fall, resulting in injury, burns, or malfunction. Before using the rice cooker, confirm that the sliding tabletop is sufficiently able to bear its weight.
-  **Do not use the rice cooker near a heat source or where it may be splashed with water.**
Doing so may cause electric shock, electric leakage, fire, or deformation or malfunction of the rice cooker.
-  **Use only the inner pot made exclusively for this rice cooker.**
Using any other pot may cause overheating or malfunction.
-  **Do not use the rice cooker if the tab of the inner lid is broken.**
Doing so may cause steam leaks or boiling over, resulting in burns or other injuries. The rice may also not be cooked properly.
-  **Do not cook with the inner pot empty.**
Doing so may cause overheating or malfunction.
-  **This appliance is intended to be used in household and similar applications such as:**
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
-  **Do not use the rice cooker on an aluminum sheet or electric mat.**
Aluminum material may generate heat, resulting in smoke or fire.
-  **Do not use the rice cooker with the air inlet/outlet blocked or in a hot room.**
Do not place it on a carpet or plastic bag. Doing so may result in electric shock, electric leakage, fire, or malfunction.
-  **Do not use the rice cooker on an induction cooktop.**
Doing so may result in malfunction.
-  **Be careful about any escaping steam when opening the lid.**
Exposure to steam may result in burns.

IMPORTANT SAFEGUARDS


CAUTION

-  **Do not hold the inner pot handles with your bare hands when the rice cooker is in operation or immediately after cooking. Be sure to use oven mitts to pick up the inner pot handles.**
Touching the hot inner pot handle may result in burns.

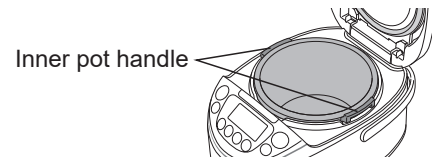

-  **Disconnect the power plug when not in use.**
This is to avoid injury, burns, electric shock, electric leakage, or fire caused by insulation deterioration.

-  **Be sure to hold the power plug when removing it from an outlet.**
This is to avoid electric shock, short circuits, or fire.

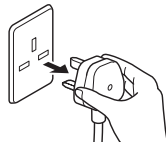

-  **Do not use multiple appliances connected to the same outlet.**
Doing so may cause fire.



-  **Handle the rice cooker with care.**
Dropping the rice cooker or exposing it to a strong impact may cause injury or malfunction of the rice cooker.

-  **Do not place magnetic-sensitive objects close to the rice cooker since it produces a magnetic field.**
TVs and radios may experience interference.
Content recorded on credit cards, magnetic ID cards, cassette tapes, or videotapes may be lost.

-  **People with cardiac pacemakers must consult a medical specialist before using the rice cooker.**
Operation of the rice cooker may affect cardiac pacemakers.


-  **The appliances are not intended to be operated by means of an external timer or separate remote-control system.**
Doing so may result in malfunction.

-  **Do not wash the entire rice cooker.**
Do not immerse this appliance in water or pour water on it. Doing so may cause electric shock, shorting, or fire.

-  **Do not move the rice cooker while it is cooking.**
Doing so may cause the contents to spill, resulting in burns.

-  **Do not touch the hook button while carrying the rice cooker.**
Doing so may cause the lid to open, resulting in injury or burns.


-  **Do not hold the lid when moving the rice cooker.**
Doing so may cause burns or other injuries. Be sure to hold the grips when moving this appliance.

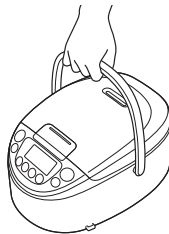

-  **Use and cook an appropriate amount of ingredients that can foam or expand.**
Otherwise, the ingredients may overflow, resulting in accidents or malfunction.
Examples: Soybeans, black beans, white jelly ears, and other ingredients that can foam easily.

Safety instructions to follow so that the appliance can be used for many years

- **Remove any cooked or uncooked grains of rice adhering to the rice cooker and inner pot.**
Failure to do so may cause steam to leak or contents to boil over. This may also result in malfunction or improperly cooked rice.
- **Do not cover the rice cooker with a cloth or other object during cooking.**
Doing so may cause the rice cooker or the lid to become deformed or discolored.
- **Do not reheat (keep warm) cooled rice.**
Doing so may cause unpleasant odors.
- **The holes in the rice cooker are designed to maintain its functions and performance. In extremely rare cases, insects may enter these holes and cause a malfunction. To prevent this, a commercially available insect prevention sheet, etc., is recommended. If a malfunction does occur due to this problem, it will not be covered by warranty. In this case, contact the place of purchase.**
- **The fluorocarbon resin coating on the inner pot may wear and peel with extended use. It is harmless to humans and does not interfere with actual cooking or the heat-insulating capability of the rice cooker. If deformation or corrosion is found on the inner pot, a new inner pot may be purchased. In this case, contact the place of purchase.**
- **Strictly observe the following instructions to keep the fluorocarbon resin coating of the inner pot from swelling, peeling, or becoming deformed.**
 - Do not place the inner pot directly over a gas or induction cooktop. Do not place it in a microwave oven.
 - Use the Keep Warm function for white rice and rinse-free rice only. (Do not use for mixed or seasoned rice, etc.)
 - Do not use vinegar inside the inner pot.
 - Use only the supplied spatula or a wooden spatula.
 - Do not use hard or sharp utensils such as metal ladles, spoons, or whisks.
 - Do not place a strainer inside the inner pot.
 - Do not wash dishes or other hard objects inside the inner pot.
 - Do not clean the inner pot using hard materials such as wire wool or nylon scrubbing sponges.
 - Do not use a dishwasher/dryer to clean the inner pot and other parts.

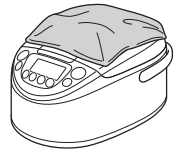

Menu Introduction

16 menu choices

01 Plain

Select when cooking white rice.
(Standard cooking)

 **1.0 L type** 0.5 to 5.5 cups
1.8 L type 1 to 10 cups

 **Plain**

 **1.0 L type** 47 to 57 min.
1.8 L type 48 to 65 min.

 **1 hr. 10 min. or more**

 **Available**

02 Premium

Soaking rice for twice the duration of the Plain menu item and heating it for a longer time makes rice with more flavor (sweetness, flavor, and stickiness).

 **1.0 L type** 0.5 to 5.5 cups
1.8 L type 1 to 10 cups

 **Premium**

 **1.0 L type** 60 to 70 min.
1.8 L type 57 to 75 min.

 **1 hr. 20 min. or more**

 **Available**

03 Eco

Select when you want to cook white rice with a lower power consumption (by approximately 3% to 16% less). Cooked rice is slightly harder than when using the Plain menu item.

 **1.0 L type** 0.5 to 5.5 cups
1.8 L type 1 to 10 cups

 **Eco**

 **1.0 L type** 46 to 58 min.
1.8 L type 48 to 64 min.

 **1 hr. 10 min. or more**

 **Available**

Tips

- Select the Plain menu item if you want softer rice.
- A large amount of condensation may collect on the inner lid.

04 Sushi

Select when cooking rice for sushi. The texture is less sticky and slightly hard.

 **1.0 L type** 0.5 to 5.5 cups
1.8 L type 1 to 10 cups

 **Sushi**

 **1.0 L type** 48 to 58 min.
1.8 L type 47 to 65 min.

 **1 hr. 10 min. or more**

 **Available**

05 Quick

Select when you want to cook white rice quickly. The cooking time is shorter and cooked rice is slightly harder than when using the Plain menu item.

 **1.0 L type** 0.5 to 5.5 cups
1.8 L type 1 to 10 cups

 **Plain**

 **1.0 L type** 23 to 41 min.
1.8 L type 23 to 44 min.

 **Timer not available**

 **Available**

06 Exp. Limited Cups

Select when you want to cook a small amount of white rice quicker. The cooking time is shorter and cooked rice is slightly harder than when using the Plain menu item.

 **1.0 L type** 0.5 to 2 cups
1.8 L type 1 to 3 cups

 **Exp. Limited Cups**

 **1.0 L type** 20 to 29 min.
1.8 L type 23 to 30 min.

 **Timer not available**

 **Available**

Tips

- If cooked rice is too hard, extending the steaming time can change its hardness. → **P. 47**

*1: The cooking time guideline indicates the amount of time to the end of steaming when the rice is cooked without soaking.
(Voltage: 220 to 230 V, Room temperature: 23°C, Water temperature: 23°C, Amount of water: normal level)
Cooking times vary somewhat depending upon the type and quantity of rice, the type and quantity of other ingredients, the room temperature, the water temperature, the amount of water, the electrical voltage, whether the Timer function (Soak Timer) is used, etc.

Menu Introduction

16 menu choices

07 Long-grain

Select when cooking long-grain rice.

 **1.0 L type** 0.5 to 5.5 cups
1.8 L type 1 to 10 cups

 **Long-grain**

 **1.0 L type** 30 to 40 min.
1.8 L type 31 to 43 min.

 **45 min. or more**

 **Available**

Tips

- When cooking seasoned rice with various ingredients using long-grain rice, select the Mixed menu item. Selecting any other menu option may result in improperly cooked food.

08 Multigrain

Select when cooking other grains (foxtail millet, barnyard millet, black rice, red rice, etc.) together with white rice.

 **1.0 L type** 0.5 to 4 cups
1.8 L type 1 to 8 cups

 **Plain**

 **1.0 L type** 52 to 62 min.
1.8 L type 53 to 65 min.

 **1 hr. 10 min. or more**

 **Available** **Serve as soon as possible.^{*2}**

Tips

- The amount of other grains should be no more than 20% of the volume of the white rice.
- Place the other grains on top of the white rice. Mixing them together may result in improperly cooked food.
- If the amount of water to add is specified on a package of commercially available germinated brown rice or mixed grains, follow those directions and add water according to your personal preference.
- Do not mix in amaranth or other small grains that may cause clogging.
- Select the Multigrain menu item when cooking germinated brown rice, whole rice, and semi-polished rice.

09 Mixed

Select when cooking seasoned rice.

 **1.0 L type** 0.5 to 4 cups
1.8 L type 1 to 7 cups

 **Mixed**

 **1.0 L type** 38 to 52 min.
1.8 L type 44 to 65 min.

 **Timer not available**

 **Available** **Serve as soon as possible.^{*2}**

10 Sweet

Select when cooking glutinous rice.

 **1.0 L type** 1 to 3 cups
1.8 L type 2 to 5 cups

 **Glutinous and non-glutinous rice:**
Between Sweet and Plain
Glutinous rice: Sweet

 **1.0 L type** 36 to 46 min.
1.8 L type 38 to 48 min.

 **Timer not available**

 **Available** **Serve as soon as possible.^{*2}**

Tips


- Level the rice out so that all of the rice is under water.
- When using long-grain glutinous rice, add a large amount of water but not more than 1/3 of one line past the recommended amount.

Instructions for adding other ingredients to rice

- You can add other ingredients to rice when using the Mixed, Sweet, Porridge • Firm, Brown Porridge, and Brown menu items. Do not add other ingredients when using any other menu item. Doing so may result in improperly cooked food.
- The total amount of ingredients should be no more than 70 g per cup of white, glutinous, and/or brown rice (except for the Porridge menu item).
- Mix seasonings well, and then add other ingredients on top of the rice.
- During cooking, do not open the lid to add other ingredients.
- If other ingredients are to be added to the rice, be sure to use no more than the allowed maximum amount.
- Add water prior to adding the ingredients. Adding water after the ingredients can result in the cooked rice being too firm.
- The following may result in improperly cooked or burned rice.
 - Adding too much seasoning such as soy sauce and sweet cooking rice wine
 - Seasoning sinking to the bottom
 - Adding ketchup or tomato sauce
 - Mixing other ingredients with rice
- When adding ingredients while using the Porridge menu item, add water to the rice so that the water level after the ingredients are added is not over the top line of the Porridge scale.

Inner pot scale (inside)

- Use the corresponding scale on the inner pot as a guide. Add water according to the type of rice and your personal preference.
- If adding more or less water than the recommended amount, do not deviate from that amount by more than 1/3 of one line. Doing so may cause the contents to boil over, etc.

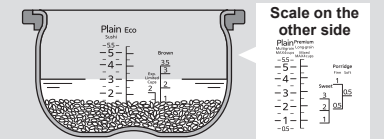

Rinse-free rice

- Use the supplied measuring cup for rinse-free rice as well. → P. 16, P. 18
- When cooking rinse-free rice, use the inner pot scale as a reference but add a little extra water (until it just covers the corresponding line).
- When cooking rinse-free rice, dark brown crisp rice may be formed.
- Add rinse-free rice and water, and then stir well from the bottom so that every individual grain of rice is fully wetted by the water. Just adding water to the rice may not fully wet the rice and may result in improper cooking.
- If the added water turns white, we recommend you rinse the rice thoroughly by replacing the water once or twice. The water turning white is due to the starch in the rice and not its bran. However, cooking it with the starch left in the water may result in improperly cooked or burned rice, or the contents boiling over.

Soaking rice

- Since the soaking time is included in the cooking time for each menu item (except for the Quick and Exp. Limited Cups menu items), rice can be cooked immediately without presoaking.
- You can also manually set the soaking time. → P. 26

*1: The cooking time guideline indicates the amount of time to the end of steaming when the rice is cooked without soaking. (Voltage: 220 to 230 V, Room temperature: 23°C, Water temperature: 23°C, Amount of water: normal level)
Cooking times vary somewhat depending upon the type and quantity of rice, the type and quantity of other ingredients, the room temperature, the water temperature, the amount of water, the electrical voltage, whether the Timer function (Soak Timer) is used, etc.

*2: Although the Keep Warm function is automatically activated, serve rice as soon as possible since it loses its flavor after being kept warm.

Menu Introduction

16 menu choices

11 Porridge

Select when cooking porridge.

1.0 L type

Firm porridge: 0.5 to 1 cup

Firm porridge with ingredients: 0.5 cups

Soft porridge: 0.5 cups

1.8 L type

Firm porridge: 0.5 to 2 cups

Firm porridge with ingredients: 0.5 to 1.5 cups

Soft porridge: 0.5 to 1.5 cups

Firm porridge: Porridge • Firm
Soft porridge: Porridge • SoftThe cooking time can be set
between 40 and 90 minutes.

Cooking time + 1 min.

Available Serve as soon as
possible.^{*2}

Tips

- Serve cooked porridge as soon as possible before it turns into a sticky paste.
- Instructions for adding other ingredients to rice → P. 11

12 Brown Porridge

Select when cooking brown porridge.

1.0 L type

Firm porridge: 0.5 to 1 cup

Firm porridge with ingredients: 0.5 cups

Soft porridge: 0.5 cups

1.8 L type

Firm porridge: 0.5 to 2 cups

Firm porridge with ingredients: 0.5 to 1.5 cups

Soft porridge: 0.5 to 1.5 cups

Firm porridge: Porridge • Firm
Soft porridge: Porridge • Soft1.0 L type 82 to 92 min.
1.8 L type 88 to 104 min.

1 hr. 45 min. or more

Available Serve as soon as
possible.^{*2}

Tips

- Serve cooked porridge as soon as possible before it turns into a sticky paste.
- Instructions for adding other ingredients to rice → P. 11

13 Brown

Select when cooking brown rice.

1.0 L type

Brown rice: 1 to 3.5 cups

Brown rice with ingredients: 1 to 2 cups

1.8 L type

Brown rice: 2 to 6 cups

Brown rice with ingredients: 2 to 4 cups



Brown

1.0 L type 68 to 81 min.
1.8 L type 73 to 88 min.

1 hr. 30 min. or more

Available Serve as soon as
possible.^{*2}

Tips

- Instructions for adding other ingredients to rice → P. 11
- **Cooking brown rice and/or multigrain brown rice mixed with white rice:**
 - Multigrain brown rice is brown rice mixed with other grains.
 - If the rice to be cooked includes more brown rice and/or multigrain brown rice than white rice, use the Brown menu item.
 - If there is an equal amount of brown rice or multigrain brown rice and white rice, or there is more white rice than brown rice or multigrain brown rice, use the Plain menu item. In this case, the brown rice or multigrain brown rice should be soaked for 1 to 2 hours before cooking.
 - The maximum allowed amount when combining brown rice, multigrain brown rice, and white rice is 3.5 cups for the 1.0 L type, and 6 cups for the 1.8 L type.
- **Cooking other grains together with brown rice:**
 - Be sure to select the Brown menu item.
 - The maximum allowed amount when combining brown rice and other grains is 3.5 cups for the 1.0 L type, and 6 cups for the 1.8 L type.

14 Brown GABA

Select when you want to cook brown rice to be soft and easy to chew. (Cooking using this menu item takes longer than the Brown menu item.) In addition, the amount of GABA (gamma-aminobutyric acid), a nutrient currently attracting attention for its health benefits, is more than for brown rice cooked using the Brown menu item.



1.0 L type 1 to 3.5 cups

1.8 L type 2 to 6 cups



Brown

1.0 L type 4 hr. 16 min. to 4 hr. 26 min.
1.8 L type 4 hr. 19 min. to 4 hr. 31 min.

4 hr. 35 min. or more

Available Serve as soon as
possible.^{*2}

*1: The cooking time guideline indicates the amount of time to the end of steaming when the rice is cooked without soaking. (Voltage: 220 to 230 V, Room temperature: 23°C, Water temperature: 23°C, Amount of water: normal level)
Cooking times vary somewhat depending upon the type and quantity of rice, the type and quantity of other ingredients, the room temperature, the water temperature, the amount of water, the electrical voltage, whether the Timer function (Soak Timer) is used, etc.

*2: Although the Keep Warm function is automatically activated, serve rice as soon as possible since it loses its flavor after being kept warm.

Menu Introduction

16 menu choices

15 Cook•Soup

→ P. 28, P. 29

Select when cooking or making soup. Set the cooking time to slowly simmer the ingredients.

Tips

- Be sure to use the Cook•Soup menu item when cooking foods other than rice and grains.
- Otherwise, steam or contents may spray out, causing burns or other injuries, or the inner pot may be burnt or damaged.
- Simmered dishes become softer and have enhanced flavor if kept warm after heating.


16 Cake

→ P. 30, P. 31

Select when making a cake.

Names of Component Parts and Accessories


◇ Check the following immediately after opening the packaging.

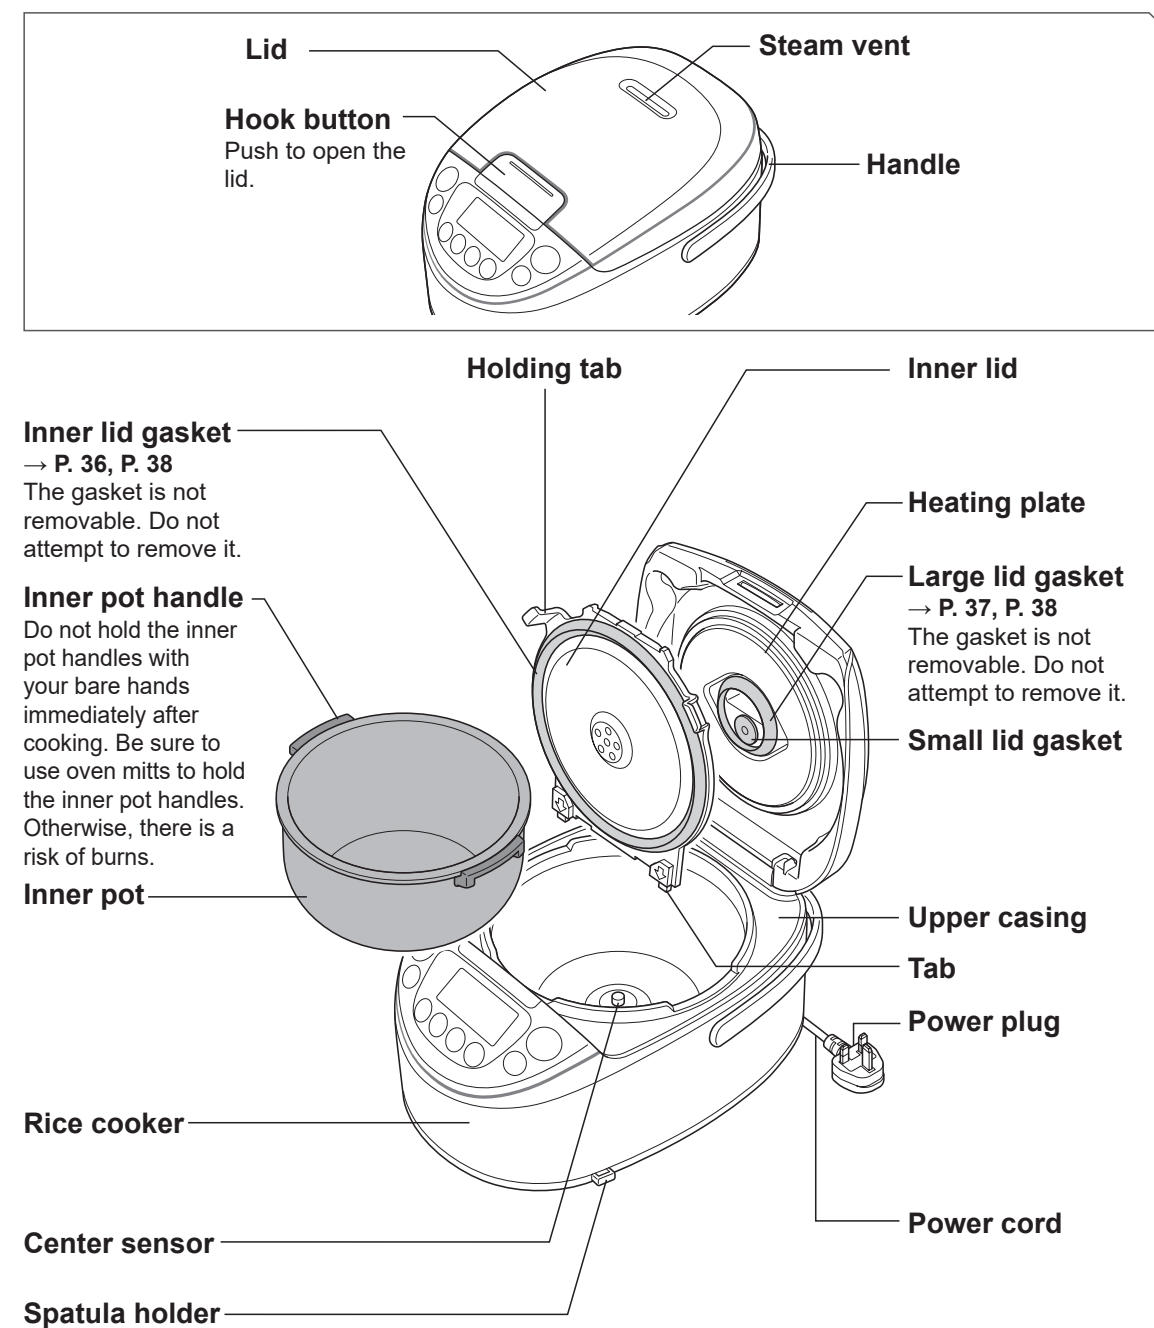

Be sure to hold the handle when moving the rice cooker.
 * Be sure to use oven mitts when the rice cooker is hot.
 Otherwise, there is a risk of burns.


Names of Component Parts and Accessories

Operation panel

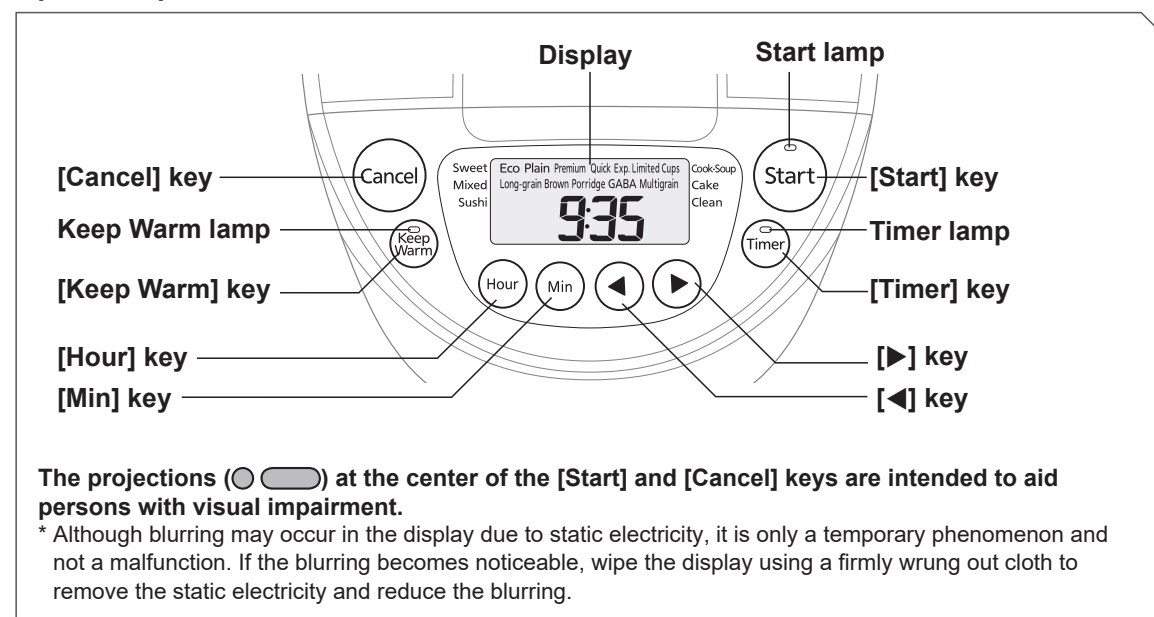

Checking the accessories

<Spatula>
Insert the spatula in its holder.

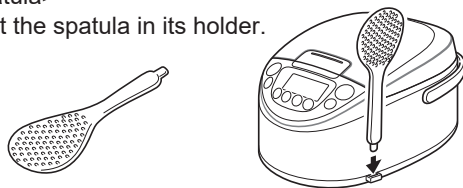

<Ladle>



<Measuring cup>
Approximately 1 cup
(approximately 0.18 L)
One level cup of rice is
approximately 150 g.



About the inner pot (ceramic coating)

The inner pot is coated with materials included in a ceramic pot to achieve the same unique flavor as when rice is cooked in this type of pot.

Sounds emitted by the rice cooker

The following sounds coming from the rice cooker during cooking, reheating, or when the Keep Warm function is on are normal and do not indicate a problem:

- Humming (sound of the fan rotating)
- Buzzing or twittering (sound of induction heating operation)

Lithium battery

The rice cooker has a built-in lithium battery that stores the current time and the preset timer settings even with the power plug disconnected.

- If the lithium battery runs out, 0:00 blinks when the power plug is plugged back in. The rice cooker can still cook normally, however, the current time, preset timer settings, and the elapsed Keep Warm time are deleted when the power plug is disconnected.

CAUTION

- Do not attempt to replace the lithium battery by yourself. To replace the battery, contact the place of purchase. (A fee is required.)

For first time use

Wash the inner pot, inner lid, and accessories before using them. → P. 36 to 38

Checking the current time


The current time is displayed in the 24-hour format. Adjust the time if the correct time is not displayed. → P. 17

Setting the Current Time


The current time is displayed in the 24-hour format.

* The time cannot be set during cooking (and cleaning); when the Keep Warm function is on; when the Timer function is set; when the Timer function (Soak Timer) is in use; or when the Porridge, Cook•Soup, or Cake menu item is selected.

Example: When changing the time from 9:30 to 9:35

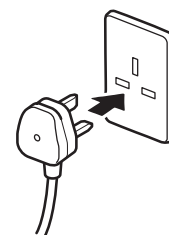

1 Connect the power plug to an outlet.

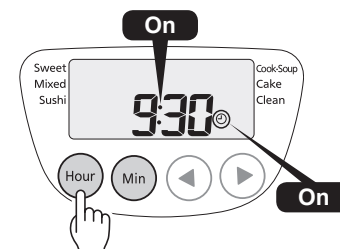

2 Press [Hour] or [Min] to display the time setting mode.

◇ Pressing [Hour] or [Min] makes light up.



3 Set the current time.


- ◇ Press [Hour] to change the set time in increments of 1 hour. Press [Min] to change that time in increments of 1 minute.
- ◇ Hold down the corresponding key to change the time more rapidly.
- ◇ To cancel the setting of the time, press [Cancel].



4 Press [Start].

◇ turns off, indicating that the time has been set.

How to Cook Rice

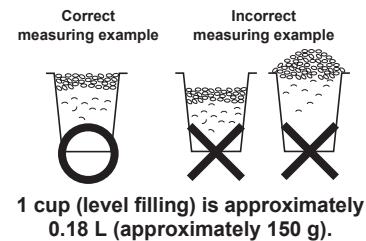

1 Measure the rice with the supplied measuring cup.

- ◇ Be sure to use the supplied measuring cup. If another rice dispenser is used, errors may occur or the rice may not cook properly.
- ◇ Use the supplied measuring cup for rinse-free rice as well.

CAUTION • Always use the specified volume of rice. Otherwise the rice may not be cooked properly. → P. 8 to 14, P. 49

- Do not mix in amaranth or other small grains that may cause clogging.




Rice can be rinsed in the inner pot.

2 Rinse the rice.

- ◇ First, add plenty of water, lightly stir the rice, and discard the water quickly. Use cold water and quickly rinse the rice so that the rice does not absorb the starchy water.
- ◇ Replace water for rinsing two to three times until the water does not turn as white.
- ◇ When cooking rinse-free rice, stir it well from the bottom. → P. 11


CAUTION • Do not use hot water (35°C or hotter) to rinse the rice. Doing so may prevent the rice from being cooked properly.

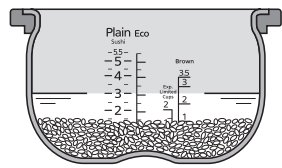

3 Adjust the water level.


- ◇ Place the inner pot on a level surface and level the rice out.
- ◇ Adjust the water level to the appropriate line of the corresponding scale on the inside of the inner pot. → P. 11

CAUTION • Do not use hot water (35°C or hotter) when adding water. Doing so may prevent the rice from being cooked properly.

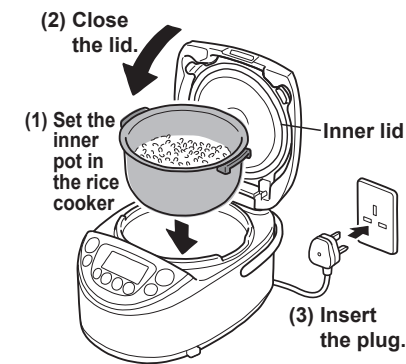


4 Place the inner pot into the rice cooker, close the lid, and connect the power plug to an outlet.

- ◇ Wipe off any water drops adhering to the outside of the inner pot before placing it into the appliance. Otherwise the rice may not be cooked properly.
- ◇ Close the lid firmly using both hands.
- ◇ If the Keep Warm lamp is on, press [Cancel] to turn it off.

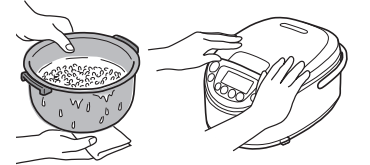

CAUTION • Be sure to remove any cooked rice or grains of rice adhering to the upper casing, around the hook button, and to the inner lid. Failing to follow this instruction may prevent the lid from closing or cause the lid to open during cooking.



- The lid cannot be closed unless the inner lid is set in place.
- Confirm that the lid is completely closed.
- If [Start] or [Keep Warm] is pressed without the inner pot being set, the rice cooker beeps 2 times (short beeps).
- The volume can be adjusted if desired. → P. 48

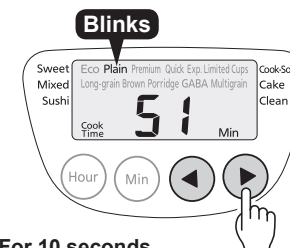

For 10 seconds after a menu item is selected, the cooking time (reference) for that item is displayed.

5 Press [◀] or [▶] to select a menu item. → P. 8 to 14

- ◇ Each time the key is pressed, the selected menu item changes, with the item or ◀▶ blinking.

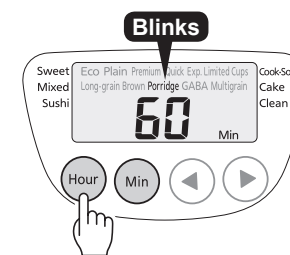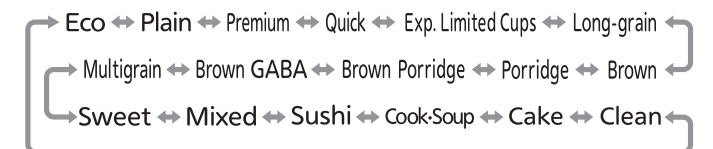

6 When you select the Porridge menu item, use [Hour] or [Min] to set the desired cooking time.

- ◇ The default setting is 60 minutes. Adjust the time as desired.
- ◇ The time can be set between 40 and 90 minutes in increments of 5 minutes.
- ◇ Pressing [Hour] increases the time by 5 minutes while pressing [Min] decreases it by 5 minutes.

How to Cook Rice



The remaining time before cooking is completed appears on the display.



Plain:
Short and long beeps
Other menu items:
Long beep

7 Press [Start].

- ⚠ WARNING**
- Do not place your face or hands near the steam vent during cooking. Exposure to steam may result in burns or injury.
 - If you need to cancel cooking before it is completed**
 - (1) Press [Cancel] to cancel cooking.
 - (2) Check that no steam is coming out, and then press the hook button.
 - * Opening the lid immediately after pressing [Cancel] may result in burns.
 - To start cooking again**
 - Replace the rice and water in the inner pot and let the rice cooker cool down completely before cooking again.
 - * When [Cancel] is pressed, the cooking is canceled. Cooking again without replacing the rice and water in the inner pot may result in burned rice or improperly cooked rice as the semi-cooked rice is cooked again from the beginning.
- ⚠ CAUTION**
- Be sure to let the rice cooker cool down in the following cases.
 - Cooking continuously
 - Cooking immediately after turning off the Keep Warm function
 - Otherwise the cooking time may become longer or rice may not be cooked properly.
 - * Cooking time (reference) for each menu item → **P. 8 to 14**

Hook button
Push to open the lid.

Steam vent
Make sure that steam is not coming out.

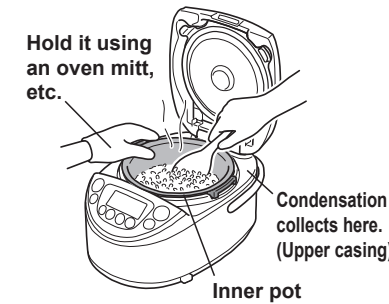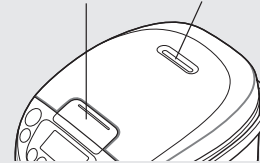


8 Stir and loosen the rice as soon as cooking is completed.

- Once the rice is fully cooked, the rice cooker beeps 8 times (long beeps) and the Keep Warm function is automatically activated. (Menu items for which the Keep Warm function is available → **P. 8 to 14**; Keeping rice warm → **P. 22**)
- Excess water is evaporated if you stir and loosen the rice soon after it is cooked.
- Level the rice out so that grains of rice do not remain adhered to the inner sides of the inner pot. (As a feature of the inner pot shape, a well may be created at the center of the rice.)
- After using the rice cooker, press [Cancel], disconnect the power plug, and wait until the rice cooker has cooled down before cleaning it.
- If ingredients have been added when using the Porridge and Brown Porridge menu items or a longer cooking time is required, etc., simply press the [Hour] and [Min] with the Keep Warm lamp lit or blinking to set the additional cooking time, and then press the [Start]. The cooking time can be extended up to 15 minutes in increments of 1 minute, for a maximum of 3 times.
- Stir the rice well before pressing [Start].
- Serve cooked porridge as soon as possible before it turns into a sticky paste.


- ⚠ WARNING**
- Before opening the lid, make sure that steam is not coming out of the steam vent. Otherwise, there is a risk of burns or injury.
- ⚠ CAUTION**
- If you disconnect the power plug without canceling the Keep Warm function, the next time you turn on the rice cooker, the Keep Warm lamp turns on and you cannot cook.
 - Be sure to wipe off any hot water that collects on the upper casing or that runs onto the outside of the rice cooker when you open the lid immediately after cooking or while the Keep Warm function is on. A large amount of condensation may collect depending on the menu item.

Keeping Rice Warm

The Keep Warm function is particularly good for maintaining the shine and taste of white rice (or rinse-free rice). The rice cooker automatically switches to the Keep Warm setting when cooking is finished. (Menu items for which the Keep Warm function is available → P. 8 to 14)

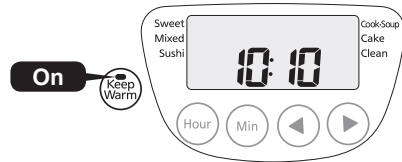

The elapsed Keep Warm time (up to 24 hours) is displayed in increments of 1 hour while [Hour] is held down. After 24 hours have elapsed, 24 blinks and h lights up on the display.

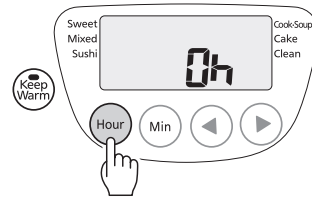


Turning off the Keep Warm function

Press [Cancel]. (The Keep Warm lamp turns off.)



Keeping a small amount of rice warm

Collect the rice at the center of the inner pot, keep the rice warm, and serve as soon as possible.

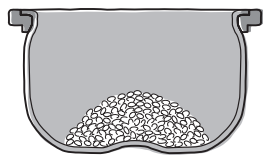


CAUTION

- Avoid the following, as they may result in unpleasant odors, dryness, discoloration, and spoiling of the rice or corrosion of the inner pot.
 - Keeping rice warm with the power plug disconnected
 - Canceling the Keep Warm function with cooked rice still in the inner pot
 - Using the Keep Warm function with cold rice
 - Adding cold rice to rice that is being kept warm
 - Leaving the spatula in the inner pot while the Keep Warm function is on
 - Leaving only a small amount of rice (1 cup or less with the 1.0 L type, 2 cups or less with the 1.8 L type) in the inner pot
 - Using the Keep Warm function for anything other than white rice (or rinse-free rice)
 - Keeping warm a circle of rice with a hole in the middle
 - Using the Keep Warm function for longer than 24 hours
- Be sure to wipe off any hot water that collects on the upper casing or that runs onto the outside of the rice cooker when you open the lid immediately after cooking or while the Keep Warm function is on. A large amount of condensation may collect depending on the menu item.
- Do not lift up the inner pot while keeping rice warm. Doing so cancels the Keep Warm function.
- Be sure to remove any cooked rice that adheres to the rim of the inner pot as well as to any gaskets. Failure to do so can result in dryness, discoloration, odors, or stickiness of the rice being cooked.
- Serve cooked rice as soon as possible in cold climates and high-temperature environments.

Reheating Cooked Rice

◇ You can turn rice being kept warm into piping hot rice by reheating it before eating.

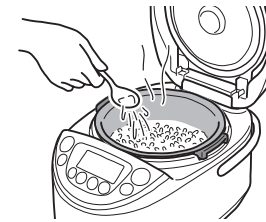

1 Stir and loosen the rice that is being kept warm, and add 1 to 2 tablespoons of water evenly over the rice.

◇ Adding water can prevent the rice from drying out and result in plumper rice.




2 Make sure that the Keep Warm lamp is on.

◇ Reheating is not available if the Keep Warm lamp is not on. If the lamp is not on, press [Keep Warm].



3 Press [Start].

◇ The remaining reheating time starts appearing on the display when 5 minutes remain. When reheating is finished, the rice cooker beeps 3 times (long beeps) and the Keep Warm lamp turns on.

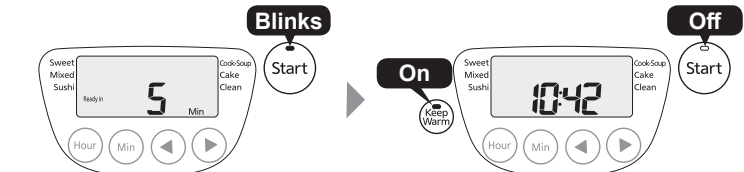

- ◇ To cancel reheating, press [Cancel].
- ◇ If the rice is too cold (under approximately 55°C), the rice cooker beeps twice (short beeps) and reheating is not available.

4 Stir and loosen the reheated rice well and even it out in the inner pot.



◇ After stirring and loosening the rice, close the lid firmly using both hands.


CAUTION

- Rice cannot be fully heated if more than half of the inner pot is full.
- Rice will end up dry if reheated under any of the following conditions.
 - The rice is still hot, for example, immediately after cooking.
 - There is a small amount of rice (1 cup or less with the 1.0 L type, 2 cups or less with the 1.8 L type).
 - The rice is reheated 3 times or more.
- Reheating is not available when using the Porridge, Brown Porridge, Cake, and Clean menu items.

Using the Timer Function

- ◇ You can preset the time that you want cooking to be actually finished.
- ◇ Select either Timer1 or Timer2 and set the desired completion time. The cooking will be finished at the preset time.
- ◇ The preset timer settings are stored in memory for both Timer1 and Timer2.
- ◇ It is useful to set the times that you use most often.

Example: If Timer1 is set to 13:30, cooking finishes at 13:30.

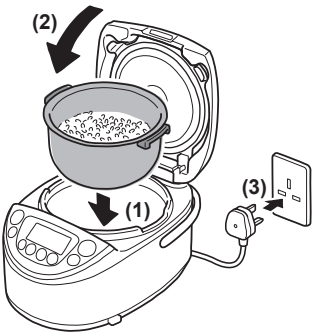



1 Place the inner pot into the rice cooker, close the lid, and connect the power plug to an outlet.

◇ Follow steps 1 to 4 in How to Cook Rice → P. 18, P. 19.



2 Check the current time.

- ◇ Setting the Current Time → P. 17
- ◇ If the Keep Warm lamp is on, press [Cancel] to turn it off. (This timer function is not available while the lamp is lit.)

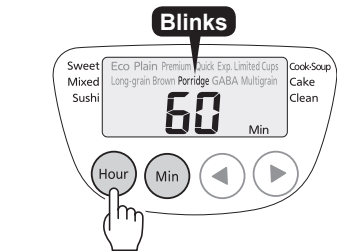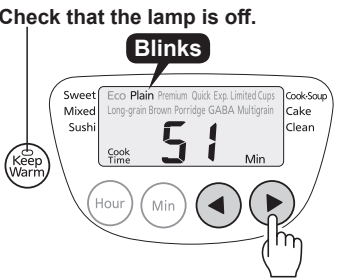


3 Press [◀] or [▶] to select a menu item.


- ◇ It is not necessary to select a menu item if the desired item is already selected.

4 When you select the Porridge menu item, use [Hour] or [Min] to set the desired cooking time.


- ◇ The default setting is 60 minutes. Adjust the time as desired.
- ◇ The time can be set between 40 and 90 minutes in increments of 5 minutes.
- ◇ Pressing [Hour] increases the time by 5 minutes while pressing [Min] decreases it by 5 minutes.

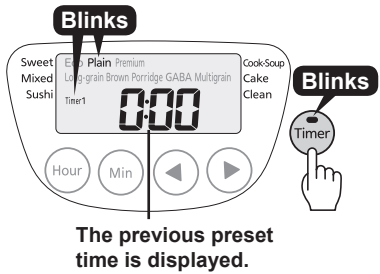

The previous preset time is displayed.

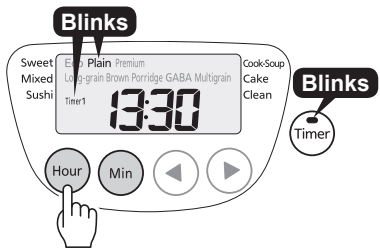

The current time is displayed in the 24-hour format.

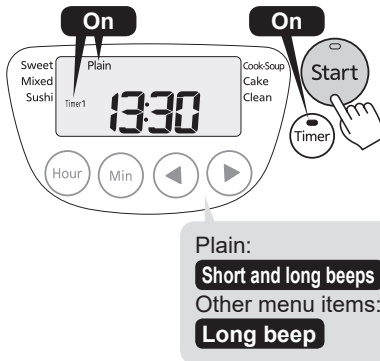

5 Press [Timer] to select either Timer1 or Timer2.

- ◇ The selected setting switches between Timer1, Timer2, and Soak Timer each time the key is pressed.
- ◇ The previously preset time is displayed. It is not necessary to set the timer again if the desired completion time is already displayed. (Go to step 7.)
- ◇ The above is not displayed for menu items for which the Timer function is not available.

6 Press [Hour] or [Min] to set the desired completion time.

- ◇ Press [Hour] to change the set time in increments of 1 hour. Press [Min] to change that time in increments of 10 minutes.
- ◇ Hold down the corresponding key to change the time more rapidly.
- ◇ When the preset time is less than the timer setting guideline → P. 8 to 14, cooking may not be finished at the preset time.

7 Press [Start] once.

- ◇ If you make a mistake or otherwise want to reset the timer, press [Cancel] and repeat the procedure.

⚠ CAUTION

- The Timer function is not available in the following cases.
 - When Quick, Exp. Limited Cups, Mixed, Sweet, Cook•Soup, Cake, or Clean is selected
 - When 0:00 is blinking on the display
 - When the inner pot is not set
- Dark brown crisp rice may be formed when the timer setting is extended. If this is an issue, rinse the rice well.
- Do not set the timer to more than 12 hours, as it may result in spoiled rice.



Sounds emitted by the rice cooker

- If you do not operate the rice cooker within approximately 30 seconds after pressing [Timer], the rice cooker beeps 2 times (short beeps).
- If [Timer] is pressed while the rice cooker is in a state where the Timer function is not available, the rice cooker beeps 2 times (short beeps).
- The volume can be adjusted if desired. → P. 48

Setting the Soak Timer Function

- ◇ You can set the time for rice to be soaked naturally.
- ◇ Select Soak Timer and set the soaking time. Cooking will start automatically when the set time has elapsed.
- ◇ The soaking time can be set in increments of 10 minutes from 10 to 60 minutes.

Example: If Soak Timer is set to 50 minutes, cooking starts after 50 minutes.

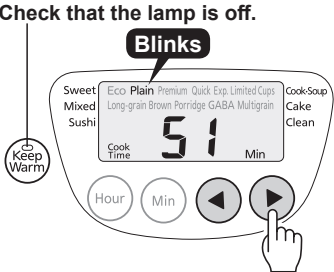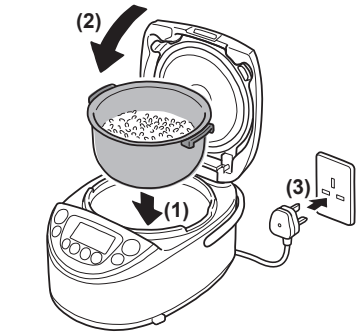

1 Place the inner pot into the rice cooker, close the lid, and connect the power plug to an outlet.

- ◇ Follow steps 1 to 4 in How to Cook Rice → P. 18, P. 19.
- ◇ If the Keep Warm lamp is on, press [Cancel] to turn it off. (This timer function is not available while the lamp is lit.)

2 Press [◀] or [▶] to select a menu item.


- ◇ It is not necessary to select a menu item if the desired item is already selected.

3 When you select the Porridge menu item, use [Hour] or [Min] to set the desired cooking time.


- ◇ The default setting is 60 minutes. Adjust the time as desired.
- ◇ The time can be set between 40 and 90 minutes in increments of 5 minutes.
- ◇ Pressing [Hour] increases the time by 5 minutes while pressing [Min] decreases it by 5 minutes.

4 Press [Timer], and then select Soak Timer.

- ◇ The selected setting switches between Timer1, Timer2, and Soak Timer each time the key is pressed.
- ◇ The above is not displayed for menu items for which the Soak Timer function is not available.

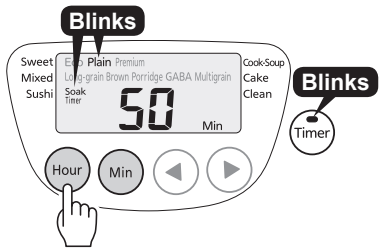

The current time is displayed in the 24-hour format.

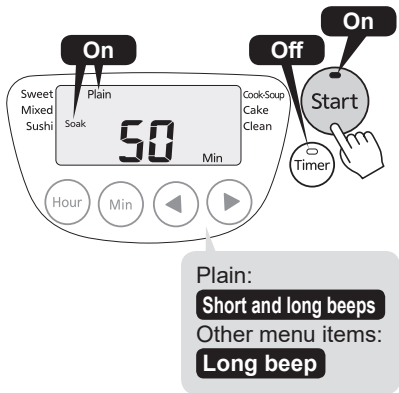

5 Press [Hour] or [Min] to set the desired soaking time.

- ◇ The time can be set in increments of 10 minutes from 10 to 60 minutes.
- ◇ Pressing [Hour] increases the time by 10 minutes while pressing [Min] decreases it by 10 minutes.
- ◇ Setting a long soaking time provides the cooked food with a soft texture.

6 Press [Start] once.

- ◇ If you make a mistake or otherwise want to reset the timer, press [Cancel] and repeat the procedure.

⚠ CAUTION

- The Soak Timer function is not available in the following cases.
 - When Quick, Exp. Limited Cups, Mixed, Sweet, Cook•Soup, Cake, or Clean is selected
 - When 0:00 is blinking on the display
 - When the inner pot is not set

Sounds emitted by the rice cooker

- If you do not operate the rice cooker within approximately 30 seconds after pressing [Timer], the rice cooker beeps 2 times (short beeps).
- If [Timer] is pressed while the rice cooker is in a state where the Soak Timer function is not available, the rice cooker beeps 2 times (short beeps).
- The volume can be adjusted if desired. → P. 48

How to Make Other Foods (Cook•Soup)

- ◇ The food is boiled at a temperature close to boiling, and then the temperature is lowered, and the food is simmered for a long time. Simmering then continues at an even lower temperature. Simmering at gradually lowering temperatures allows more of the flavor to soak into the food and eliminates concerns about food boiling down even when it is heated for a long period of time. For recipes, see the Menu Guide.

Examples of cooking that is not allowed




- Heating ingredients or seasoning in a plastic bag, etc.
- Using parchment paper, aluminum foil, or plastic wrap
- Using a lot of oil

1 Prepare the ingredients and put them in the inner pot.

- ◇ Use the Plain scale on the inside of the inner pot as a reference.

	1.0 L type	1.8 L type
Maximum	5.5 or below	8 or below
Minimum	2 or above	3 or above

2 Place the inner pot into the rice cooker, close the lid, and connect the power plug to an outlet.

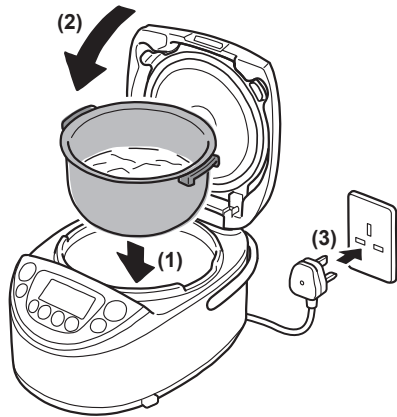


CAUTION

- Be careful not to use more than the maximum allowed amount, as that can prevent proper boiling or cause the contents to boil over. Also be careful not to use less than the minimum required amount, as that can also cause the contents to boil over.
- Stir well before cooking to prevent seasonings from settling at the bottom of the inner pot.
- Using hot dashi (Japanese soup stock) or other stock may result in improper cooking, so cool it before cooking.
- Use only the supplied spatula or a wooden spatula. Do not use hard or sharp utensils such as metal ladles, spoons, or whisks.
- Caution should be exercised when making dishes other than those described in the Menu Guide, as they may boil over or burn.
- Since milk and soymilk can boil over particularly easily, add them after heating is finished and heat them no more than 5 minutes at a time.

3 Press [◀] or [▶] to select Cook•Soup.

- ◇ The default setting is 60 minutes.

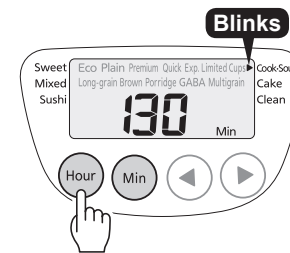

The remaining time appears.



The elapsed Keep Warm time is displayed as 0 to 6 hours (0 to 6h).

4 Press [Hour] or [Min] to set the desired cooking time.

- ◇ The time can be set between 5 and 180 minutes in increments of 5 minutes.
- ◇ Pressing [Hour] increases the time by 5 minutes while pressing [Min] decreases it by 5 minutes.
- ◇ Hold down the corresponding key to change the time more rapidly.

5 Press [Start].

- ◇ Cooking starts.

CAUTION

- Do not open the lid during cooking.

6 When cooking is finished...

- ◇ The rice cooker beeps 8 times (long beeps) and automatically switches to the Keep Warm setting, the Keep Warm lamp turns on, and 0h is displayed.
- ◇ Steps for additional heating (for insufficient cooking or cooking using roux or starch)
 - (1) Check that the Keep Warm lamp is on.
 - (2) Press [Hour] to set the additional cooking time. (Up to 30 minutes)
 - (3) Press [Start]. (Additional cooking can be repeated up to 3 times.)
- ◇ If you want food that is being kept warm to be piping hot before serving, press [Start] when the Keep Warm lamp is on in order to reheat that food.
- ◇ When cooking is finished, the Keep Warm function is automatically activated and the elapsed Keep Warm time is displayed in increments of 1 hour up to 6 hours after that. After 6 hours have elapsed, 6 blinks on the display. Serve it as soon as possible.
- ◇ After cooking, press [Cancel] to remove odors. (How to Perform Cleaning → P. 39)

CAUTION

- Do not use the Keep Warm function continuously for more than 6 hours as some foods may lose their taste.
- If a longer cooking time is required, do not press [Cancel] before extending that time. Doing so causes the Keep Warm lamp to turn off, preventing additional cooking. If you have mistakenly pressed the key, perform the following procedure.
 - (1) Remove the inner pot and set it on a wet cloth.
 - (2) Remove the inner lid, leave the rice cooker lid open, and cool down the rice cooker and the inner pot for approximately 10 minutes.
 - (3) Place the inner pot back into the rice cooker.
 - (4) Repeat the procedure from step 2 on P. 28.

How to Make Cakes




- 1 Prepare the ingredients, pour the batter into the inner pot, and remove any air from the batter.**


◇ Drop the inner pot onto a cloth about 3 times from a height of approximately 5 cm to remove the air from the batter.

CAUTION

- Caution should be exercised when making cakes other than those described in the Menu Guide, as they may boil over or may not be cooked properly.
- Remove any air from the batter by lifting the inner pot about an inch from the counter and dropping it a couple of times. Be sure to place a cloth on the counter before doing so to prevent deformation or damage to the inner pot.

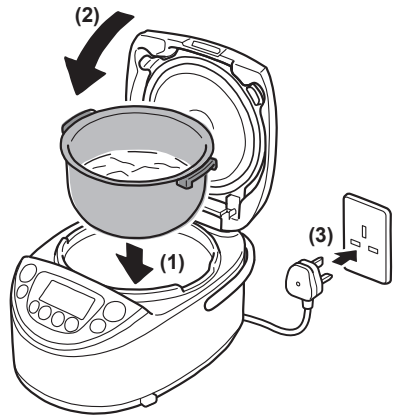

- 2 Place the inner pot into the rice cooker, close the lid, and connect the power plug to an outlet.**

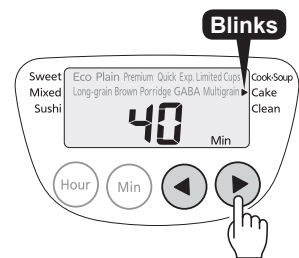

- 3 Press [◀] or [▶] to select Cake.**

◇ The default setting is 40 minutes.



- 4 Press [Hour] or [Min] to set the desired heating time.**

- ◇ The time can be set between 5 and 80 minutes in increments of 5 minutes.
- ◇ Pressing [Hour] increases the time by 5 minutes while pressing [Min] decreases it by 5 minutes.
- ◇ Hold down the corresponding key to change the time more rapidly.




- 5 Press [Start].**

◇ Heating starts.

CAUTION

- Do not open the lid during cooking.

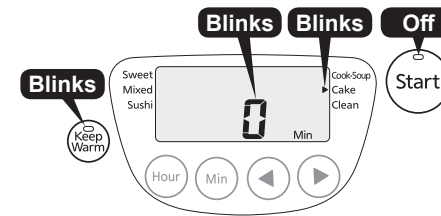

- 6 When cooking is finished, open the lid and insert a toothpick into the center of the cake.**

- ◇ When cooking is finished, the rice cooker beeps 8 times (long beeps), and the Keep Warm lamp and 0 blink.
- ◇ The cake is ready if the toothpick comes out clean.
- ◇ If batter sticks to the toothpick, press [Hour] to set the additional heating time with the Keep Warm lamp blinking and press [Start]. (The time can be extended up to 15 minutes, a maximum of 3 times.)

CAUTION


- Do not press [Cancel] before extending additional heating. Doing so causes the Keep Warm lamp to turn off, preventing additional baking. If you have mistakenly pressed the key, perform the following procedure for heating.
- (1) Remove the inner pot and set it on a wet cloth.
- (2) Leave the rice cooker lid open and cool down the rice cooker and the inner pot for approximately 10 minutes.
- (3) Place the inner pot back into the rice cooker.
- (4) Repeat the procedure from step ③ on P. 30.

- 7 Remove the inner pot using oven mitts and remove the cake to cool it.**

◇ After making a cake, press [Cancel] to remove odors. (How to Perform Cleaning → P. 39)

CAUTION

- Do not handle the inner pot with bare hands. Be sure to use oven mitts to pick up the inner pot. Otherwise, burns may be caused by hot surfaces.
- Remove the cake as soon as the cooking is finished. A cake left in the rice cooker can become sticky as condensation on the inner lid drips onto it.

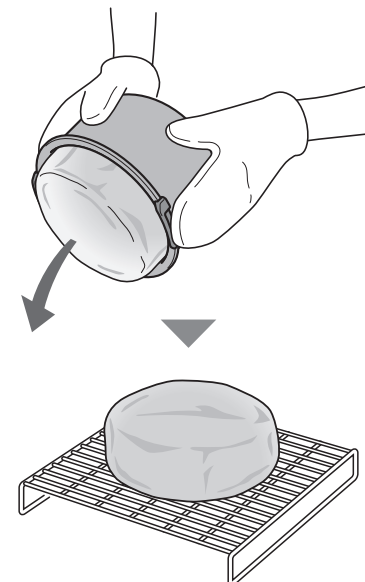

Menu Guide

- This Menu Guide uses a 0.18 L measuring cup (included).
- A tablespoon is 15 mL. • A teaspoon is 5 mL.
- Adding too much seasoning such as soy sauce and sweet cooking rice wine may prevent food from being cooked properly.
- * It is not necessary to rinse rinse-free rice. * The calories in the recipes are only intended as a guide.

Mixed
menu item

Gomoku Rice (Japanese Mixed Rice)

Ingredients (for 6 servings)

- Rice...3 cups
- Kombu (kelp)...3 cm square
- Seasoning mixture [soy sauce...2 tbsp, sake...1 tbsp, sweet cooking rice wine...1/2 tbsp, salt...1/2 tsp]
- Chicken thigh...60 g
- Abura-age (thin deep-fried tofu)...1/2
- Carrot...40 g
- Gobo (burdock root)...35 g
- Konnyaku...1/8 block
- Dried shiitake mushrooms...2
- Snow peas...8
- Sake, soy sauce, salt, and vinegar...To taste

Directions

- (1) Cut the chicken thigh into 1 cm cubes, and then season with a dash of sake and soy sauce.
- (2) Rinse off excess oil from the abura-age. Cut it lengthwise into halves and then into thin strips.
- (3) Peel the carrot and cut it into 3 cm-long thick strips.
- (4) Shave the skin off the burdock root using the back of a knife. Then, shred it into thin strips and soak it in vinegar water.
- (5) Boil the konnyaku in water for 4 to 5 minutes. Then, rinse it with fresh water and cut it in the same way as the carrot.
- (6) Soak the dried shiitake mushrooms in water to rehydrate. Remove and discard the stems, and then slice the caps into thin strips.
- (7) Remove the strings from the snow peas and boil them in salted water. Place the peas in cold water so they retain their color, and then cut them into thin pieces.
- (8) Rinse rice in the inner pot, add the seasoning mixture, and add water up to level 3 of the Premium scale. After mixing the rice and water well, place the kelp and other ingredients on top except the snow peas. Cook using the **Mixed** menu item.
- (9) When the cooking in (8) is finished, remove the kelp and add the snow peas. Mix all the ingredients well and arrange on a serving plate.

- CAUTION**
- Adjust the amount of water you add depending on the ingredients.
 - The amount of ingredients to add at the beginning should be no more than approximately 45% of the weight of rice. Cooking may not be performed properly if the quantity of added ingredients is too great. (The total amount of ingredients should be no more than approximately 70 g per cup of rice.)

Sweet
menu item

Chinese Style Glutinous Rice

Ingredients (for 6 servings)

- Glutinous rice...3 cups
- Pork backribs...110 g
- Dried shiitake mushrooms...2
- Dried shrimp...10 g
- Bamboo shoot...20 g
- Carrot...10 g
- Pine nuts...1 tsp
- Peeled sweet roasted chestnuts...6
- Ginger, thin strips...10 g
- Chicken soup...300 mL
- Pre-seasoning for pork [sake...2 tsp, soy sauce...2 tsp, ginger juice...1 tsp]
- Seasoning mixture [sake...3 tbsp, soy source...3 tbsp, sugar...1 tsp]
- Green onions, chopped...3 stalks
- Lard or vegetable oil...2 tbsp

Directions

- (1) Soak the dried shiitake mushrooms and shrimp in water to rehydrate and soften them. Pre-boil the bamboo shoot. (Keep the water used for soaking the dried shiitake mushrooms and shrimp.)
- (2) Cut the pork into 1 cm cubes, and then season it. Cut the carrot, shiitake, and bamboo shoot into 1 cm cubes.
- (3) Heat the lard in a pan. Stir-fry the ingredients from step (2) and let them cool.
- (4) Rinse the glutinous rice in the inner pot. Add the water used for soaking the dried shiitake mushrooms and shrimp from step (1) and the seasoning mixture. Add the chicken soup up to level 3 of the Sweet scale. Thoroughly mix everything together.
- (5) Add the ingredients from step (3), dried shrimp, pine nuts, and ginger to (4). Cook it using the **Sweet** menu item.
- (6) When cooking is finished, place the sweet roasted chestnuts on the rice. Toss the rice as though you were cutting it with a spatula. Place on a serving plate and sprinkle it with the green onions.



322 kcal per serving



426 kcal per serving

Sushi
menu item

Hand-Rolled Sushi

Ingredients (for 5 servings)

- Sushi rice [rice...3 cups, kombu (kelp)...3 cm square]
- Blended vinegar [vinegar...4 1/2 tbsp, sugar...1 1/2 tbsp, salt...1 1/2 tsp]
- Roasted seaweed...As desired
- Ingredients (your favorite ingredients)
[tuna, yellowtail, salmon, squid, shrimp, salmon roe, conger eel, cucumber, white radish sprouts, green asparagus, carrot, rolled egg, pickled daikon radish, shiso (Japanese basil), etc. ...As desired]
- Soy sauce...As desired • Wasabi...As desired

Directions

- (1) Rinse rice in the inner pot, add water to level 3 of the Sushi scale, and place the kelp on top. Cook it using the **Sushi** menu item.
- (2) Mix vinegar, sugar, and salt in a bowl to make blended vinegar.
- (3) Transfer the cooked rice to a sushi bowl and pour the blended vinegar from step (2) over the rice. Toss the rice as though you were cutting it with a spatula, while cooling the rice using a fan or the like.
- (4) Cut the ingredients into sticks.
- (5) Place some rice from step (3) onto roasted seaweed, top with your desired ingredients, and then roll it.

- CAUTION**
- Do not mix the rice and vinegar in the inner pot.

Tips

- Clean the kelp using a damp, tightly wrung out dishcloth.
- Lightly wet the sushi bowl with vinegar water.



341 kcal per serving
(Calories of sushi rice only)

Multigrain
menu item

Multigrain Rice Cooked with Dried Fish and Hijiki

Ingredients (for 6 servings)

- Rice...3 cups
- Mixed grains...4 1/2 tbsp (40 g)
- Dried fish (barracuda, tilefish, etc.)...1
- Green onions, chopped...2 stalks
- Cooked mehijiki (hijiki buds)
[mehijiki (dried)...12 g, abura-age (thin deep-fried tofu)...1/2, carrot...30 g, sesame oil...1 tbsp]
- Stock
[sugar...1 tbsp, sweet cooking rice wine...1 tbsp, sake...1 tbsp, soy sauce...2 tbsp, dashi (Japanese soup stock)...200 mL]

Directions

- (1) Rinse rice in the inner pot, add water to level 3 of the Plain scale, and place mixed grains on top. Add 3 tablespoons of water for the added mixed grains and cook it using the **Multigrain** menu item.
- (2) Grill the dried fish, debone, and break it into flakes.
- (3) Soak the mehijiki in water to rehydrate and then drain. Rinse off excess oil from the abura-age and cut it into thin strips. Cut the carrot into thin strips as well.
- (4) Add the sesame oil into a small pot. Stir-fry the ingredients from step (3), add the stock and simmer.
- (5) Drain the ingredients from step (4) and mix them along with the fish from step (2) into the cooked rice as though you were cutting it with a spatula.
- (6) Place on a serving plate and sprinkle with the green onions.



362 kcal per serving

Menu Guide

Porridge menu item

Porridge Topped with Thick Seafood Sauce



261 kcal per serving

Ingredients (for 4 servings)

- Rice...1 cup
- Squid...60 g
- Japanese scallion...1/2 stalks
- Salad oil...As desired
- Shrimp...8
- Carrot...20 g
- Chinese soup stock...400 mL
- Pre-seasoning for seafood [sake, salt, and pepper...to taste; beaten egg and starch...1/2 tsp]
- Seasonings for sauce [sake...2 tbsp, sugar...1 tsp, pepper...to taste, oyster sauce...1 tsp, salt...2/3 tsp]
- Salt...1/3 tsp
- Scallops...4
- White jelly ears...5 g
- Starch and water...3 tbsp total
- Pak choi (Chinese white cabbage)...1
- Ginger...10 g
- Sesame oil...2 tsp

Directions

- (1) Rinse rice in the inner pot, add water with salt to level 1 of the Porridge • Firm scale, mix well, and cook it using the **Porridge** menu item with a heating time of 60 minutes.
- (2) Score the squid and cut it into thin bite-sized pieces. Peel and devein the shrimp and cut the scallops in half horizontally.
- (3) Season the ingredients from step (2), leave them for approximately 10 minutes, and coat them with beaten egg and starch.
- (4) Cut pak choi into bite-sized pieces, cut Japanese scallion into chunks, and slice carrot and ginger.
- (5) Soak white jelly ears in lukewarm water to rehydrate and remove the hard stems.
- (6) Heat salad oil in a pan, stir-fry the ingredients from steps (3), (4), and (5), and add the seasonings for sauce and Chinese soup stock.
- (7) After it boils, simmer it lightly, add starch and water to thicken the sauce, and top with sesame oil.
- (8) Place the cooked porridge from step (1) in a serving bowl and pour the thick sauce from step (7) over the top.

⚠ CAUTION

• Seafood turns tough if heated too much. Finish cooking the sauce together with the seafood quickly.

Brown menu item

Brown Rice Cooked with Salmon, Miso, and Butter



422 kcal per serving

Ingredients (for 6 servings)

- Brown rice...3 cups
- Garlic, minced...1 clove
- Ginger, minced...1 clove
- Butter...25 g
- Seasoning mixture [sake...1 1/2 tbsp, sugar...1/2 tbsp, sweet cooking rice wine...1 1/2 tbsp, soy sauce...1/2 tbsp, miso paste...30 g]
- Green onions, chopped...3 stalks
- Asparagus...3
- Maitake mushrooms...100 g
- Onion...1/2
- Carrot...50 g
- Salad oil...As desired
- Lightly salted salmon...3 pieces

Directions

- (1) Rinse brown rice in the inner pot, add water to level 3 of the Brown scale, and cook it using the **Brown** menu item.
- (2) Heat salad oil in a pan. Cook and flake the salmon.
- (3) Separate the maitake mushrooms and cut them into 2 cm wide pieces. Chop the onion and carrot.
- (4) Peel the skin from the bottom of the asparagus. Remove the triangular leaves and chop the asparagus into 1 cm pieces.
- (5) Melt butter in a pan, then add and stir the garlic and ginger. Add the ingredients from step (3) to the pan. Cook them until they are soft. Add and cook the asparagus from step (4).
- (6) Add the seasoning mixture to the ingredients from step (5) and cook until the liquid evaporates. Chop the green onions and add the salmon from step (2).
- (7) When cooking is finished, mix the cooked rice with the ingredients from step (6) and place in a serving bowl.

Tips

• Season with shichimi chili pepper as desired.

Cook•Soup menu item

Vegetable and Chicken Pot-Au-Feu



156 kcal per serving

Ingredients (1.0 L type: For 4 servings, 1.8 L type: For 6 servings)

	1.0 L type	1.8 L type
• Chicken wings	8	12
• Carrot	1	1 1/2
• Celery	1	1 1/2
• Onion	1	1 1/2
• Potato	2	3
• Water	650 mL	1,000 mL
• Bouillon (powder)	1 1/2 tbsp	2 1/3 tbsp
• Salt and pepper	To taste	To taste

Directions

- (1) Cut off the ends of the chicken wings.
- (2) Cut the carrot into quarters, the celery into 5 cm pieces (after removing the strings), the onion into eighths, and the potato into quarters.
- (3) Put all ingredients from steps (1) and (2) in the inner pot, add water, bouillon powder, salt, and pepper, and mix well. Select **Cook•Soup**, set the heating time to 60 minutes, and press [Start].
- (4) When cooking is finished, place in a serving bowl.

Cake menu item

Sponge Cake



309 kcal per 1/8 piece (1.0 L type) (Excluding fruit)

Ingredients (for 1 cake)

	1.0 L type	1.8 L type
• Eggs (medium)	4	5
• Sugar (superfine sugar)	120 g	150 g
• Cake flour	120 g	150 g
• Unsalted butter	40 g	50 g
• Unsalted butter (to be spread in the inner pot)	As desired	As desired
For decoration		
• Heavy cream (dairy)	200 mL	250 mL
• Granulated sugar	24 g	30 g
• Strawberries, blueberries	As desired	As desired

Directions

- (1) Bring the eggs to room temperature and sift the cake flour. Melt the unsalted butter.
 - (2) Place the eggs and sugar in a bowl and lightly mix them.
 - (3) Warm the bowl from step (2) in hot water at 40°C and mix the ingredients until the sugar dissolves. Remove the bowl from the hot water.
 - (4) Beat (3) at a high speed using a hand mixer. Beat (3) until it becomes whitish and thick and falls slowly from the whisk. Whip (3) for 1 minute at a low speed to make it fluffy.
 - (5) Add the cake flour from step (1) to (4) and fold in lightly until the flour is just combined using a rubber spatula. Fold in the unsalted butter from step (1).
 - (6) Pour the batter from step (5) into the lightly buttered inner pot. Remove the air by dropping the inner pot an inch or so onto a soft cloth, and then select the **Cake** menu item and bake for 35 minutes (40 minutes for the 1.8 L type).
 - (7) When baking is finished, take the cake out of the inner pot and cool it down. Decorate the cake with sweetened whipped cream, strawberries, and blueberries.
- * If the cake is not cooked well enough, press [Hour] with the Keep Warm lamp blinking, set the additional bake time, and then press [Start].


⚠ CAUTION

• Remove odors after making a cake. (How to Perform Cleaning → P. 39)


How to Clean

- ◇ Any repair services not described in this manual should be performed by an authorized service representative.
- ◇ Be sure to disconnect the power plug and allow the rice cooker, inner pot, and inner lid to cool down before cleaning.
- ◇ To maintain cleanliness, always clean the rice cooker on the same day it is used.
- ◇ The rice cooker should also be cleaned on the day that it is used in order to remove any odors that remain from cooking or cake baking. → P. 39

Items and detergent to be prepared

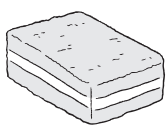

Soft sponge

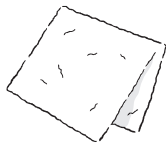

Soft cloth



 
Mild detergent for household use (for dishes and kitchen utensils)

Do not use

☐ Nylon scrubbing sponges, metal spatulas

☐ The abrasive side of a sponge

Do not use the abrasive side of a sponge. Doing so may damage the fluorocarbon resin coating of the inner pot and the coating of the inner lid.



Abrasiveside

☐ Detergent other than mild detergents

☐ Thinner, cleanser, bleach

☐ Chemically treated cloths


☐ Hot water

☐ Dishwasher/dryer, dryer

☐ Melamine sponge

Parts to wash after every use

1. Wash these parts well using a sponge with detergent diluted with cold or lukewarm water, and rinse them with water.
2. Wipe off the water using a dry cloth and completely dry all parts.

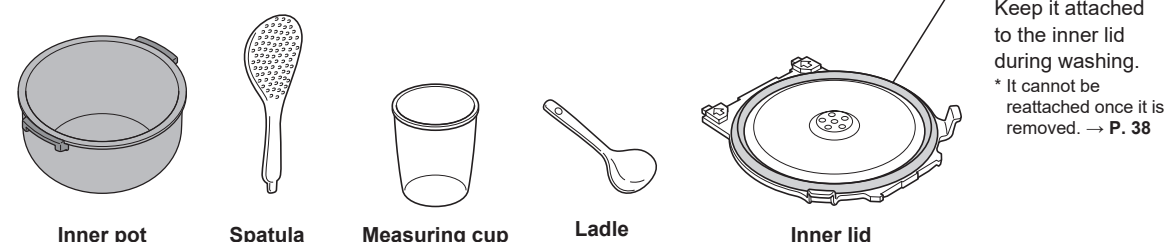


⚠ CAUTION

- Always keep the inner pot and lid clean to prevent corrosion and odors.
- Rinse the parts thoroughly, since detergent remaining on them may result in deterioration and discoloration of materials such as plastic. (Only washable parts)
- Be sure to clean the inner lid after cooking rice with mixed grains. Otherwise they may be clogged, causing problems like the lid not opening, contents boiling over, or rice not cooking properly.
- After cleaning the inner lid, wipe it off using a dry cloth immediately. Otherwise, water drops may leave marks on this part.
- Be sure to remove any cooked rice that has adhered to the inner lid. Any rice on the inner lid can prevent the lid from closing, allow steam to leak out during cooking, or enable the lid to open and the contents to spray out, resulting in burns or other injury.
- Do not wash dishes, etc. inside the inner pot. Also, do not place the inner pot upside down on top of dishes, etc., to dry. Doing so may damage the fluorocarbon resin coating or cause it to peel.



Parts to wash when dirty

- Wipe the rice cooker (outside and inside) using a firmly wrung out cloth.
- Wipe the power cord and plug using a dry cloth.

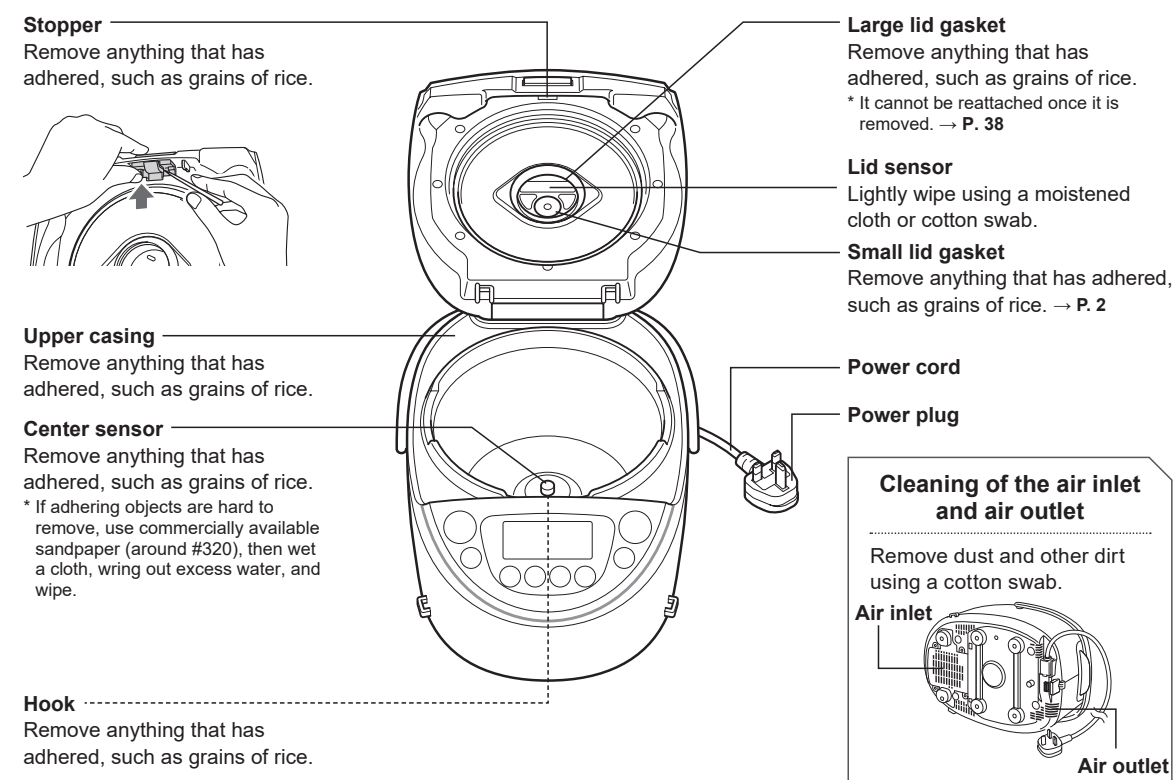


⚠ CAUTION

- Do not allow water to get inside the rice cooker unit. Doing so may allow electric shock, electric leakage, fire, and/or deformation or malfunction of the rice cooker to occur.
- Do not use the rice cooker if dust is adhered to the air inlet or outlet. Doing so will cause the temperature to increase inside the rice cooker, resulting in malfunction or fire.

How to Remove and Attach Each Component Part


Removing the inner lid

Grasp the holding tab of the inner lid, and then pull it toward you to remove it.

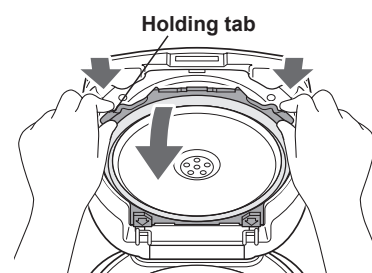


Attaching the inner lid

1 Set the left and right tabs of the inner lid in the slots securely.

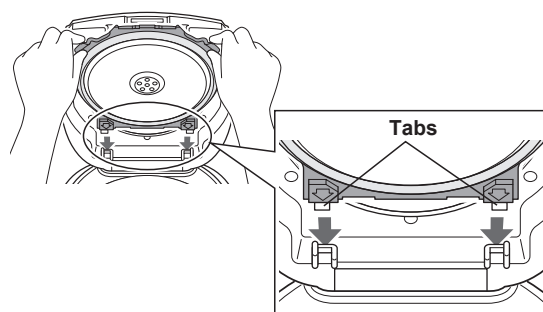


2 Push in until it clicks.

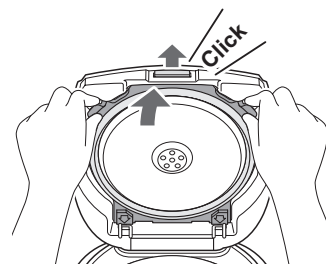


Attaching the small lid gasket

If the small lid gasket has come off, securely fit it in its slot.

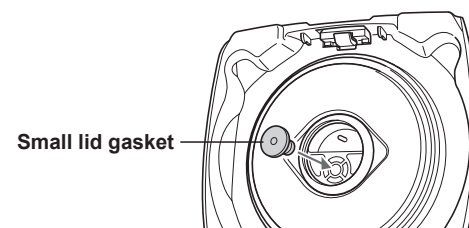


⚠ CAUTION

- Do not pull on the large lid gasket and inner lid gasket. They cannot be reattached once removed.
- When the large lid gasket or inner lid gasket comes off, contact the place of purchase.
- Do not remove the large lid gasket or inner lid gasket. Do not press or pull them forcibly. Doing so may cause steam leaks or sticking of the lid, resulting in malfunction.

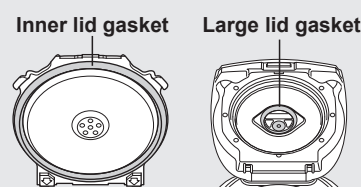

How to Perform Cleaning


The following procedure should be performed each time after cooking or cake baking, or if odors become noticeable.

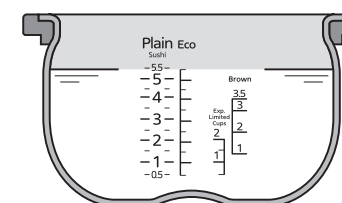

1 Pour water in the inner pot and set it in the rice cooker.

- For the 1.0 L type, pour water to level 5.5 of the Plain scale. For the 1.8 L type, pour water to level 10 of the Plain scale.
- Place the inner pot in the rice cooker and connect the power plug to an outlet. → P. 19
- If odors become noticeable, use citric acid (approximately 20 g) added to the water for more effective deodorizing.


2 Press [◀] or [▶] to select Clean.

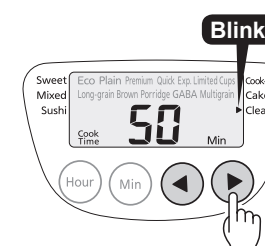

3 Press [Start]. (Cleaning starts.)



4 When cleaning is finished, the rice cooker beeps 8 times (long beeps), and ▶ and the Keep Warm lamp blink.

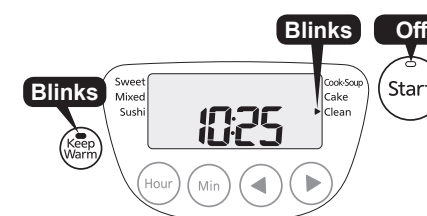

- Press [Cancel] and disconnect the power plug from the outlet.
- When the rice cooker has cooled down, drain the hot water remaining in the inner pot and clean the parts. → P. 36

⚠ CAUTION

- Be careful with the inner pot and rice cooker as they are hot after cleaning.
- When cleaning continuously, be sure to let the rice cooker cool down. Cleaning may not finish properly as the rice cooker becomes hot.
- It may be impossible to remove some odors completely. In this case, contact the place of purchase.

If Rice Does Not Cook Properly

Check the following points if you experience problems with cooked rice.

Check this first!

- Are there any grains of cooked rice or water drops adhering to the center sensor or lid sensor?

- Is the lid closed securely?
- Are there any grains of cooked rice adhering to the inner lid or gasket?
- Is the inner pot deformed?
- Are there any water drops remaining on the outside of the inner pot?
- Are the rice cooker and its parts sufficiently clean?
- Has a power outage occurred during cooking?
- Was the correct menu item selected?

Problems with rice

Symptom	Rice	Water	Cooking
Steam leaks	• The amount of rice, ingredients, or mixed grains was not correct. • More than the maximum allowed amount was cooked. → P. 8 to 14, P. 49	• The amount of water was not correct. → P. 8 to 14	
Boils over	• The amount of rice, ingredients, or mixed grains was not correct. • There were a lot of cracked grains of rice. • More than the maximum allowed amount was cooked. → P. 8 to 14, P. 49	• The amount of water was not correct. → P. 8 to 14 • The rice was not rinsed sufficiently (except for rinse-free rice). • The rice was left in a strainer after rinsing.	• The rice was mixed with other ingredients or grains. • Seasoning was not stirred well.
It takes a long time before cooking is finished.	• The amount of rice, ingredients, or mixed grains was not correct. • More than the maximum allowed amount was cooked. → P. 8 to 14, P. 49	• The amount of water was not correct. → P. 8 to 14	• Cooking was repeated continuously. → P. 20 • Cooking was performed immediately after the Keep Warm function had been turned off. → P. 20
There is a thin film covering the rice.	• A thin, tissue-like film is formed by melted and dried starch. This is not harmful to your health.		

Problems with rice

Symptom	Rice	Water	Cooking
Rice sticks to the inner pot.	• Soft rice and sticky rice can easily stick to the pot.		
Smells like rice bran, etc.		• The rice was not rinsed sufficiently (except for rinse-free rice).	• The Timer function was set for more than 12 hours.
Too soft	• The amount of rice, ingredients, or mixed grains was not correct. • There were a lot of cracked grains of rice.	• The amount of water was not correct. → P. 8 to 14 • The rice was cooked with alkaline ionized water (pH 9 or higher). • Hot water (35°C or higher) was used to rinse the rice or adjust the water level. • The rice was left soaking in the water too long after rinsing. • The rice was left in a strainer after rinsing.	• The Timer function was used. • The rice was mixed with other ingredients or grains. • Seasoning was not stirred well. • The cooked rice was not stirred and loosened well. • Cooking was repeated continuously. → P. 20 • Cooking was performed immediately after the Keep Warm function had been turned off. → P. 20
Too hard	• The amount of rice, ingredients, or mixed grains was not correct. • More than the maximum allowed amount was cooked. → P. 8 to 14, P. 49	• The amount of water was not correct. → P. 8 to 14 • The rice was cooked with hard water, such as mineral water. • Hot water (35°C or higher) was used to rinse the rice or adjust the water level.	• The rice was mixed with other ingredients or grains. • Seasoning was not stirred well. • The cooked rice was not stirred and loosened well. • Cooking was repeated continuously. → P. 20 • Cooking was performed immediately after the Keep Warm function had been turned off. → P. 20
Dark brown crisp or burned rice	• The amount of rice, ingredients, or mixed grains was not correct. • More than the maximum allowed amount was cooked. → P. 8 to 14, P. 49 • There were a lot of cracked grains of rice.	• The amount of water was not correct. → P. 8 to 14 • The rice was cooked with alkaline ionized water (pH 9 or higher). • The rice was cooked with hard water, such as mineral water. • Hot water (35°C or higher) was used to rinse the rice or adjust the water level. • The rice was not rinsed sufficiently (except for rinse-free rice). • The rice was left soaking in the water too long after rinsing. • The rice was left in a strainer after rinsing.	• The Timer function was used. • The rice was mixed with other ingredients or grains. • Seasoning was not stirred well.
Not cooked completely	• The amount of rice, ingredients, or mixed grains was not correct. • More than the maximum allowed amount was cooked. → P. 8 to 14, P. 49 • There were a lot of cracked grains of rice.	• The amount of water was not correct. → P. 8 to 14 • Hot water (35°C or higher) was used to rinse the rice or adjust the water level.	• The rice was mixed with other ingredients or grains. • Seasoning was not stirred well. • Cooking was repeated continuously. → P. 20 • Cooking was performed immediately after the Keep Warm function had been turned off. → P. 20 • The rice was left after cooking without turning off the Keep Warm function but pressing [Start].

Problems with rice


Symptom	 Rice	 Water	 Cooking
Rice being kept warm smells.	The amount of rice, ingredients, or mixed grains was not correct.	The rice was not rinsed sufficiently (except for rinse-free rice).	- Anything other than white rice or rinse-free rice was kept warm. - Cold rice was added. - A spatula was left in the inner pot. - A small amount of rice (1 cup or less with the 1.0 L type, 2 cups or less with the 1.8 L type) was kept warm or reheated. → P. 22, P. 23 - The Keep Warm function has been used continuously for more than 24 hours. - The rice was left in the rice cooker with the Keep Warm function turned off. - The Timer function was set for more than 12 hours. - Odors were not removed after cooking or cake baking.
Rice being kept warm discolors.	The amount of rice, ingredients, or mixed grains was not correct.	The rice was not rinsed sufficiently (except for rinse-free rice).	- The cooked rice was not stirred and loosened well. - Anything other than white rice or rinse-free rice was kept warm. - The rice was concentrated along the wall of the inner pot (less rice in the middle of the pot). - Cold rice was added. - A spatula was left in the inner pot. - A small amount of rice (1 cup or less with the 1.0 L type, 2 cups or less with the 1.8 L type) was kept warm or reheated. → P. 22, P. 23 - The Keep Warm function has been used continuously for more than 24 hours. - The rice was reheated 3 or more times.
Rice being kept warm is dry.	The amount of rice, ingredients, or mixed grains was not correct.	The amount of water was not correct. → P. 8 to 14	- The cooked rice was not stirred and loosened well. - Anything other than white rice or rinse-free rice was kept warm. - The rice was concentrated along the wall of the inner pot (less rice in the middle of the pot). - Cold rice was added. - A spatula was left in the inner pot. - A small amount of rice (1 cup or less with the 1.0 L type, 2 cups or less with the 1.8 L type) was kept warm or reheated. → P. 22, P. 23 - The Keep Warm function has been used continuously for more than 24 hours. - The rice was reheated 3 or more times.
Rice being kept warm is sticky.	The amount of rice, ingredients, or mixed grains was not correct.	The amount of water was not correct. → P. 8 to 14	- The cooked rice was not stirred and loosened well. - Anything other than white rice or rinse-free rice was kept warm. - The rice was concentrated along the wall of the inner pot (less rice in the middle of the pot). - Cold rice was added. - A spatula was left in the inner pot. - A small amount of rice (1 cup or less with the 1.0 L type, 2 cups or less with the 1.8 L type) was kept warm or reheated. → P. 22, P. 23 - The Keep Warm function has been used continuously for more than 24 hours. - The rice was left in the rice cooker with the Keep Warm function turned off. - The Timer function was set for more than 12 hours.
Reheated rice is dry.	The amount of rice, ingredients, or mixed grains was not correct.	The amount of water was not correct. → P. 8 to 14	- The rice was reheated 3 or more times. - A small amount of rice (1 cup or less with the 1.0 L type, 2 cups or less with the 1.8 L type) was kept warm or reheated. → P. 22, P. 23 - Rice that was just cooked and still hot was reheated.

If Other Food or Cakes Are Not Made Properly

Check the following points if you experience a problem with cooked dishes or cakes.

Check this first!

- Was a recipe other than those described in the Menu Guide used?
- Are there any grains of cooked rice or water drops adhering to the center sensor or lid sensor?
- Is the inner pot deformed?
- Are there any water drops remaining on the outside of the inner pot?

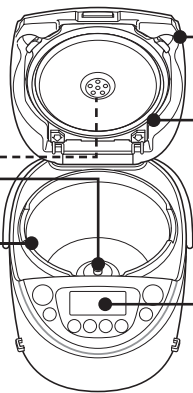

- Is the lid closed securely?
- Are there any grains of cooked rice adhering to the inner lid or gasket?
- Has a power outage occurred during cooking?
- Was the correct menu item selected?

Problems with cooking

Symptom	 Ingredients	 Time
Does not boil	- Inappropriate ingredients or amounts were used. - More than the maximum allowed ingredients were added.	The cooking time was short.
Boils over	- Inappropriate ingredients or amounts were used. - More than the maximum allowed ingredients were added. - Less than the minimum required ingredients were added.	
Boils down	- Inappropriate ingredients or amounts were used. - Less than the minimum required ingredients were added.	The cooking time was too long.
Burns	- Inappropriate ingredients or amounts were used. - More than the maximum allowed ingredients were added. - Less than the minimum required ingredients were added.	The cooking time was too long.

Problems with cake baking

Symptom	 Ingredients	 Time
Not baked	Inappropriate ingredients or amounts were used.	The baking time was too short.
Boils over	Inappropriate ingredients or amounts were used.	
Burned	Inappropriate ingredients or amounts were used.	The baking time was too long.
Uneven burned color	See Check this first! on P. 43.	
Sticky surface		The cake was not taken out immediately after being baked.

Troubleshooting

◇ Check the following before requesting repairs.

Symptom	Point to check	Action to take	Page to check
• Rice is not completely cooked. • Cooking is not possible. • Cake cannot be made.	Is the power plug connected to an outlet?	Connect the power plug securely to an outlet.	19 24 26 28 30
• Cooking has not been finished by the preset time.	Is the current time correctly set in the rice cooker?	Set the time correctly.	17
	See It takes a long time before cooking is finished on P. 40 and take the necessary action.		40
	When the preset time is less than the timer setting guideline, cooking may not be finished at the preset time.		8 to 14
• The Timer or Soak Timer function cannot be set.	Is 0:00 blinking on the display?	Set the current time.	17
	Is Quick, Exp. Limited Cups, Mixed, Sweet, Quick Cook, Cook•Soup, Cake, or Clean selected? The Timer function is not available when using those menu items.		25 27
• Reheating is disabled.	The rice cooker beeps 2 times (short beeps) when [Start] is pressed.	The rice is cold. Rice below approximately 55°C cannot be reheated.	23
	Is the Keep Warm lamp off?	Press [Keep Warm] and check that the Keep Warm lamp lights up. Then, press [Start] again.	
	Is Porridge, Brown Porridge, Cook•Soup, Cake, or Clean selected? Reheating is not available when using those menu items.		
• The display is foggy.	Are there any grains of burned rice or any other remaining grains of rice adhering to the gaskets or the rim of the inner pot?	Completely remove all remaining rice.	40 43
	Is the outer surface of the inner pot wet?	Wipe using a dry cloth.	
	Due to a temperature difference between the rice cooker and room temperature, condensation may collect on the liquid crystal display. Repeated use can improve the condition. If the problem persists, contact the place of purchase for repair service.		—
• Sounds can be heard during cooking, while the Keep Warm function is on, or during reheating.	A humming sound can be heard during fan rotation and is not a malfunction. A buzzing or twittering sound can be heard during induction heating operation and is not a malfunction.		16
	A completely different sound from the above can be heard.	Contact the place of purchase for repair service.	—

Symptom	Point to check	Action to take	Page to check
• When [Start] or [Keep Warm] is pressed, the rice cooker beeps 2 times (short beeps).	Is the inner pot set in the rice cooker?	Set the inner pot.	19
• The remaining time does not change from XX Min or the displayed time suddenly changes.	According to the cooking conditions or changes to the adjustment setting, the displayed remaining time may not be updated or may decrease or increase suddenly, not gradually. However, this is not a malfunction.		20
	Did you start cooking when the rice cooker was still warm (e.g. repeated cooking, or cooking immediately after the Keep Warm function had been turned off)?	Be sure to start cooking only after the rice cooker has cooled.	20 40
• The rice cooker beeps 2 times (short beeps) when the Timer function (Soak Timer) is set.	The rice cooker beeps if no operation is performed within approximately 30 seconds after pressing [Timer], however, the Timer function can be set without interruption.		25 27
• Water or rice has entered the main body of the rice cooker.	Water or rice inside the rice cooker unit may cause problems. Contact the place of purchase for repair service.		—
• When setting the current time, pressing [Hour] or [Min] does not access the time setting mode.	The time cannot be set during cooking; when the Keep Warm function is on; when the Timer function is set; when the Soak Timer is in use; during reheating; during additional heating; or when the Porridge, Cook•Soup, or Cake menu is selected.		17
• The Keep Warm lamp blinks. • Rice has not been kept warm.	Is the Cake or Clean menu item selected?	The Keep Warm function is not available with Cake and Clean. Serve the cake as soon as possible before it turns sticky.	22 31
• A blurred black line is shown in the display.	Although blurring may occur in the display due to static electricity, it is only a temporary phenomenon and not a malfunction.	If the blurring becomes noticeable, wipe the display using a firmly wrung out cloth. The static electricity is removed and the blurring is reduced.	16
• 6 blinks while cooked food is kept warm.	Has the Keep Warm function been used continuously for more than 6 hours after cooking? After 6 hours have elapsed, 6 blinks on the display. (Do not keep warm for more than 6 hours after cooking.)		29
• 24 blinks on the display when [Hour] is pressed while the Keep Warm function is on.	Has the Keep Warm function been used continuously for more than 24 hours? After 24 hours have elapsed, 24 blinks on the display.		22

Troubleshooting

Symptom	Point to check	Action to take	Page to check
• 0:00 blinks on the display when the power plug is connected.	Are the saved current time, timer setting, and elapsed Keep Warm time lost when the power plug is connected again? → [Cancel] and [Timer] were pressed at the same time.	The lithium battery has run out. (Normal cooking can be performed.) Contact the place of purchase for repair service. → Set the correct time.	16 17
• The lid does not close or opens during cooking.	Are there any cooked rice or grains of rice adhering to the upper casing, inner lid gasket, or around the hook catch?	Completely remove all remaining rice.	37
• There is a gap between the lid and rice cooker.	Although a gap is generated between the lid and rice cooker due to their designs when the lid is closed, this is not a problem as long as steam does not leak during cooking or while the Keep Warm function is on.		—
• The lid does not close.	Is the inner lid set in place?	Set the inner lid.	38
• Condensation collects in the upper casing.	Condensation may collect in the upper casing immediately after rice is cooked or while the Keep Warm function is on but it is not a malfunction. Wipe the upper casing using a dry cloth when condensation collects. → Is Eco selected? → When using the Eco menu item, more condensation may be formed on the inner lid. If condensation becomes an issue, it is recommended to use the Plain menu item.		— 8
• Nothing happens when a key is pressed.	Is the power plug connected to an outlet? → Is the Keep Warm lamp on?	Connect the power plug securely to an outlet. → Press [Cancel] to turn off the Keep Warm function, and then try the operation again.	17-19 24-26 28-30 22
• The power plug sparks.	A tiny spark specific to the induction heating method may occur when the power plug is connected or disconnected, however, it is not a malfunction.		—
• There is a smell of plastic.	Such smells may occur when the rice cooker is first used, however, they should go away over time. If this is an issue, clean the rice cooker according to How to Perform Cleaning.		39
• There are stripes or waves on the plastic parts.	Such stripes and waves are produced when the resin is being molded. They do not affect the performance of the rice cooker.		—
• Rice has not been completely cooked. • E:~ appears on the display.	When [Cancel] is pressed, the following appears on the display. 	The rice cooker is in the demo mode. In this case, contact the place of purchase.	—

Error Displays and Actions to Be Taken


Display	Action to take	Page to check
• E:02 appears on the display and the rice cooker beeps continuously. 	When the rice cooker is placed on a carpet, the air inlet and outlet are blocked, the temperature of the rice cooker goes up, and the rice cooker may not respond even if a key is pressed. When the rice cooker is placed in a high temperature place, the temperature of the rice cooker goes up and similar conditions may be found. Perform the following procedure in such a case. (1) Disconnect the power plug. (2) Move the rice cooker to a location where there is nothing to block the air inlet and outlet and the ambient temperature is not high. (3) Connect the power plug to the outlet again and press a key. * If the rice cooker still does not respond, there is a malfunction in the rice cooker. Disconnect the power plug and contact the place of purchase for repair service.	4
• E:11 appears on the display. 		
• A code starting with E other than E:02 or E:11 appears on the display.	There is a possibility of malfunction. Disconnect the power plug, and then contact the place of purchase.	—

Plastic parts

Plastic parts that are exposed to heat or steam may deteriorate over time. In this case, contact the place of purchase.

Adjusting the Steaming Time (Exp. Limited Cups Menu)




- * Complete the following procedure from steps ① to ⑦ within 30 seconds with the power plug connected to the outlet. If no operation is performed within 30 seconds, the current time is displayed again and the steaming time cannot be set. Restart the procedure to set the steaming time again.
- * The setting cannot be changed during cooking, during cleaning, when the Keep Warm function is on, when the timer function is set or in use, when the Soak Timer is in use, during reheating, or during additional heating.
- * To cancel adjustment of the steaming time, press [Cancel].

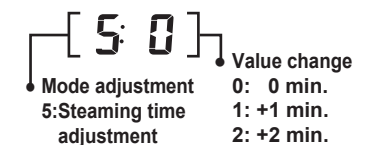

Procedure for adjusting the steaming time

When selecting Exp. Limited Cups and adjusting the steaming time, perform the following procedure.

- Press [◀] or [▶] to select Plain.
- Hold down [Timer] for approximately 3 seconds or more.
- Press [Hour] to set the mode to 5.
- Press [Start].
- Press [Hour] or [Min] to adjust the time.
- Press [Start].
- Hold down [Timer] for approximately 3 seconds or more to complete the setting and display the current time again.

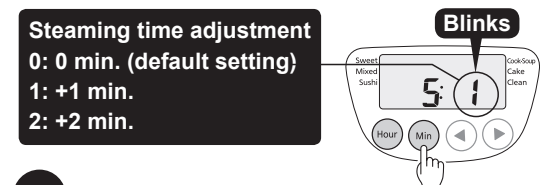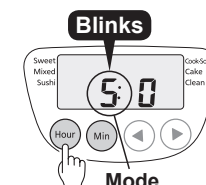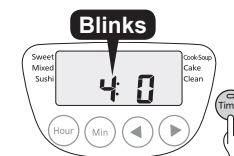


Adjusting the Sound Volume

* Complete the following procedure from steps ❶ to ❷ within 30 seconds with the power plug connected to the outlet. If no operation is performed within 30 seconds, the current time is displayed again and the steaming time cannot be set. Restart the procedure to set the sound volume again.

* The setting cannot be changed during cooking, during cleaning, when the Keep Warm function is on, when the timer function is set or in use, when the Soak Timer is in use, during reheating, or during additional heating.

* To cancel adjustment of the steaming time, press [Cancel].

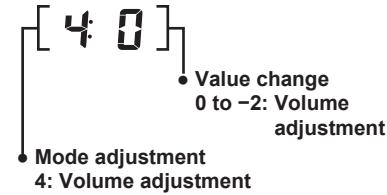

Procedure for adjusting the sound volume (key operation sound and alarm sound)


If the key operation and alarm sounds are too loud, adjust the volume according to the following procedure.

❶ Press [◀] or [▶] to select Plain.

❷ Hold down [Timer] for approximately 3 seconds or more.




❸ Press [Hour] to set the mode to 4.

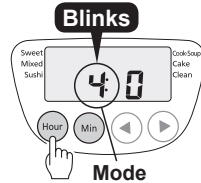

❹ Press [Start].

❺ Press [Hour] or [Min] to adjust the volume.

Volume adjustment
0: High (default setting)
-1: Medium
-2: Low

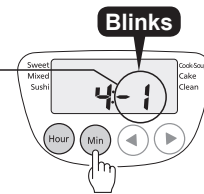

❻ Press [Start].

❼ Hold down [Timer] for approximately 3 seconds or more to complete the setting and display the current time again.

Specifications

Unit size			1.0 L (5.5-cup) type	1.8 L (10-cup) type
Rated voltage/Rated frequency			220-230 V~/50-60 Hz	
Rated power input (W)			1088	1206
Cooking capacity (L)	Plain		0.09 to 1.0 (0.5 to 5.5 cups)	0.18 to 1.8 (1 to 10 cups)
	Premium		0.09 to 1.0 (0.5 to 5.5 cups)	0.18 to 1.8 (1 to 10 cups)
	Eco		0.09 to 1.0 (0.5 to 5.5 cups)	0.18 to 1.8 (1 to 10 cups)
	Sushi		0.09 to 1.0 (0.5 to 5.5 cups)	0.18 to 1.8 (1 to 10 cups)
	Quick		0.09 to 1.0 (0.5 to 5.5 cups)	0.18 to 1.8 (1 to 10 cups)
	Exp. Limited Cups		0.09 to 0.36 (0.5 to 2 cups)	0.18 to 0.54 (1 to 3 cups)
	Long-grain		0.09 to 1.0 (0.5 to 5.5 cups)	0.18 to 1.8 (1 to 10 cups)
	Multigrain		0.09 to 0.72 (0.5 to 4 cups)	0.18 to 1.44 (1 to 8 cups)
	Mixed		0.09 to 0.72 (0.5 to 4 cups)	0.18 to 1.26 (1 to 7 cups)
	Sweet		0.18 to 0.54 (1 to 3 cups)	0.36 to 0.9 (2 to 5 cups)
	Porridge	Firm	0.09 to 0.18 (0.5 to 1 cup)	0.09 to 0.36 (0.5 to 2 cups)
		Soft	0.09 (0.5 cups)	0.09 to 0.27 (0.5 to 1.5 cups)
	Brown Porridge	Firm	0.09 to 0.18 (0.5 to 1 cup)	0.09 to 0.36 (0.5 to 2 cups)
		Soft	0.09 (0.5 cups)	0.09 to 0.27 (0.5 to 1.5 cups)
Brown		0.18 to 0.63 (1 to 3.5 cups)	0.36 to 1.08 (2 to 6 cups)	
Brown GABA		0.18 to 0.63 (1 to 3.5 cups)	0.36 to 1.08 (2 to 6 cups)	
Outside dimensions` (cm)		Width	26.0	28.8
		Depth	35.4	38.6
		Height	20.1	23.8
Weight` (kg)			4.1	5.1
Cord length` (m)			1.5	

* Approximate values

- The current time setting may vary approximately 30 to 120 seconds per month from the actual time depending on the room temperature and the conditions of use.
- One cup of rice is approximately 150 g.

If There Is a Power Outage

If a power outage does occur, the rice cooker resumes its normal functions once power is restored.

State when a power outage occurs	Once power is restored
When the Timer or Soak Timer Function is in use	The timer resumes operation. (If the power outage lasts for an extended period of time and the preset time has passed when power is restored, the rice cooker immediately begins cooking.)
During cooking (reheating)	The rice cooker resumes cooking (reheating). Cooking may not finish properly.
While the Keep Warm function is on	The Keep Warm function is canceled in case of a power outage that lasts for 30 minutes or more.

Purchasing Consumables and Optional Accessories

- Gaskets are consumable parts. Although the amount of wear varies depending on the conditions of use, gaskets wear down as they are used. For stubborn stains, odors, or serious damage, contact the place of purchase.
- The inner pot's fluorocarbon resin coating may wear and peel with extended use. → P. 7

目录

| 前言

- 51-安全注意事项
- 56-菜单介绍
- 63-各部的名称及附属品
- 65-当前时间的调整方法

| 煮饭的基本方法

- 66-煮饭方法
- 70-关于保温
- 71-再加热的方法

| 预约煮饭、预约吸水

- 72-预约煮饭的方法
- 74-预约吸水的方法

| 烹调、蛋糕

- 76-烹调方法（Cook・Soup）
- 78-蛋糕的做法

| 食谱指南

- 80-食谱指南

| 清洁保养

- 84-清洁保养方法
- 86-各部的拆卸、安装方法
- 87-清洗方法

| 遇到难题时

- 88-做出的米饭不可口时
- 91-烹调、蛋糕做得不可口时
- 92-认为发生故障时
- 95-错误显示和处置方法

| 其他

- 95-焖饭时间的调整方法（“Exp. Limited Cups”菜单）
- 96-音量调整方法
- 97-规格
- 97-中途停电时
- 97-关于消耗品、另购品的购买

安全注意事项

使用前请仔细阅读，并务必遵守。

- 此处标识的注意事项是为防止对使用者及他人造成危害及财产损失。此注意事项为安全相关的重要内容，请务必遵守。
- 请勿撕下贴在本体上的注意事项贴纸。

以下标志说明了忽视标识内容、采用错误的用法可能产生的危害及损害程度。

**警告**

该符号表示错误操作可能导致使用者死亡或重伤^{*1}。

**注意**

表示如果用户操作不当，可能会造成使用者受伤害^{*2}或财产损失^{*3}的内容。

^{*1} 重伤是指因失明、外伤、烫伤（高温、低温）、触电、骨折、中毒等留下的后遗症及需要住院治疗或长期看门诊的伤害。

^{*2} 伤害是指无需住院治疗、长期看门诊的外伤、烫伤、触电等。

^{*3} 财产损失是指损害扩大到房屋、家产及家畜、宠物等。

图标记号的说明



△记号表示警告、注意。具体的注意内容用图或文字标注在图标记号的中间或附近。



⊘记号表示禁止的行为。具体的禁止内容用图或文字标注在图标记号的中间或附近。



●记号表示强制行为或指示的内容。具体的指示内容用图或文字标注在图标记号的中间或附近。

**警告**



不使用额定电压以外的电源。
以免造成火灾、触电。



单独使用额定电流7A以上的插座。
与其它电器同时使用时，多头插座部可能异常发热并导致起火。



不使用已破损的电源线。
也不要损坏电源线。
（如加工、强行弯曲、接近高温部、拉扯、扭曲、捆扎、压在重物下、夹在物体中等）
以免造成火灾、触电。



电源插头上附着灰尘时，请仔细擦拭干净。
以免造成火灾。



如果电源线损坏，为了避免危险，必须由制造商，其维修部或类似部门的专业人员更换。
以免造成故障、事故。



将电源插头切实插到底。
以免造成触电、短路、冒烟、起火。



电源线或电源插头破损或插座松动时，不要使用。
以免造成触电、短路、起火。



禁止用湿手

不要用湿手插入或拔出电源插头。
以免造成触电、外伤。



煮饭或烹调过程中，绝对不要打开上盖。
以免内容物溢出造成烫伤或外伤。

安全注意事项

警告



不要将脸、手靠近蒸汽孔。
以免造成烫伤。特别注意勿让婴幼儿触摸。



请勿让儿童独自使用，或在婴幼儿可以触碰到的地方使用。



请不要让身体行动不便或没有充分理解使用方法的人（包含儿童）单独使用。
如需使用时务必要有充分理解使用方法的人在旁指导确认。
以免造成烫伤、触电及外伤。



器具不得浸入水中。
以免造成触电、短路或火灾。




不要改装。维修技术人员以外的人不要拆解或者修理。
以免造成火灾、触电、外伤。




请勿将刀子、叉子、汤匙、锅盖等金属制品放在本产品上面。
以免造成金属制品过热。



不要让蒸汽熏到电源插头。
以免造成火灾、触电、起火。在抽出式桌台上使用时，在蒸汽熏不到电源插头的位置使用。

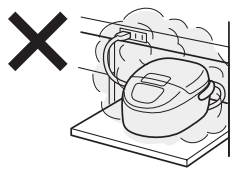

不要将别针、铁丝等金属物、异物插入吸气孔和排气孔、缝隙中。
以免造成触电，或者因异常动作导致外伤。

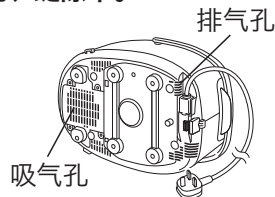

关闭上盖时，清除附着在上框、开关片部位周围的饭粒、米粒等，并将上盖盖紧。

以免蒸汽漏出，或者打开上盖打开内容物喷出，导致烫伤、外伤。



不要用于使用说明书记载内容以外的用途。

以免蒸汽、内容物溢出造成烫伤或外伤。
〈禁止采用的烹调方法示例〉
• 将食材、调料等放入塑料袋中加热烹调
• 使用了烤盘纸、铝箔、保鲜膜烹调
• 加入大量油的烹调、煮饭
• 加入容易造成堵塞的苋菜籽等小粒杂粮进行烹调



如果该表面有裂纹，关掉器具以避免可能出现的电击。
以免造成触电。



发生异常、故障时，立即停止使用。
若继续使用，可能会造成火灾、触电、外伤。

〈异常、故障示例〉
• 使用中，电源线、电源插头异常发热。
• 从电饭煲中冒出烟雾，或有煮糊的异味。
• 电饭煲的部分位置开裂、松动或摇晃。
• 内锅变形。
• 有其它异常、故障。

立刻拔下电源插头，然后委托销售店进行检查及维修。




不要在不稳定的地方、不耐热的桌子、垫材等物体上使用。
以免造成火灾或使桌子、垫材受损。

警告



不要在墙壁、家具的附近使用。
蒸汽和热量会导致受损、变色、变形，使用时与墙壁和家具保持30cm以上的距离。使用厨房用储物架时，注意不要让蒸汽滞留其中。

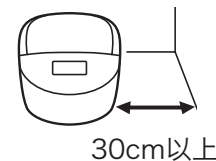

使用中，请小心並避免将水溅到连接器上。



使用后，加热元件表面可能留有余热。
使用中、刚使用完时不要触碰高温部。
以免造成烫伤。



如使用方法不正确可引致受伤。




等待本体冷却后，再进行清洁保养。
（请参照P.84 ~ 87的记载内容来进行清洁保养。）

注意



不要在操作面板可能接触到蒸汽的狭窄空间内使用。
蒸汽和热量会导致操作面板变形、本体受损、变色、变形、故障。
在抽出式桌台上使用时，拉出到在蒸汽熏不到的位置使用。

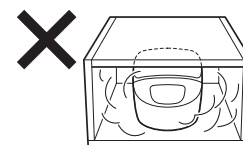

不要在负重强度不足的抽出式桌台上使用。
以免电饭煲掉落导致外伤、烫伤、故障。
使用前确认负重强度足够。



不要在会淋到水、靠近火源的场所使用。
以免造成触电、漏电、本体变形或引起火灾、故障。



不要使用非专用内锅。
以免造成过热、异常动作。



不要在内盖的别扣折断的情况下使用。
以免因蒸汽漏出、沸腾溢锅造成烫伤、外伤。以免导致做出的米饭不可口。



不要干烧。
以免造成故障、过热、异常动作。



本产品为一般家庭用电器。
同样可以用于以下用途。
• 商店、办公室等的茶水间
• 农场设施
• 酒店等住宿设施的客房
• 民宿等简易住宿设施的客房



不要在铝板、电热毯上使用。
以免铝质材料发热，导致冒烟、起火。



不要在吸气孔和排气孔有可能堵塞或者室温较高的场所使用。
不要放在地毯、塑料袋等物品上。以免造成触电、漏电、火灾、故障。



不要在IH电磁灶上使用。
以免造成故障。




打开上盖时注意蒸汽。
以免造成烫伤。

安全注意事项

⚠ 注意

- 使用过程中或刚使用完后，接触内锅把手时，应使用隔热手套，不要直接用手接触。
由于处于高温状态，可能引起烫伤。

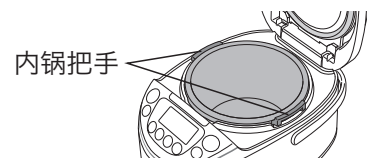

- 不使用时从插座拔掉电源插头。
以免引起外伤、烫伤及因绝缘体老化而造成触电、漏电火灾。

- 务必手持电源插头拔出。
以免造成触电、短路而起火。

- 不要采用章鱼脚接线。
以免造成火灾。

- 请小心使用。
坠落或强力冲击可能导致外伤、故障。

- 由于磁力线暴露在外，不要靠近不耐磁的物体。
可能使电视机、收音机等产生杂音。
银行卡、交通卡、磁带、录影带等也有可能被消磁。

- 使用医疗用起搏器等的用户在使用本产品时，请先仔细咨询专业医生。
本产品动作时可能会影响起搏器。


- 器具不能在外接定时器或独立的遥控控制系统的方式下运行。
以免造成故障。

- 不要整机清洗。
不要整体清洗本体，或将本体浸于水中或向其泼水。以免造成触电、短路或火灾。

- 煮饭过程中不要移动本体。
以免造成烫伤或食物喷出。

- 搬动本体时，不要触碰上盖开关片。
上盖打开可能造成外伤、烫伤。

- 移动本体时，不要握住上盖移动。
以免造成烫伤、外伤。
务必握持把手移动。

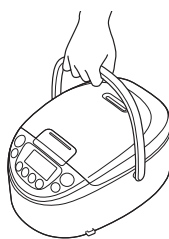


- 本产品具调理功能，请勿过度使用容易出现泡沫或容易膨胀的食材。
以避免食材溢出导致事故的发生或产品故障。
(如:黄豆, 黑豆, 白木耳, 等... , 容易产生泡沫, 溢出的食材。)

为了能经久耐用，注意以下事项

- 清除粘附于本体、内锅上的饭粒和米粒等。
以免造成漏蒸汽、煮沸溢出、故障或煮饭的结果不理想。

- 煮饭中，不要将布等覆盖在本体上。
以免造成本体、上盖变形、变色。

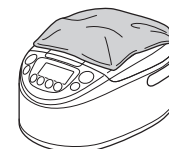

- 不要使用本产品对已冷却的米饭进行再加热（保温）。
以免造成异味等。

- 为维持功能、性能，产品上设有小孔，但是有可能因虫子等进入而引发故障。请注意使用市场上销售的防虫遮罩物等。另外，因虫子等进入引起的故障属于有偿修理的范围。请向购买本产品的销售店洽询。

- 内锅的氟涂层会随着使用不断消耗，并可能剥落，但对人体无害，且煮饭、保温性能也无问题。如果担心或发生变形和腐蚀现象时，可以购买。请向购买本产品的销售店洽询。

- 请务必遵守，以免内锅氟涂层面膨胀，剥落或变形。
 - 不要将内锅直接放在煤气上烧或放在IH电磁灶上、微波炉中使用。
 - 不要保温白米、免洗米以外的米饭（菜饭等）。
 - 不要在内锅中使用醋。
 - 不要使用附属品或木制品以外的饭勺。
 - 不要使用金属制的汤勺、汤匙、打蛋器等坚硬物品。
 - 不要在内锅中放入竹制蒸笼。
 - 不要将餐具等坚硬物放入内锅中一起清洗。
 - 不要使用钢丝球、尼龙刷等坚硬的物品来清洗。
 - 不要使用洗碗机、烘碗机等。

菜单介绍

可选择的 16 个菜单

煮饭容量 内锅刻度线 煮饭时间的标准¹⁾ 预约时间的标准 保温	01 Plain 煮白米时选择。 煮饭的标准选项。  1.0L型 0.5~5.5杯 1.8L型 1~10杯  Plain  1.0L型 47~57分钟 1.8L型 48~65分钟  1小时10分钟以上  可保温	02 Premium 吸水时间是“Plain”菜单的2倍，会花更长的时间进行加热，煮出味道香甜、可口、有粘性的米饭。  1.0L型 0.5~5.5杯 1.8L型 1~10杯  Premium  1.0L型 60~70分钟 1.8L型 57~75分钟  1小时20分钟以上  可保温	03 Eco 想要以小的耗电量（大约削减3~16%）煮白米时选择。与“Plain”菜单相比，煮出的米饭口感略硬。  1.0L型 0.5~5.5杯 1.8L型 1~10杯  Eco  1.0L型 46~58分钟 1.8L型 48~64分钟  1小时10分钟以上  可保温 要点 •在意硬度时，请用“Plain”菜单煮饭。 •内盖上可能会附着较多水蒸气。	04 Sushi 煮寿司饭时选择。煮好的饭粘性较低且口感略硬。  1.0L型 0.5~5.5杯 1.8L型 1~10杯  Sushi  1.0L型 48~58分钟 1.8L型 47~65分钟  1小时10分钟以上  可保温	05 Quick 想要快速煮白米时选择。煮饭时间比“Plain”菜单短，所以煮出的米饭口感略硬。  1.0L型 0.5~5.5杯 1.8L型 1~10杯  Plain  1.0L型 23~41分钟 1.8L型 23~44分钟  不可预约  可保温	06 Exp. Limited Cups 想要更快煮少量白米时选择。煮饭时间比“Plain”菜单短，所以煮出的米饭口感略硬。  1.0L型 0.5~2杯 1.8L型 1~3杯  Exp. Limited Cups  1.0L型 20~29分钟 1.8L型 23~30分钟  不可预约  可保温 要点 •如煮出的米饭口感过硬，延长焖饭时间，可以调整硬度。 →P.95
---	---	--	--	---	---	--

¹1：煮饭时间的标准是指从立即开始煮饭到焖饭结束的时间。
(电压220-230V、室温23度、水温23度、按标准水位加水)
煮饭时间会根据煮饭容量、米的种类、食材种类及其用量、室温、水温、水量、电压、预约煮饭（吸水）等情况而有所不同。

菜单介绍

可选择的 16 个菜单

07 Long-grain

煮长粒米时选择。

1.0L型 0.5~5.5杯
1.8L型 1~10杯

Long-grain

1.0L型 30~40分钟
1.8L型 31~43分钟

45分钟以上

可保温

要点

- 使用长粒米煮菜饭时，请选择“Mixed”菜单。选择其他菜单时，可能会使煮好的米饭不可口。

08 Multigrain

将杂粮米（小米、稗子、黑米、红米等）与白米一起煮时选择。

1.0L型 0.5~4杯
1.8L型 1~8杯

Plain

1.0L型 52~62分钟
1.8L型 53~65分钟

1小时10分钟以上

可保温 请尽快食用^{*2}

要点

- 杂粮米的量请勿超出白米的2成。
- 请将杂粮米平铺在白米上煮饭。若搅拌在一起，可能会使煮出来的米饭不可口。
- 市面上销售的杂粮米、发芽糙米的包装上有调整水量等的记载时，请遵照该内容，按照自己的喜好调整水量。
- 请不要混合易堵塞网眼的苋属籽等颗粒尤其小的杂粮米煮饭。
- 煮发芽糙米、胚芽米、半精米时，选择“Multigrain”菜单。

09 Mixed

煮菜饭时选择。

1.0L型 0.5~4杯
1.8L型 1~7杯

Mixed

1.0L型 38~52分钟
1.8L型 44~65分钟

不可预约

可保温 请尽快食用^{*2}

10 Sweet

煮糯米饭时选择。

1.0L型 1~3杯
1.8L型 2~5杯

<糯米和粳米>
Sweet与Plain之间
<糯米>Sweet

1.0L型 36~46分钟
1.8L型 38~48分钟

不可预约

可保温 请尽快食用^{*2}

要点


- 请把米摊平，以免米超出水面，然后煮饭。
- 使用长粒米糯米时，上限为刻度的1/3，烹煮时请略多加水。

放入食材煮饭时的注意事项

- 可加入食材煮饭的菜单有“Mixed”、“Sweet”、“Porridge·Firm”、“Brown Porridge”、“Brown”。其他菜单可能会使煮好的米饭不可口，所以请不要加入食材。
- 1杯白米、糯米、糙米请加入70g以下的食材。（“Porridge”菜单以外）
- 充分搅拌均匀调料后，将食材放到米上面。
- 煮饭中请勿打开上盖加入食材。
- 请务必遵守放入食材煮饭时的最大煮饭容量。
- 请先调整水量，然后放入食材。若先放食材再调整水量，煮好的饭会比较硬。
- 下述情形可能导致煮出来的米饭不可口，煮糊等。
 - 酱油、甜料酒等调料过多时
 - 调料沉入锅底时
 - 使用番茄酱、番茄汁时
 - 混合食材时
- 为“Porridge”加入食材时，请确保添加食材后的水位不超过“Porridge”的最高刻度线。

内锅刻度线（内侧）

- 内锅的刻度线是大致标准。请根据米的种类、个人喜好调整水量。
- 相对于标准刻度线增加或减少水量时，请避免1/3以上刻度线的增减。以免造成食物溢出等。

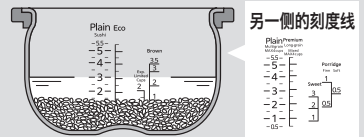

关于免洗米

- 免洗米也请用附带的量杯计量。→P.64・66
- 免洗米以内锅刻度为标准，稍微多加一点水（刻度线刚刚被水淹没的程度）。
- 煮免洗米时，有时会出现锅巴颜色变深的情況。
- 加入免洗米和水后，从锅底自上而下充分搅拌，以便让每一粒米都能充分浸水。如果只是从上倒入水，会因为米粒不能充分浸水而导致煮好的米饭不可口。
- 倒入水后若出现白浊现象，建议换水1~2次淘洗。白浊现象源自米中的淀粉而非米糠，但是如果直接煮饭，有可能会造成煮糊、溢出，或煮出的米饭不可口。

关于吸水

- 各菜单的煮饭时间已经包含了吸水的过程（“Quick”、“Exp. Limited Cups”菜单除外），因此煮饭前您无需泡米，可以马上煮饭。
- 您也可以进行预约吸水。→P.74

*1：煮饭时间的标准是指从立即开始煮饭到焖饭结束的时间。
（电压220-230V、室温23度、水温23度、按标准水位加水）
煮饭时间会根据煮饭容量、米的种类、食材种类及其用量、室温、水温、水量、电压、预约煮饭（吸水）等情况而有所不同。

*2：虽然可自动切换为保温，但是会损坏米饭的美味，所以请不要保温，尽快食用。

菜单介绍

可选择的 16 个菜单

煮饭容量

内锅刻度线

煮饭时间的标准^{*1}

预约时间的标准

保温

⑪Porridge

煮粥时选择。

1.0L型

<稠粥> 0.5~1杯

<加食材的稠粥> 0.5杯

<稀粥> 0.5杯

1.8L型

<稠粥> 0.5~2杯

<加食材的稠粥> 0.5~1.5杯

<稀粥> 0.5~1.5杯

<稠粥> Porridge · Firm

<稀粥> Porridge · Soft

可将烹调时间设定在40~90分钟

的范围内。

烹调时间+1分钟

可保温 请尽快食用^{*2}

要点

•如果煮好后放置不管，会变成浆糊状或者黏糊糊的，所以请尽早食用。

•放入食材煮饭时的注意事项→P.59

⑫Brown Porridge

煮糙米粥时选择。

1.0L型

<稠粥> 0.5~1杯

<加食材的稠粥> 0.5杯

<稀粥> 0.5杯

1.8L型

<稠粥> 0.5~2杯

<加食材的稠粥> 0.5~1.5杯

<稀粥> 0.5~1.5杯

<稠粥> Porridge · Firm

<稀粥> Porridge · Soft

1.0L型

82~92分钟

1.8L型

88~104分钟

1小时45分钟以上

可保温 请尽快食用^{*2}

要点

•如果煮好后放置不管，会变成浆糊状或者黏糊糊的，所以请尽早食用。

•放入食材煮饭时的注意事项→P.59

⑬Brown

煮糙米时选择。

1.0L型

<糙米> 1~3.5杯

<加食材的糙米> 1~2杯

1.8L型

<糙米> 2~6杯

<加食材的糙米> 2~4杯

Brown

1.0L型

68~81分钟

1.8L型

73~88分钟

1小时30分钟以上

可保温 请尽快食用^{*2}

要点

•放入食材煮饭时的注意事项→P.59

【白米中加入糙米、杂粮米糙米一起煮饭时】

•杂粮米糙米是糙米中加了杂粮米的米。

•糙米、杂粮米糙米比白米多时，请选择“Brown”菜单煮饭。

•糙米、杂粮米糙米与白米同量，或白米量多时，请选择“Plain”菜单煮饭。此时，先将糙米、杂粮米糙米浸泡1~2小时，使其吸水。

•糙米、杂粮米糙米和白米加在一起的量最大为1.0L型=3.5杯、1.8L型=6杯。

【将糙米和杂粮米一起煮时】

•请务必选择“Brown”菜单。

•糙米和杂粮米加在一起的量最大为1.0L型=3.5杯、1.8L型=6杯。

⑭Brown GABA

想要煮出软烂易于食用的糙米饭时选择。（煮饭时间比“Brown”菜单更长。）另外，与“Brown”菜单相比，还可以煮出更多有益于健康的GABA（伽马氨基丁酸）。

1.0L型

1~3.5杯

1.8L型

2~6杯

Brown

1.0L型

4小时16分钟~4小时26分钟

1.8L型

4小时19分钟~4小时31分钟

4小时35分钟以上

可保温 请尽快食用^{*2}

要点

•放入食材煮饭时的注意事项→P.59

【白米中加入糙米、杂粮米糙米一起煮饭时】

•杂粮米糙米是糙米中加了杂粮米的米。

•糙米、杂粮米糙米比白米多时，请选择“Brown”菜单煮饭。

•糙米、杂粮米糙米与白米同量，或白米量多时，请选择“Plain”菜单煮饭。此时，先将糙米、杂粮米糙米浸泡1~2小时，使其吸水。

•糙米、杂粮米糙米和白米加在一起的量最大为1.0L型=3.5杯、1.8L型=6杯。

【将糙米和杂粮米一起煮时】

•请务必选择“Brown”菜单。

•糙米和杂粮米加在一起的量最大为1.0L型=3.5杯、1.8L型=6杯。

*1：煮饭时间的标准是指从立即开始煮饭到焖饭结束的时间。（电压220-230V、室温23度、水温23度、按标准水位加水）
煮饭时间会根据煮饭容量、米的种类、食材种类及其用量、室温、水温、水量、电压、预约煮饭（吸水）等情况而有所不同。

*2：虽然可自动切换为保温，但是会损坏米饭的美味，所以请不要保温，尽快食用。

60

简体中文

61

菜单介绍

可选择的 16 个菜单

15 Cook · Soup

→P.76 · 77

烹调时选择。设定烹调时间，可慢慢炖煮。
此外，在熬汤时也选择此菜单。

要点

- 请务必用“Cook · Soup”菜单进行烹调。
- 如果用煮饭的菜单进行烹调，蒸汽、内容物喷出，可能导致烫伤、外伤，或者内锅煮糊等，造成损伤。
- 炖煮的菜肴可以在加热后保温的状态放置一段时间，让食材更加入味、柔软。



16 Cake

→P.78 · 79

做蛋糕时选择。

各部的名称及附属品


◇开箱后，首先请进行确认。

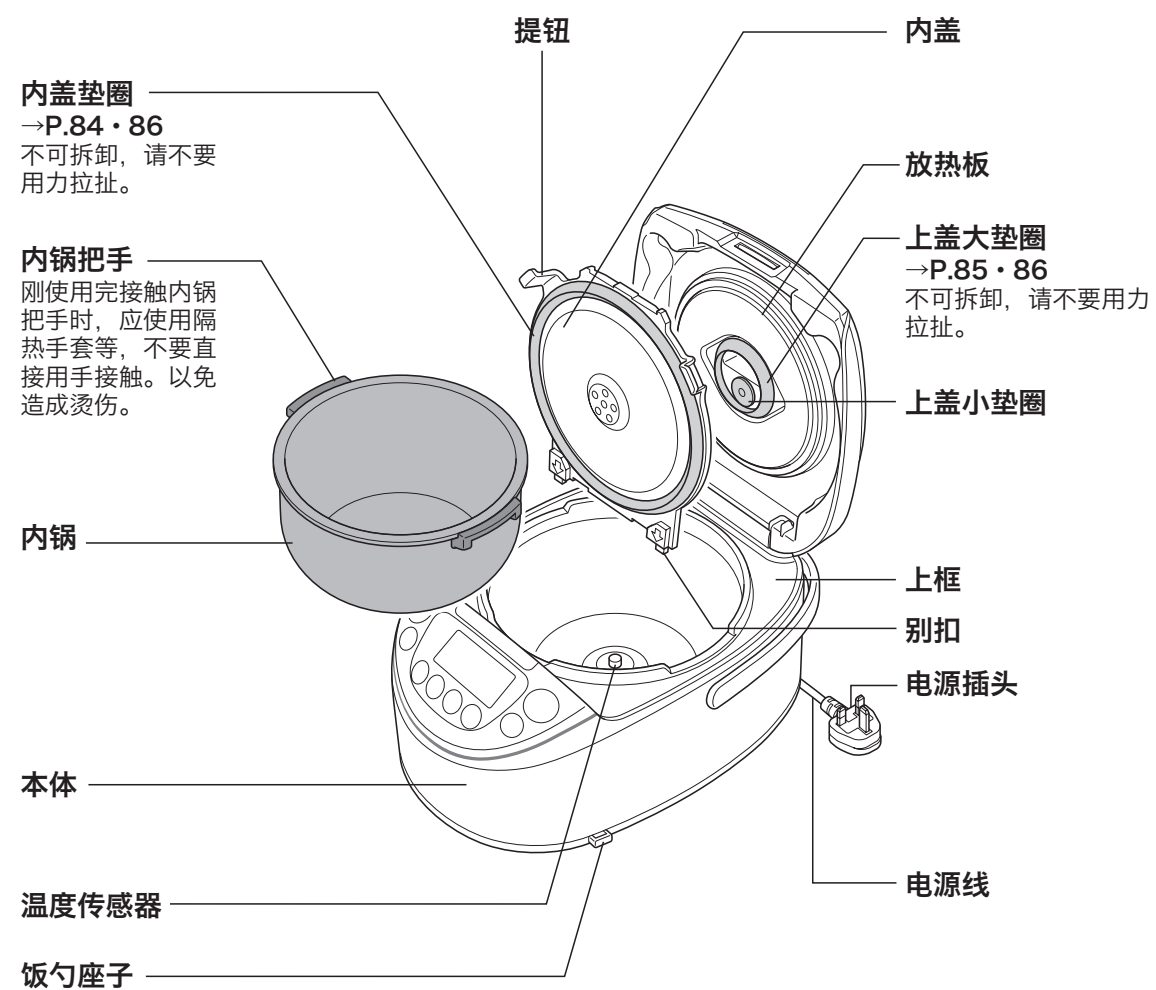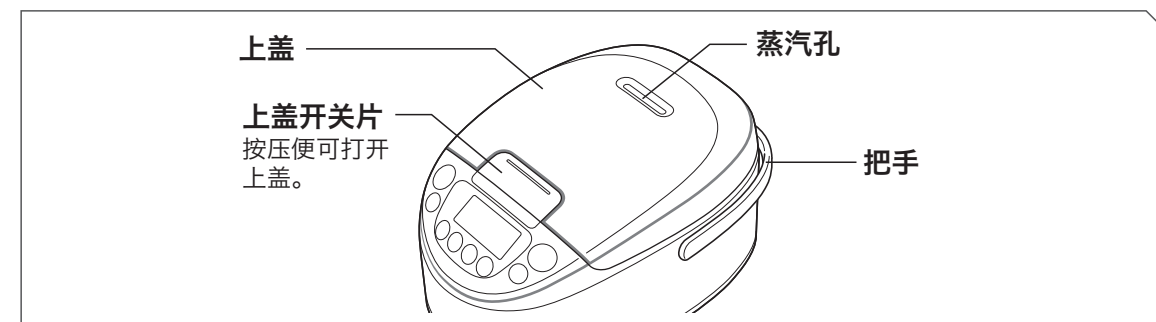

移动本体时，务必握住把手移动。
*如本体温度高，请务必使用隔热手套等。
以免造成烫伤。

各部的名称及附属品


操作面板

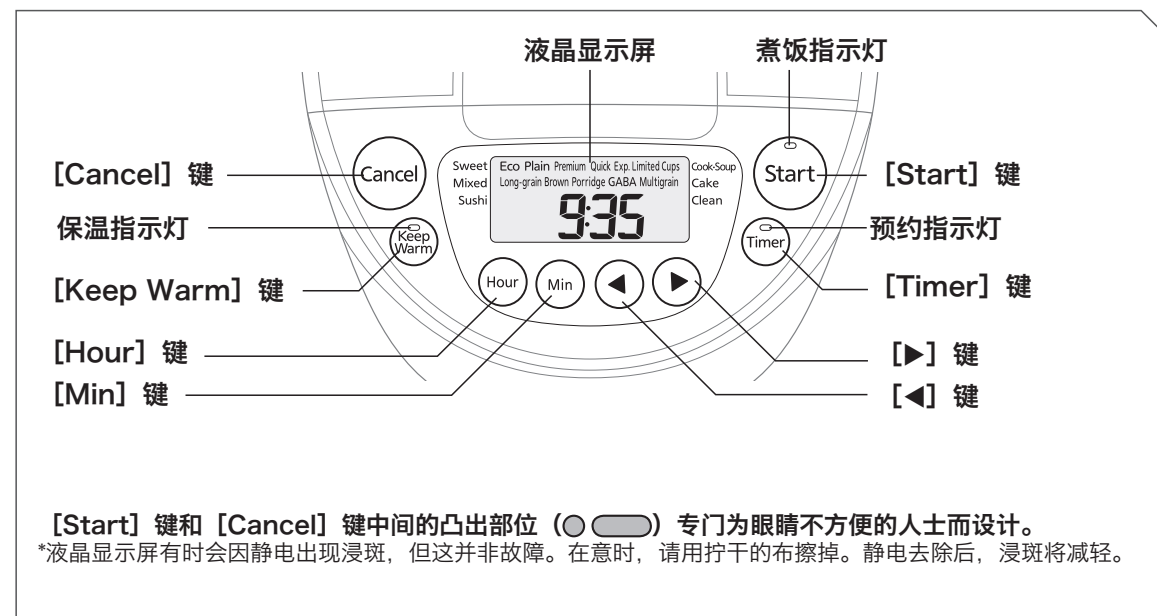

确认附属品

<饭勺>

可插进饭勺座子。

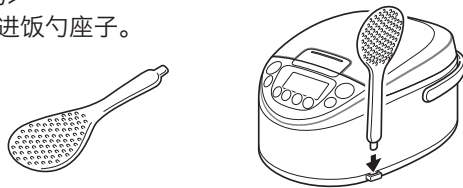

<汤勺>



<量杯>

约1杯
(约0.18L)
1杯米约
150g。



关于内锅（土锅涂层）

为了煮出接近于用土锅煮饭的香味，在内锅上进行了土锅所含材料的涂层加工。

关于提示音

在煮饭中、保温中、再加热中会发出以下提示音，并非异常现象。

- “呼—”声（风扇运行的声音）
- “吱—”或“叽哩哩哩…”声（IH运行的声音）

关于锂电池

因本产品内置有锂电池，即使拔掉电源插头仍会继续记忆当前时间、预约时间。

- 如锂电池没电了，在插入电源插头时“0:00”闪烁。此现象不会影响正常煮饭功能，但是若拔下电源插头，当前时间、预约时间及保温经过时间的记忆将会消失。

注意

- 客户无法自行更换锂电池。如需更换新锂电池时，请委托购买本产品的销售店进行更换。（有偿）

首次使用时

请在清洗内锅、内盖、附属品后使用。
→P.84~86

确认时间


时间以24小时制显示。若时间不准，请对准当前时间。→P.65

当前时间的调整方法

时间以24小时制显示。

*煮饭（烹调、清洗）中、保温中、设定预约中、预约煮饭（吸水）中、选择了“Porridge”、“Cook·Soup”、“Cake”时，不能调整时间。

例：将“9:30”调为“9:35”时

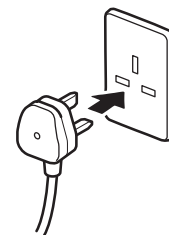

1 将电源插头插入插座。



2 按下 [Hour] 或者 [Min]，进入时间设定模式。

◇按下 [Hour] 或者 [Min]，⏻ 点亮。



3 调整时间。


◇按下 [Hour]，可以1小时为单位调整时间；按下 [Min]，可以1分钟为单位调整时间。
◇按住不放可以快速调整时间。
◇如想中途取消时间调整，请按下 [Cancel]。



4 按下 [Start]。

◇⏻ 熄灭，时间调整完成。

煮饭方法

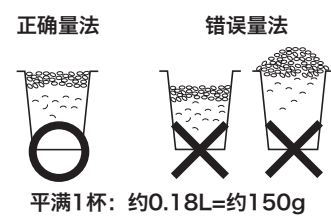

1 用附带的量杯计量米。

- ◇ 务必使用附属的量杯。
- ◇ 使用计量米缸等会产生误差。
- ◇ 免洗米也用附带的量杯同样地计量。

注意

- 不要超出规定的煮饭容量煮饭。以免导致做出的米饭不可口。→P.56~62・97
- 不要混合易堵塞网眼的苋属籽等颗粒尤其小的杂粮米煮饭。




2 淘米。

- ◇ 先加入足量的水，略微淘洗，迅速倒掉淘米水。
- ◇ 为避免污水被米吸收，请尽量用冷水快速淘米。
- ◇ 替换2~3次水淘米，直到水的浑浊减轻。
- ◇ 从底部充分混合免洗米。→P.59

注意

- 不要使用温水（约35度以上）淘米。以免导致煮好的米饭不可口。

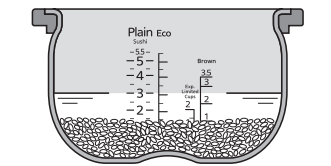


3 调整水量。

- ◇ 水平放置内锅，摊平米。
- ◇ 请结合内锅内侧的刻度线，按照自己的喜好调整水量。→P.59


注意

- 不要使用温水（约35度以上）调整水量。以免导致煮好的米饭不可口。

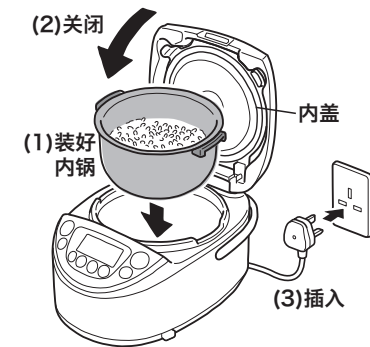

4 将内锅装入本体，关闭上盖，将电源插头插入插座。

- ◇ 请仔细擦拭附着在内锅外侧的水滴，然后设置。
- ◇ 以免导致做出的米饭不可口。
- ◇ 请用双手切实关闭上盖。
- ◇ 当保温指示灯点亮时，请按下 [Cancel] 使其熄灭。

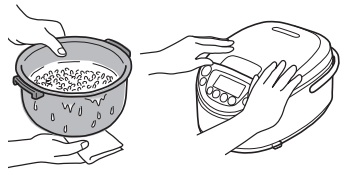

注意

- 务必清除附着在上框、上盖开关片、内盖上的饭粒、米粒。以免造成上盖关不上或者在煮饭中上盖打开。
- 如果内盖未装好，则上盖关不上。
- 务必确认上盖已盖紧。



《关于提示音》

- 在未装好内锅的状态下按下 [Start] 时或者按下 [Keep Warm] 时，会发出“哔哔”的提示音。
- 如果您在意提示音，可以调整音量。→P.96



5 按下 [◀] 或者 [▶] 来选择菜单。→P.56~62


◇ 每按一次，菜单或者◀▶就会闪烁，菜单依次切换。

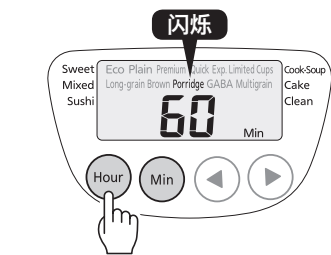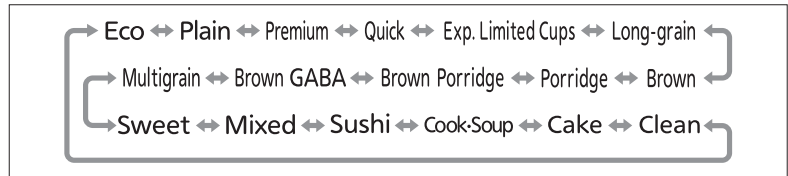

6 选择“Porridge”菜单时，按下 [Hour] 或者 [Min]，调整煮饭时间。

- ◇ 初始设定为60分钟。请根据个人喜好调整时间。
- ◇ 可以5分钟为单位，在40~90分钟范围内进行设定。
- ◇ 每按一次 [Hour] 增加5分钟，每按一次 [Min] 减少5分钟。

煮饭方法

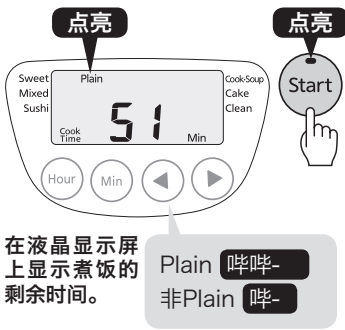

7 按下 [Start] 。

- ⚠ **警告**
- 煮饭中不要将脸、手靠近蒸汽孔。以免造成烫伤、外伤。
 - **<不得不中断煮饭时>**
 - (1)按下 [Cancel]，中断煮饭。
 - (2)确认没有蒸汽冒出后，按下上盖开关片。


*如果在刚刚按下 [Cancel] 后立刻打开上盖，可能会导致烫伤。
 - **<重新煮饭时>**

换掉内锅中的米和水，等待本体充分冷却，重新煮饭。

*一旦按下 [Cancel]，则会在中途停止煮饭。如果不换掉内锅中的米和水就重新煮饭，会导致煮到一半的米被重新煮，导致煮糊或者做出的米饭不可口。
- ⚠ **注意**
- 对于下述情形，务必冷却本体后煮饭。
 - 连续煮饭时
 - 中断保温马上煮饭时

以免导致煮饭时间延长，或者做出的米饭不可口。

*各菜单的煮饭时间（大致标准）→P.56~62

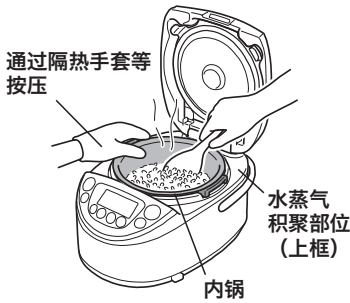

8 煮好后，立刻翻动米饭。

- ◇ 米饭煮好后，“哔-”的声音响8次，自动保温。


(可保温的菜单→P.56~62/关于保温→P.70)
- ◇ 立刻翻动米饭，使多余的水分蒸发掉。
- ◇ 请摊平米饭，避免在内锅侧面留下饭粒。

(因内锅的形状特征，米饭中部会稍稍凹陷)
- ◇ 使用后，请按 [Cancel]，拔出电源插头，冷却后保养。
- ◇ 通过“Porridge”、“Brown Porridge”菜单加入食材时，煮饭时间不够时，请在保温指示灯点亮或闪烁的状态按下 [Hour]、[Min]，调整追加的煮饭时间，然后按下 [Start]。以1分钟为单位，每次最长可追加15分钟，共可追加3次。
- ◇ 进行追加加热时，请在按下 [Start] 键前充分搅拌。
- ◇ 长时间持续保温会使粥变成浆糊状，所以请尽早食用。


- ⚠ **警告**
- ⚠ **注意**
- 打开上盖时，确认蒸汽孔已经没有蒸汽冒出，然后打开。以免造成烫伤、外伤。
 - 如果没有取消保温就拔下电源插头，下次使用时保温指示灯将点亮，不能煮饭。
 - 饭刚煮好后或保温中打开上盖，导致水蒸气落进上框、外面等时，请擦拭干净。根据菜单的不同，有时会出现较多水蒸气附着的情况。

关于保温

保留白米（免洗米）的色泽与美味。
煮饭结束后将自动切换到保温。
（可保温的菜单→P.56~62）

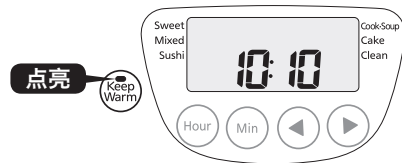

在按住 [Hour] 期间，将以1小时为单位显示保温经过时间，最大为24小时（24h）。超过24小时时，“24”闪烁，“h”点亮。

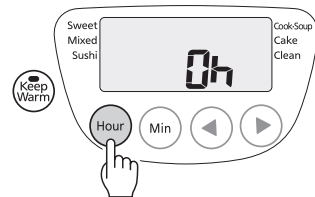

中断保温时

按下 [Cancel]。（保温指示灯熄灭）




再次保温时

按下 [Keep Warm]。



对少量米饭保温时

请将米饭集中到内锅中间进行保温，并尽快食用。

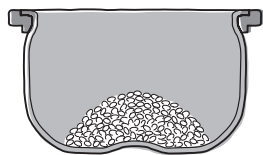


△ 注意

- 请不要进行以下形式的保温，以免造成米饭异味、干巴巴、变色、变质或腐蚀内锅等情况。
 - 拔掉电源插头进行保温
 - 米饭在电饭煲内的情况下取消保温
 - 冷饭的保温
 - 添加冷饭
 - 在饭勺留在电饭煲内的情况下保温
 - 米饭量少时
 - （1.0L型：1杯以下、1.8L型：2杯以下）
 - 白米（免洗米）以外的保温
 - 将米饭围成一圈后进行保温
 - 保温24小时以上
- 饭刚煮好后或保温中打开上盖，导致水蒸气落进上框、外面等时，请擦拭干净。根据菜单的不同，有时会出现较多水蒸气附着的情况。
- 如果在保温中拿起内锅，保温将被取消，需要注意。
- 在内锅边缘和垫圈类上有饭粒附着时，清除干净。以免造成干燥、变色、异味、发粘。
- 在恶劣环境（寒冷地带或周围温度高等）下使用时，请尽早食用。

再加热的方法

◇ 食用之前将保温中的米饭重新加热，便可吃到热腾腾的米饭。

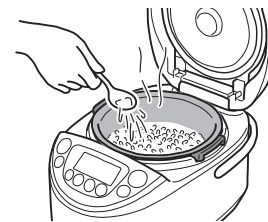

1 翻动保温中的米饭，均匀洒入1~2大勺水。

◇ 洒水可以防止米饭变干，使热好的饭松软可口。




2 确认保温指示灯处在点亮状态。

◇ 若保温指示灯未点亮，则不能再加热。
已经熄灭时，请按下 [Keep Warm]。



3 按下 [Start]。

◇ 在再加热还剩5分钟时，显示剩余时间。
再加热结束后发出“哔”的3次提示音，保温指示灯点亮。

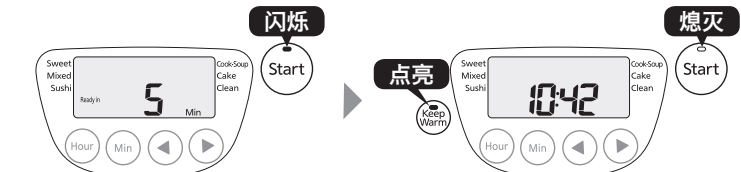

◇ 想中途取消再加热时，按下 [Cancel]。
◇ 米饭变冷（约55度以下）时，发出“哔哔”的声音，不能再加热。



4 全面翻动加热后的米饭，使其变得均匀。

◇ 翻动米饭，请用双手切实关闭上盖。


△ 注意

- 米饭超过内锅一半以上时，因米饭量过多无法充分加热。
- 如果在以下情况进行再加热，会导致米饭变干。
 - 米饭刚煮好等还是热的时
 - 米饭量少时（1.0L型：1杯以下、1.8L型：2杯以下）
 - 再加热重复3次以上时
- “Porridge”、“Brown Porridge”、“Cake”、“Clean”不能再加热。

预约煮饭的方法

- ◇您可以在想吃的时间煮好米饭。
- ◇选择“Timer1”或“Timer2”，设定时间，就能按照设定的时间煮好饭。
- ◇本产品会记录设定过的时间，可以设定“Timer1”、“Timer2”2个时间。
- ◇您可以分别设定常用的时间，便于使用。

例：将“Timer1”设定为“13:30”，就能在13时30分煮好饭。

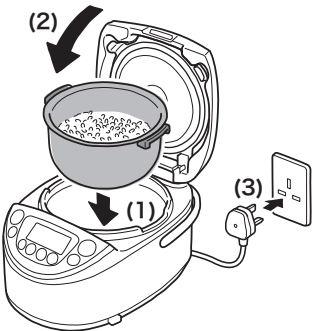

1 将内锅装入本体，关闭上盖，将电源插头插入插座。

◇煮饭方法→请按照P.66・67的①～④步骤进行。



2 确认当前时间。

- ◇当前时间的调整方法→P.65
- ◇当保温指示灯点亮时，请按下[Cancel]使其熄灭。（在保温指示灯点亮时不能预约）




3 按下[◀]或者[▶]来选择菜单。

◇如已经预先选好菜单，则无需再次选择。



4 选择“Porridge”菜单时，按下[Hour]或者[Min]，调整煮饭时间。

- ◇初始设定为60分钟。请根据个人喜好调整时间。
- ◇可以5分钟为单位，在40～90分钟范围内进行设定。
- ◇每按一次[Hour]增加5分钟，每按一次[Min]减少5分钟。

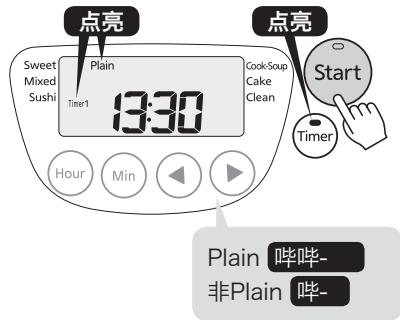

5 按下[Timer]，选择“Timer1”或“Timer2”。

- ◇每按一次，就会按照“Timer1”→“Timer2”→“Soak Timer”的顺序依次切换。
- ◇产品会自动显示上次设定的预约时间，所以以相同的时间进行预约煮饭时，无需设定时间。（进入步骤⑦）
- ◇不显示不能预约煮饭的菜单。

6 按下[Hour]或者[Min]，调整希望米饭煮好的时间。

- ◇按下[Hour]，可以1小时为单位调整时间；按下[Min]，可以10分钟为单位调整时间。
- ◇按住不放可以快速调整时间。
- ◇如设定的时间短于预约时间的标准→P.56～62，则可能无法在预约的时间完成煮饭。

7 按下[Start] 1次。

◇弄错预约设定时，请按下[Cancel]，重新设定。

⚠ 注意

- 下述情况无法预约煮饭。
 - “Quick”、“Exp. Limited Cups”、“Mixed”、“Sweet”、“Cook・Soup”、“Cake”、“Clean”时
 - 液晶显示屏的时钟闪烁显示“0:00”时
 - 没有装好内锅时
- 如果将预约时间设长，可能出现锅巴颜色变深的情况。若在意锅巴的颜色，充分淘米。
- 将预约煮饭设定在12小时以内，以免造成食物变质。




《关于提示音》

- 如按下[Timer]后约30秒内不执行任何操作，会发出“哔哔”的提示音。
- 如在无法进行预约煮饭的状态按下[Timer]，会发出“哔哔”的提示音。
- 如果您在意提示音，可以调整音量。→P.96

预约吸水的方法

- ◇可以设定让米自然吸水（浸泡）的时间。
- ◇如果选择“**Soak Timer**”设定吸水时间，就能在经过设定的时间后开始煮饭。
- ◇可以10分钟为单位，在10~60分钟范围内设定吸水时间。

例：如果将“**Soak Timer**”设定为50分钟，就会在50分钟后开始煮饭。

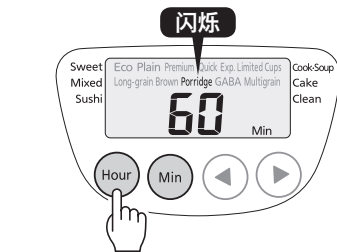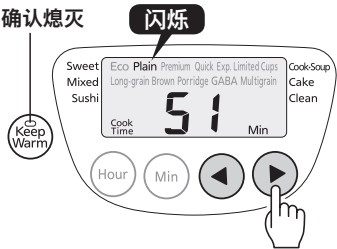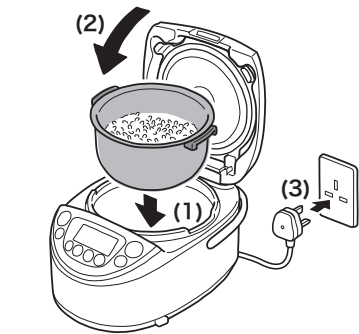

1 将内锅装入本体，关闭上盖，将电源插头插入插座。

- ◇煮饭方法→请按照P.66・67的①~④步骤进行。
- ◇当保温指示灯点亮时，请按下[Cancel]使其熄灭。（在保温指示灯点亮时不能预约）

2 按下[◀]或者[▶]来选择菜单。

- ◇如已经预先选好菜单，则无需再次选择。

3 选择“Porridge”菜单时，按下[Hour]或者[Min]，调整煮饭时间。


- ◇初始设定为60分钟。请根据个人喜好调整时间。
- ◇可以5分钟为单位，在40~90分钟范围内进行设定。
- ◇每按一次[Hour]增加5分钟，每按一次[Min]减少5分钟。

4 按下[Timer]，选择“**Soak Timer**”。

- ◇每按一次，就会按照“Timer1”→“Timer2”→“**Soak Timer**”的顺序依次切换。
- ◇不显示不能预约吸水的菜单。



时间以24小时制显示。

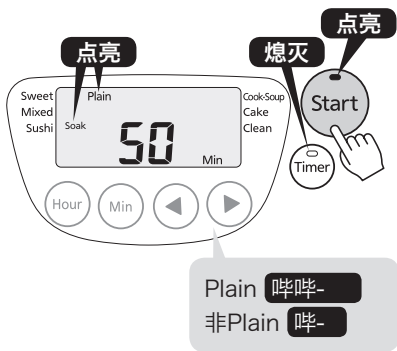

5 按下[Hour]或者[Min]，调整吸水时间。

- ◇可以10分钟为单位，在10~60分钟范围内进行设定。
- ◇每按一次[Hour]增加10分钟，每按一次[Min]减少10分钟。
- ◇如果延长吸水时间，则煮好的饭较软。

6 按下[Start] 1次。

- ◇弄错预约设定时，请按下[Cancel]，重新设定。

△注意

- 下述情况下无法进行预约吸水。
 - “Quick”、“Exp. Limited Cups”、“Mixed”、“Sweet”、“Cook・Soup”、“Cake”、“Clean”时
 - 液晶显示屏的时钟闪烁显示“0:00”时
 - 没有装好内锅时

《关于提示音》

- 如按下[Timer]后约30秒内不执行任何操作，会发出“哔哔”的提示音。
- 如在无法进行预约吸水的状态按下[Timer]，会发出“哔哔”的提示音。
- 如果您在意提示音，可以调整音量。→P.96

烹调方法 (Cook・Soup)

◇刚开始用接近沸腾温度的高温煮，然后降低温度炖煮一段时间。然后进一步降低温度，继续炖煮。慢慢地降低加热温度炖煮，入味好，长时间加热也不担心煮干。菜谱请参照食谱指南。

不可烹调的事例

×


- 将食材、调料放入塑料袋中等加热烹调
- 使用了烤盘纸、铝箔、保鲜膜烹调
- 加入大量油烹调

1 处理食材，放入内锅。

◇请以内锅内侧的“Plain”刻度线为标准加入食材。

	1.0L型	1.8L型
最大量	刻度线 5.5以下	刻度线 8以下
最小量	刻度线 2以上	刻度线 3以上

2 将内锅装入本体，关闭上盖，将电源插头插入插座。

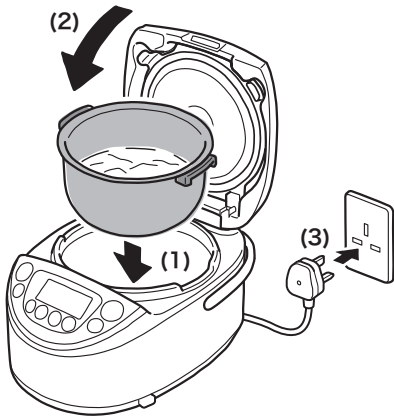


⚠ 注意

- 多于最大量则无法炖煮或会溢出，需要注意。即使少于最小量有时也会溢出，需要注意。
- 烹调时请充分搅拌，以免调料堆积内锅锅底。
- 如果使用热的高汤或汤汁，有时会煮得不理想。在高汤或汤汁冷却后开始烹调。
- 不要使用金属制的汤勺、汤匙、打蛋器等坚硬物品。
- 制作食谱指南上没有记载的菜肴时，可能出现食物溢出、煮糊的问题，需要注意。
- 牛奶、豆浆等尤其容易溢出，所以在加热完毕后倒入，每5分钟进行追加加热，一边观察一边加热。

3 按下 [◀] 或者 [▶]，选择“Cook・Soup”。

◇初始设定为60分钟。

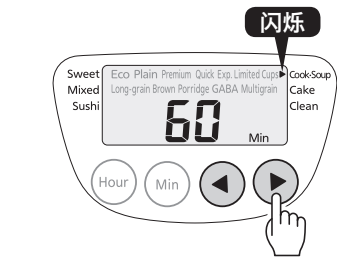

4 按下 [Hour] 或者 [Min]，调整烹调时间。

- ◇可以5分钟为单位，在5~180分钟范围内设定。
- ◇每按一次 [Hour] 增加5分钟，每按一次 [Min] 减少5分钟。
- ◇按住不放可以快速调整时间。




5 按下 [Start]。

◇开始烹调。

⚠ 注意

- 烹调中途不要打开上盖。

显示剩余时间。

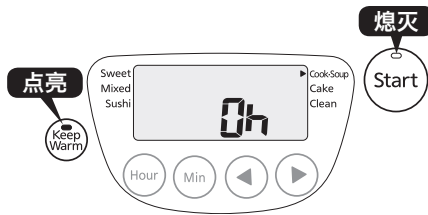

6 煮好后…

- ◇“哔-”的声音响8次，自动切换到保温，保温指示灯点亮，液晶显示屏显示“0h”。
- ◇追加加热的方法（烹调不足时，使用料理块、淀粉进行烹调时）
 - (1)确认保温指示灯已经点亮。
 - (2)按下 [Hour]，调整追加的烹调时间。（最大30分钟）
 - (3)按下 [Start]。（可追加烹调3次）
- ◇在保温中想重新加热时（想加热到易于食用的温度），请在保温指示灯点亮时按 [Start] 进行再加热。
- ◇烹调结束后将会继续保温，并以1小时为单位显示至6小时。超过6小时后，“6”闪烁。请尽快食用。
- ◇烹调后，请按 [Cancel]，去除异味。（清洗方法→P.87）

保温经过时间显示0~6小时（0~6h）。

⚠ 注意

- 有的料理在持续保温后口味可能会变差，需要注意。
- 烹调不足时，通过追加进行烹调前，请不要按 [Cancel]。以免保温指示灯熄灭，无法继续烹调。如不慎按下此键，按照以下步骤进行烹调。
 - (1)取出内锅，放在湿布上。
 - (2)拆下内盖，在打开本体的上盖的情况下放置10分钟左右，冷却本体和内锅。
 - (3)重新将内锅装入本体。
 - (4)根据从P.76的②开始的要领进行烹调。

蛋糕的做法




1 处理食材，将面团倒进内锅，排出面团内的空气。

◇ 请将内锅放在布上，从5cm左右的高度连同内锅一起落下3次左右，排出空气。

⚠ 注意


- 如果制作食谱指南上没有记载的蛋糕，可能出现溢出、做得不好的问题，需要注意。
- 排出面团内的空气时，在柔软的布上进行。以免造成内锅变形、破损。

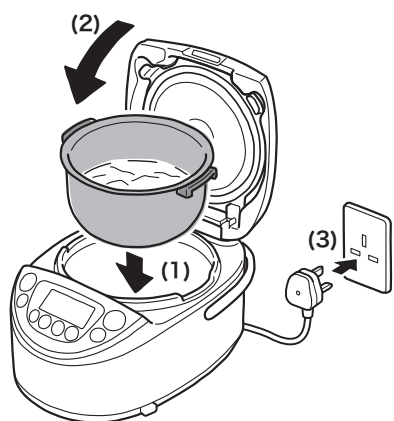

2 将内锅装入本体，关闭上盖，将电源插头插入插座。


3 按下 [◀] 或者 [▶]，选择“Cake”。

◇ 初始设定为40分钟。

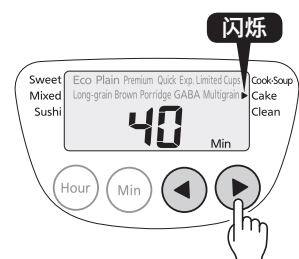

4 按下 [Hour] 或者 [Min]，调整加热时间。

- ◇ 可以5分钟为单位，在5~80分钟范围内进行设定。
- ◇ 每按一次 [Hour] 增加5分钟，每按一次 [Min] 减少5分钟。
- ◇ 按住不放可以快速调整时间。

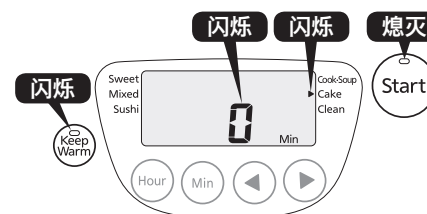

5 按下 [Start]。

◇ 开始加热。

⚠ 注意

- 烹调中途不要打开上盖。

6 做好后，打开上盖，用竹签刺向蛋糕中间。

- ◇ 做好后，“哔-”的声音响8次，保温指示灯和“0”闪烁。
- ◇ 如果面团没有粘在竹签上，说明内部已烤熟。
- ◇ 面团粘在竹签上时，在保温指示灯闪烁的状态按下 [Hour] 调整追加的加热时间，然后按下 [Start]。（最多可追加3次，每次15分钟。）

⚠ 注意


- 通过追加进行加热前，不要按 [Cancel]。以免保温指示灯停止闪烁，无法继续烤制。如不慎按下此键，按照以下步骤进行加热。
- (1)取出内锅，放在湿布上。
- (2)在打开本体的上盖的情况下放置10分钟左右，冷却本体和内锅。
- (3)重新将内锅装入本体。
- (4)根据P.78的③开始的要领进行加热。

7 用隔热手套等取出内锅，取出蛋糕，使其冷却。

◇ 制作蛋糕后，请按 [Cancel]，去除异味。（清洗方法→P.87）

⚠ 注意

- 取出内锅时，务必使用隔热手套等，注意不要直接用手接触。以免造成烫伤。
- 做好后立刻取出蛋糕。如果放置不管，内盖上附着的水蒸气会滴下来变得黏糊糊的。

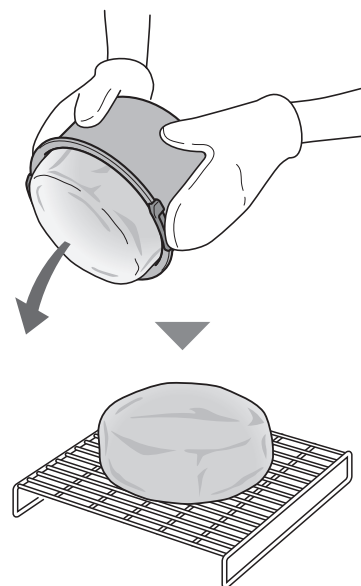

食谱指南

- 本食谱指南中使用的量杯容量为约0.18L（附带的量杯）。
- 大勺容量为15mL。 • 小勺容量为5mL。
- 如果酱油、甜料酒等调料过多，可能导致做出的米饭不可口。
- * 煮免洗米时，无需进行淘米。 * 各菜单记载的卡路里数值是大致标准。

Mixed 菜单

什锦饭

- 材料(6人份)
- 米…3杯
 - 海带…3cm方块1片
 - 混合调料 [酱油…2大勺、料酒…1大勺、甜料酒…1/2大勺、盐…1/2小勺]
 - 鸡腿肉…60g
 - 油炸豆腐…1/2片
 - 胡萝卜…40g
 - 牛蒡…35g
 - 魔芋…1/8块
 - 干香菇…2块
 - 豌豆角…8块
 - 料酒、酱油、盐、醋…均适量

- 做法
- (1)鸡腿肉切成1cm方块，各加入少许料酒、酱油进行腌制。
 - (2)油炸豆腐去油后纵向对半切开，然后切碎。
 - (3)胡萝卜去皮，切成3cm长的略粗的细条。
 - (4)用菜刀背面刮掉牛蒡皮，将牛蒡削成薄片后泡在醋水里。
 - (5)魔芋在水里煮4~5分钟后，用清水洗净，切成与胡萝卜同样的大小。
 - (6)干香菇用水泡软，去蒂切丝。
 - (7)豌豆角去掉筋，用盐水煮过后，过冷水使其不变色，然后切成丝。
 - (8)用内锅淘米，加然后入混合调料，并加水至“Premium”的刻度线3，充分混合搅拌后将除豌豆角以外的食材和海带加到上面，选择“Mixed”菜单烹煮。
 - (9)第(8)步完成后，取出海带，加入豌豆角，搅拌均匀后盛入容器。



322kcal/1人份


- 注意
- 请根据食材的种类调整水量。
 - 如果一开始就加入食材，请确保食材的量不超过米重量的约45%。食材过多可能导致煮出的米饭不可口。（1杯米对应的食材约为70g以下）

Sweet 菜单

虾仁板栗糯米饭

- 材料(6人份)
- 糯米…3杯
 - 干虾…10g
 - 松子…1小勺
 - 鸡骨头汤…300mL
 - 猪肉腌制料 [料酒…2小勺、酱油…2小勺、姜汁…1小勺]
 - 混合调料 [料酒…3大勺、酱油…3大勺、砂糖…1小勺]
 - 青葱（切小段）…3根份
 - 五花肉…110g
 - 笋…20g
 - 板栗（仁）…6个
 - 干香菇…2块
 - 胡萝卜…10g
 - 生姜（切丝）…10g
 - 猪油或色拉油…2大勺

- 做法
- (1)分别将干香菇、干虾泡发，笋焯水。（泡发干香菇、干虾的汁水保留待用。）
 - (2)将猪肉切成1cm的方块，使用腌制料调味。将胡萝卜、香菇、笋切成1cm的方块。
 - (3)在平底锅里放猪油加热，翻炒第(2)步的食材，然后放到冷却。
 - (4)在内锅淘洗糯米，然后倒入第(1)步泡发的干香菇的汁水和干虾的汁水、混合调料，加入鸡骨头汤至“Sweet”刻度线3，搅拌均匀。
 - (5)将第(3)步的食材和干虾、松子、姜丝放在第(4)步的食材上，选择“Sweet”菜单进行烹煮。
 - (6)煮好后，加入板栗并搅拌均匀，然后盛入容器，撒上青葱。

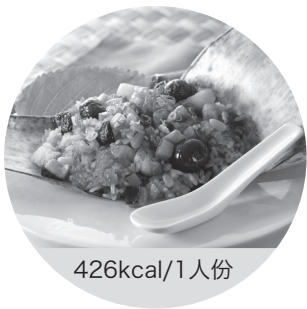

426kcal/1人份

Sushi 菜单

手卷寿司

- 材料(5人份)
- 寿司饭 [米…3杯、海带…3cm方块1片]
 - 混合醋 [醋…4又1/2大勺、砂糖…1又1/2大勺、盐…1又1/2小勺]
 - 烤海苔…适量
 - 食材（根据个人喜好选择） [金枪鱼、幼鲷鱼、三文鱼、鱿鱼、虾、鱼籽、星鳗、黄瓜、萝卜苗、绿芦笋、胡萝卜、煎蛋、腌黄萝卜、青紫苏等…适量]
 - 酱油…适量 • 芥末…适量

- 做法
- (1)用内锅淘米后，将水加到“Sushi”的刻度线3，然后铺上海苔，选择“Sushi”菜单进行烹煮。
 - (2)将醋、砂糖、盐放入碗中，调成混合醋。
 - (3)将煮好的饭放入浅木桶，淋上第(2)步的混合醋，然后一边用饭勺均匀搅拌，一边用扇子等扇风使其冷却。
 - (4)将食材分别切成长条。
 - (5)把(3)的米饭盛到烤海苔上，放入自己喜欢的食材，将海苔卷起。

- 注意
- 不要使用内锅混合米饭和醋。

- 要点
- 将海苔以拧干水分的湿布擦干。
 - 浅木桶应事先用醋水稍微沾湿。



341kcal/1人份
(仅寿司饭的卡路里)

Multigrain 菜单

鱼干和羊栖菜杂粮米饭

- 材料(6人份)
- 米…3杯
 - 杂粮米…4又1/2大勺（40g）
 - 鱼干（梭子鱼、方头鱼等）…1条
 - 青葱（切小段）…2根份
 - 煮羊栖菜芽 [羊栖菜芽（干燥）…12g、油炸豆腐…1/2片、胡萝卜…30g、芝麻油…1大勺]
 - 汤汁 [砂糖…1大勺、甜料酒…1大勺、料酒…1大勺、酱油…2大勺、高汤…200mL]

- 做法
- (1)用内锅淘米后，将水加到“Plain”刻度线3的位置，然后将杂粮米放在米上。放入杂粮米后，再倒入3大勺水，然后使用“Multigrain”菜单进行烹饪。
 - (2)烤好鱼干后，去掉鱼骨，将鱼肉打散。
 - (3)泡发羊栖菜芽后用水洗净，然后挤出水分。油炸豆腐去油切碎，胡萝卜也切碎。
 - (4)在小锅里倒入芝麻油，将第(3)步的材料炒一下，然后加入汤汁进行熬煮。
 - (5)去掉第(4)步的汤汁，与第(2)步煮好的食材一起放入煮好的饭中搅拌。
 - (6)将饭盛入容器，撒上青葱。



362kcal/1人份

食谱指南

Porridge
菜单

海鲜勾芡粥

材料(4人份)

- 米…1杯

• 鱿鱼…60g

• 白葱…1/2根

• 色拉油…适量

• 虾…8只

• 胡萝卜…20g

• 中华高汤…400mL

• 海鲜腌制料【料酒、盐、胡椒…各少许、搅匀的蛋液、淀粉…各1/2小勺】

• 芡粉的调料【料酒…2大勺、砂糖…1小勺、胡椒…少许、蚝油…1小勺、盐…2/3小勺】
- 盐…1/3小勺

• 干扇贝…4个

• 木耳…5g

• 水溶淀粉…3大勺

• 小白菜…1颗

• 生姜…10g

• 芝麻油…2小勺

做法

- (1)用内锅淘米后，加盐，加水至“Porridge・Firm”的刻度线1，搅拌均匀，选择“**Porridge**”菜单，将加热时间调为60分钟来烹煮。

(2)在鱿鱼上切出口，切成一口大的薄片。剥掉虾壳，去掉虾线，朝横向对半切薄干扇贝。

(3)对(2)的食材进行处理，放置10分钟左右，涂上搅匀的蛋液和淀粉。
- (4)将小白菜切成一口大，将白葱切成大块，切薄胡萝卜、生姜。

(5)用温水泡发木耳，去掉硬的根部。

(6)用平底锅加热色拉油，炒(3)、(4)、(5)的食材，加入芡粉的调料和中华高汤。

(7)煮开后略微炖煮，用水溶淀粉调成浆糊，倒入芝麻油。

(8)做好的成品(1)盛入容器，浇上(7)的芡粉。

⚠ 注意

• 鱼贝类煮过火会变硬。快速地做成芡粉吧。



261kcal/1人份

Brown
菜单

味增黄油酱炒鲑鱼糙米拌饭

材料(6人份)

- 糙米…3杯

• 大蒜（切末）…1片份

• 生姜（切末）…1片份

• 黄油…25g

• 混合调料【料酒…1又1/2大勺、砂糖…1/2大勺、甜料酒…1又1/2大勺、酱油…1/2大勺、味增…30g】

• 青葱（切小段）…3根份
- 芦笋…3根

• 灰树花…100g

• 洋葱…1/2颗

• 胡萝卜…50g
- 薄盐鲑鱼…3片

• 色拉油…适量

做法

- (1)用内锅淘洗糙米后，加水至“Brown”的刻度线3，选择“**Brown**”菜单烹煮。

(2)用平底锅加热色拉油，煎好鲑鱼后切块。

(3)剥开灰树花后切成2cm的宽度，并将洋葱、胡萝卜切成粗末。

(4)剥去芦笋坚硬部分的皮，取下叶鞘，切成1cm的宽度。
- (5)在平底锅上融化黄油，放入大蒜、生姜煸炒。加入第(3)步的食材煸炒至表面变软，然后加入第(4)步的食材继续煸炒。

(6)往第(5)步的食材加入混合调料后一直炒至收汁，然后放入青葱和第(2)步中制作的食材。

(7)将刚煮好的米饭和第(6)步的食材混合在一起，盛入容器中。

《要点》

• 可依个人喜好洒上七味辣椒粉。



422kcal/1人份

Cook・Soup
菜单

蔬菜鸡肉浓汤

材料(1.0L型：4人份/1.8L型：6人份)

	【1.0L型】	【1.8L型】
• 鸡翅	8根	12根
• 胡萝卜（小）	1根	1又1/2根
• 芹菜	1根	1又1/2根
• 洋葱（中）	1个	1又1/2个
• 土豆（小）	2个	3个
• 水	650mL	1,000mL
• 西式浓汤粉（颗粒）	1又1/2大勺	2又1/3大勺
• 盐、胡椒	各少许	各少许

做法

- (1)切除鸡翅的翅尖。

(2)胡萝卜切成4等分，芹菜去筋后切成5cm长，洋葱切成8等分，土豆切成4等分。
- (3)将第(1)步和第(2)步的食材放入内锅，加入水、西式浓汤粉、盐、胡椒混合均匀，然后选择“**Cook・Soup**”菜单，将加热时间设为60分钟，按【Start】。

(4)将做好的成品盛入容器。



156kcal/1人份

Cake
菜单

海绵蛋糕

材料(1个份)

	【1.0L型】	【1.8L型】
• 鸡蛋（M）	4个	5个
• 砂糖（绵白糖）	120g	150g
• 低筋粉	120g	150g
• 无盐黄油	40g	50g
• 无盐黄油（涂内锅用）	适量	适量
<装饰用>		
• 鲜奶油（动物性）	200mL	250mL
• 细砂糖	24g	30g
• 草莓、蓝莓	各适量	各适量

做法

- (1)鸡蛋回温到室温，低筋粉过筛。预先融化无盐黄油。

(2)将鸡蛋、砂糖放入碗中，轻轻混合搅拌。

(3)将第(2)步的碗放入40摄氏度的热水中隔水混合搅拌，直至看不到砂糖颗粒，搅拌好后从热水中取出。

(4)用打蛋机高速打发第(3)步的食材。打到发白后，拿起打蛋器，查看蛋液是否呈带状缓慢落下。最后以低速打发1分钟左右，打出泡沫。

(5)将第(1)步的低筋粉加入第(4)步的食材，用橡胶刮刀大幅度混合搅拌，直至看不到粉的颗粒。然后加入融化的无盐黄油混合。
- (6)将第(5)步的面团倒入涂过一层薄薄的黄油的内锅，在柔软的布上排出空气，然后选择“**Cake**”菜单，烤35分钟（1.8L型为40分钟）。

(7)烤完后，从内锅中取出冷却，用加入细砂糖后起泡的鲜奶油和草莓、蓝莓进行装饰。

* 如烤制时间不够，请在保温指示灯闪烁的状态按下【Hour】调整追加的加热时间，然后按下【Start】继续烤。

⚠ 注意

• 做完蛋糕后，请去除异味。（清洗方法→P.87）




309kcal/1/8块
（1.0L型）
不包括水果

清洁保养方法

- ◇如需进行本手册中未记录的修理，请委托经本公司认可的修理技术人员。
- ◇请务必拔掉电源插头，等待本体、内锅、内盖冷却后再进行清洁保养。
- ◇使用后，为了保持锅体干净，请务必在当日内清洁保养。
- ◇烹调后，制作蛋糕后容易有异味残留，请务必在当日进行清洗，去除异味。→P.87

要准备的用具、洗涤剂

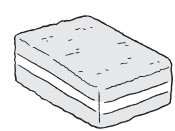

柔软的海绵



柔软的布

 
家用的中性厨房用合成清洗剂
(餐具用、烹调器具用)

不能使用的东西

- 尼龙刷、金属钢铲等
- 海绵的研磨粒子部分



不要用研磨粒子部分清洗。以免造成内锅的氟涂层、内盖的涂料剥落。




研磨粒子部分

- 中性以外的洗涤剂
- 稀释剂类、去污剂、漂白剂
- 化学抹布
- 热水
- 洗碗烘干机、烘碗机
- 密封胶海绵

每次使用后应清洁的物品

1. 用海绵蘸以凉水或温水稀释的洗涤剂，然后用水清洗。
2. 用干布擦拭水分，使其充分干燥。

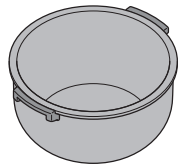

内锅




饭勺



量杯



汤勺

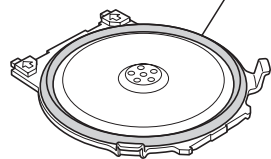

内盖

内盖垫圈
保持安装在内盖上的状态进行清洗。
*若取下将无法再次安装。→P.86

△注意

- 为防止腐蚀、异味，请随时保持内锅与内盖洁净。
- 洗涤剂残留会导致树脂等材料老化、变色，务必冲洗干净。（仅限可清洗的零部件）
- 混合杂粮米煮饭后，务必清洁保养内盖。以免造成堵塞引起上盖打不开等故障，或者导致内容物溢出、米饭不可口。
- 清洗内盖后，立即用干布将水分擦干。若残留水滴，可能会留下水滴的痕迹。
- 务必将内盖上粘附的饭粒等清除干净。以免造成上盖无法盖紧，或因煮饭中蒸汽漏出、上盖打开内容物喷出，导致烫伤、外伤。
- 不要将餐具等放入内锅将内锅作为洗碗盆使用。此外，在干燥内锅时，不要将其覆盖到餐具上等，不要重叠放置。以免氟涂层面损伤或剥落。




脏污后应立即清洁保养的部位

用拧干的布擦净本体（外侧、内侧）。
使用干布擦拭电源线、电源插头。

止动件单元

附着了饭粒等时，清除干净。

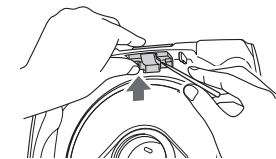

上框

如附着了煮糊的饭粒等，清除干净。

温度传感器

如附着了煮糊的饭粒等，清除干净。
*如难以清除，请用市面上销售的砂纸（320号左右）将其清除，然后用拧干的布擦拭。

上盖大垫圈

附着了饭粒等时，清除干净。
*若取下将无法再次安装。→P.86

上盖传感器

用布或棉签等沾水后轻轻擦拭。

上盖小垫圈

附着了饭粒等时，清除干净。
→P.50

电源线

电源插头

吸气孔、排气孔的清洁保养

用棉签等清除灰尘、垃圾。

吸气孔

排气孔


△注意

- 绝对不要让水进入本体内部。以免造成触电、漏电、本体变形或引起火灾、故障。
- 不要在吸气孔、排气孔沾有灰尘的状态下使用。以免造成本体内部温度上升，导致故障、火灾。

各部的拆卸、安装方法


内盖的拆卸

握住内盖的提钮，朝正面拉动，将其拆下。

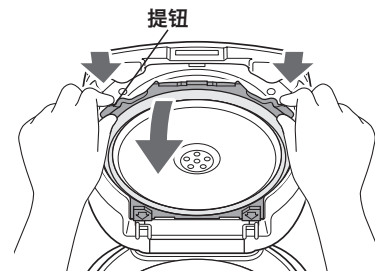


内盖的安装

1 将内盖的左右的别扣完全嵌入槽中。

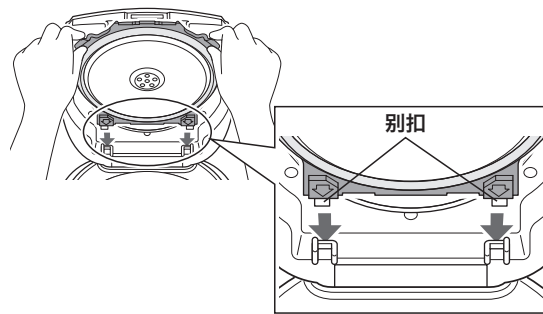


2 一直插入到发出“咔嚓”声。

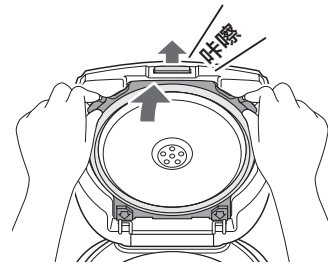

上盖小垫圈的安装

上盖小垫圈脱落时，切实插进里面。

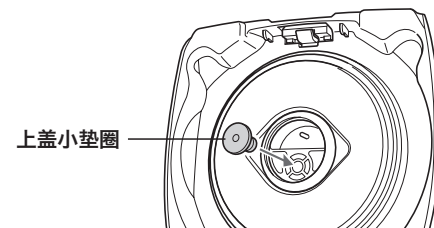


△注意

- 不要拉扯上盖大垫圈、内盖垫圈。若取下将无法再次安装。
- 若上盖大垫圈、内盖垫圈脱落，请咨询购买本产品的销售店。
- 不要拆下上盖大垫圈、内盖垫圈。不要强行按压或者拉扯。以免导致蒸汽漏出或上盖无法打开，或者导致故障。


内盖垫圈

上盖大垫圈

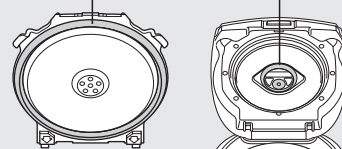


清洗方法

在意异味时，在烹调后、制作蛋糕后，进行清洗。

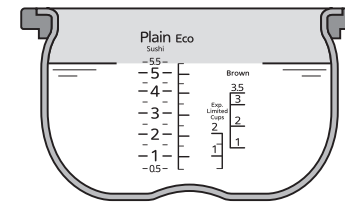

1 向内锅里加水，装入本体。

- ◇ 1.0L型加水到“白米”的刻度5.5，1.8L型加水到“白米”的刻度10。
- ◇ 内锅装入本体内，将电源插头插入插座。→P.67
- ◇ 在意异味时，如果在水中加入柠檬酸（约20g）进行搅拌，可更好地去除异味。

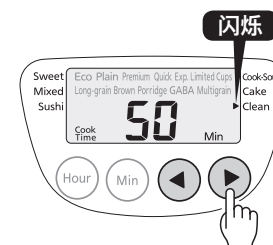

2 按下 [◀] 或者 [▶]，选择“Clean”。



3 按下 [Start]。（开始清洗）



4 在清洗结束后发出“哔-...”的8次提示音，▶和保温指示灯闪烁。

- ◇ 按下 [Cancel]，从插座拔下电源插头。
- ◇ 等待本体冷却后，倒出内锅中残留的热水，进行清洁保养。→P.84

△注意

- 清洗后内锅和本体温度高，需要注意。
- 连续清洗时，务必等本体冷却后进行。由于本体处于高温状态，可能导致清洗不顺利。
- 有些异味可能难以彻底清除。如无法彻底清除，请咨询购买本产品的销售店。

做出的米饭不可口时

做出的米饭不可口时，请调查以下几点。

首先确认!

• 温度传感器、上盖传感器粘附煮糊的饭粒、水滴等

• 内锅变形

• 没有擦拭内锅外侧的水滴

• 上盖没盖紧

• 内盖、垫圈上附着了饭粒等

• 清洁保养不够彻底

• 中途停电了

• 弄错了菜单

煮饭的难题

故障现象	大米	水	煮饭
蒸汽漏出	• 弄错了米量、食材量、杂粮米量 • 超过最大煮饭容量煮饭 →P.56 ~ 62・97	• 加水量有误 →P.56~62	
溢出	• 弄错了米量、食材量、杂粮米量 • 混入了大量碎米 • 超过最大煮饭容量煮饭 →P.56 ~ 62・97	• 加水量有误 →P.56~62 • 未充分淘米 (免洗米除外) • 淘米后，将捞出的大米长时间放置	• 混合了食材、杂粮米煮饭 • 调料没有搅拌均匀
花费较长时间才煮好	• 弄错了米量、食材量、杂粮米量 • 超过最大煮饭容量煮饭 →P.56 ~ 62・97	• 加水量有误 →P.56~62	• 连续煮饭→P.68 • 中断保温后马上煮饭 →P.68
形成了薄膜	• 纸糊状的薄膜是淀粉被溶解后干燥所形成，并非有害物质。		

88

煮饭的难题

故障现象	大米	水	煮饭
米饭粘在内锅上	• 柔软的米饭或有粘性的米饭比较容易粘在锅上。		
有糠味、异味		• 未充分淘米 (免洗米除外)	• 将预约煮饭的时间设定为了12小时以上
过软	• 弄错了米量、食材量、杂粮米量 • 混入了大量碎米	• 加水量有误 →P.56~62 • 使用碱性离子水 (pH9以上) 煮饭 • 使用了热水 (约35度以上) 淘米、调整水量 • 淘米后长时间浸泡 • 淘米后，将捞出的大米长时间放置	• 进行了预约煮饭 • 混合了食材、杂粮米煮饭 • 调料没有搅拌均匀 • 没有充分翻动煮好的米饭 • 连续煮饭→P.68 • 中断保温后马上煮饭→P.68
过硬	• 弄错了米量、食材量、杂粮米量 • 超过最大煮饭容量煮饭 →P.56 ~ 62・97	• 加水量有误 →P.56~62 • 使用矿泉水等硬度高的水煮饭 • 使用了热水 (约35度以上) 淘米、调整水量	• 混合了食材、杂粮米煮饭 • 调料没有搅拌均匀 • 没有充分翻动煮好的米饭 • 连续煮饭→P.68 • 中断保温后马上煮饭→P.68
形成锅巴、煮糊	• 弄错了米量、食材量、杂粮米量 • 超过最大煮饭容量煮饭 →P.56 ~ 62・97 • 混入了大量碎米	• 加水量有误 →P.56~62 • 使用碱性离子水 (pH9以上) 煮饭 • 使用矿泉水等硬度高的水煮饭 • 使用了热水 (约35度以上) 淘米、调整水量 • 未充分淘米 (免洗米除外) • 淘米后长时间浸泡 • 淘米后，将捞出的大米长时间放置	• 进行了预约煮饭 • 混合了食材、杂粮米煮饭 • 调料没有搅拌均匀
半生半熟、夹生	• 弄错了米量、食材量、杂粮米量 • 超过最大煮饭容量煮饭 →P.56 ~ 62・97 • 混入了大量碎米	• 加水量有误 →P.56~62 • 使用了热水 (约35度以上) 淘米、调整水量	• 混合了食材、杂粮米煮饭 • 调料没有搅拌均匀 • 连续煮饭→P.68 • 中断保温后马上煮饭→P.68 • 使用后未取消保温就按下了 [Start] 并放任不管

简体中文

89

煮饭的难题

故障现象	大米	水	煮饭
保温中的米饭有异味	弄错了米量、食材量、杂粮米量	未充分淘米（免洗米除外）	- 对白米、免洗米以外的食材进行了保温 - 添加了冷饭 - 将饭勺放在锅内一起保温 1.0L型：1杯以下、1.8L型：2杯以下的量进行了保温或者再加热→P.70・71 - 持续保温超过24小时 - 在内锅里有米饭的情况下取消了保温 - 将预约煮饭的时间设定为了12小时以上 - 烹调后或者制作蛋糕后，没有清除异味
保温中的米饭变色	弄错了米量、食材量、杂粮米量	未充分淘米（免洗米除外）	- 没有充分翻动煮好的米饭 - 对白米、免洗米以外的食材进行了保温 - 将米饭围成一圈后进行保温 - 添加了冷饭 - 将饭勺放在锅内一起保温 1.0L型：1杯以下、1.8L型：2杯以下的量进行了保温或者再加热→P.70・71 - 持续保温超过24小时 - 再加热超过3次
保温中的米饭变干	弄错了米量、食材量、杂粮米量	加水量有误→P.56~62	- 没有充分翻动煮好的米饭 - 对白米、免洗米以外的食材进行了保温 - 将米饭围成一圈后进行保温 - 添加了冷饭 - 将饭勺放在锅内一起保温 1.0L型：1杯以下、1.8L型：2杯以下的量进行了保温或者再加热→P.70・71 - 持续保温超过24小时 - 再加热超过3次
保温中的米饭发粘	弄错了米量、食材量、杂粮米量	加水量有误→P.56~62	- 没有充分翻动煮好的米饭 - 对白米、免洗米以外的食材进行了保温 - 将米饭围成一圈后进行保温 - 添加了冷饭 - 将饭勺放在锅内一起保温 1.0L型：1杯以下、1.8L型：2杯以下的量进行了保温或者再加热→P.70・71 - 持续保温超过24小时 - 在内锅里有米饭的情况下取消了保温 - 将预约煮饭的时间设定为了12小时以上
再加热后的米饭变干	弄错了米量、食材量、杂粮米量	加水量有误→P.56~62	- 再加热超过3次 1.0L型：1杯以下、1.8L型：2杯以下的量进行了保温或者再加热→P.70・71 - 将刚煮好的热饭进行了再加热

烹调、蛋糕做得不可口时

烹调、蛋糕做得不可口时，请调查以下几点。

首先确认!

- 烹调了食谱指南上没有记载的菜肴
- 温度传感器、上盖传感器粘附煮糊的饭粒、水滴等
- 内锅变形
- 没有擦拭内锅外侧的水滴

烹调的难题

故障现象	材料	时间
煮不熟	- 弄错了材料的种类、分量 - 放入了超过最大规定量的材料	烹调时间短
溢出	- 弄错了材料的种类、分量 - 放入了超过最大规定量的材料 - 放入了少于最少规定量的材料	
煮干	- 弄错了材料的种类、分量 - 放入了少于最少规定量的材料	烹调时间过长
煮糊	- 弄错了材料的种类、分量 - 放入了超过最大规定量的材料 - 放入了少于最少规定量的材料	烹调时间过长

烤蛋糕时的难题

故障现象	材料	时间
烤不熟	弄错了材料的种类、分量	烤制时间过短
溢出	弄错了材料的种类、分量	
烤焦	弄错了材料的种类、分量	烤制时间过长
烤出的颜色不均匀	请确认P.91的“首先确认!”	
表面发粘		没有立刻取出烤好的蛋糕，将其放置不管

认为发生故障时

◇在委托修理前，请确认。

故障现象	请确认这里	请这样处理	参照 页面
•无法煮饭 •无法烹调 •无法制作蛋糕	→ 电源插头是否已插入插座？	→ 将电源插头切实插入插座。	→ 67 72 74 76 78
•未按照预约时间煮好	→ 当前时间是否正确设置？	→ 正确设置时间。	→ 65
	→ 确认P.88“花费较长时间才煮好”的项目，并进行处理。		→ 88
	→ 如设定的时间短于预约时间的标准，则可能无法在预约的时间完成煮饭。		→ 56~62
•不能设定预约煮饭、 预约吸水	→ 显示时间是否闪烁“0:00”？	→ 设置当前时间。	→ 65
	→ 是否选择了“Quick”、“Exp. Limited Cups”、“Mixed”、“Sweet”、“Quick Cook”、“Cook・Soup”、“Cake”、“Clean”？这些菜单无法进行预约设定。		→ 73 75
•无法再加热	→ 按下 [Start] 后，发出“哔哔”的提示音。	→ 米饭凉了。米饭温度约55度以下时无法再加热。	→ 71
	→ 保温指示灯是否已熄灭？	→ 按下 [Keep Warm]，确认保温指示灯点亮后，再次按下 [Start]。	
	→ 是否选择了“Porridge”、“Brown Porridge”、“Cook・Soup”、“Cake”、“Clean”？这些菜单无法进行再加热。		
•液晶显示屏起雾	→ 垫圈类、内锅边缘是否粘附了煮糊的饭粒、米粒等？	→ 请清除干净。	→ 88 91
	→ 内锅外侧是否被打湿？	→ 请用干布擦拭干净。	
	→ 受到电饭煲本体内部和室温的温差影响，液晶显示屏上可能会出现凝结现象。只需使用几次就可以得到改善。没有改善时，请委托购买本产品的销售店修理。		→ —
•在煮饭中、保温中、 再加热中发出声音	→ “呼—”声音为风扇运转的声音，并非故障。 “吱—”或“叽哩哩哩…”声为IH运行的声音，并非故障。		→ 64
	→ 出现与上述完全不同的声音。	→ 请委托购买本产品的销售店修理。	→ —

故障现象	请确认这里	请这样处理	参照 页面
•按下 [Start] 时或者 按下 [Keep Warm] 时，发出了 “哔哔”的提示音	→ 内锅是否装好？	→ 装好内锅。	→ 67
•一直显示剩余时间 “○○分钟”不变， 或者显示的时间迅速 变化	→ 随着煮饭条件、调整内容的设定变更，剩余时间的显示未被更新，或者不是慢慢改变，而是迅速变短或者变长。哪种现象都不是故障。		→ 68
	→ 是否连续煮饭，或者中断保温后马上煮饭等，在本体温度高的状态进行了煮饭？	→ 务必冷却本体后煮饭。	→ 68 88
•进行预约煮饭、吸水 时，发出“哔哔”的 提示音	→ 按下 [Timer] 后约30秒内未进行任何操作，就会发出提示音，但是仍可继续预约。		→ 73 75
•水或米进入了本体内	→ 可能导致故障，请委托购买本产品的销售店修理。		→ —
•调整时刻时，按下 [Hour] 或 [Min] 也无法进入时间设定 模式	→ 煮饭（烹调）中、保温中、设定预约中、预约煮饭和吸水中、再加热中、追加加热中，选择了“Porridge”、“Cook・Soup”、“Cake”时，不能调整时间。		→ 65
•保温指示灯闪烁 •未保温	→ 是否选择了“Cake”、“Clean”菜单？	→ “Cake”、“Clean”不能保温。如果放置不管，蛋糕会变得黏糊糊的，请尽早食用。	→ 70 79
•液晶显示屏上有线状 黑色浸斑	→ 液晶显示屏有时会因静电出现浸斑，并非故障。	→ 在意时，请用拧干的布擦掉。静电去除后，浸斑将减轻。	→ 64
•烹调保温中“6”闪烁	→ 是否在烹调后持续保温6小时以上？超过6小时后，“6”闪烁。（请勿在烹调后保温6小时以上）		→ 77
•保温中按下 [Hour]，“24” 闪烁	→ 是否将米饭保温24小时以上？保温时间超过24小时，会闪烁“24”提示。		→ 70
•插入电源插头时，液 晶显示屏上“0:00” 闪烁	→ 如果重新插入电源插头，当前时间、预约时间、保温经过时间的记忆是否消失？	→ 锂电池没电了。（可进行通常的煮饭）请委托购买本产品的销售店修理。	→ 64
	→ 同时按下了 [Cancel] 和 [Timer]。	→ 请正确调整时间。	→ 65

认为发生故障时

故障现象	请确认这里	请这样处理	参照 页面
●上盖无法盖上或煮饭中上盖打开	→ 上框、内盖垫圈、开关片托周围是否附着有饭粒、米粒等？	→ 请清除干净。	→ 85
●在上盖与本体之间有间隙	→ 关闭上盖时，在结构上会在上盖与本体之间产生间隙，但是只要煮饭和保温中不漏蒸汽，就不是异常。		→ —
●上盖无法关闭	→ 是否装好了内盖？	→ 请装好内盖。	→ 86
●水蒸气积聚在上框	→ 刚煮好饭后或保温中，水蒸气可能凝聚在上框，但这并非故障。如上框凝聚了水蒸气，请用干布擦拭干净。		→ —
	→ 是否选择了“Eco”？ 选择“Eco”煮饭时，可能会凝聚较多水蒸气。 如希望减少水蒸气，请选择“Plain”煮饭。		→ 56
●按下按键后没有反应	→ 电源插头是否已插入插座？	→ 将电源插头切实插入插座。	→ 65·67 72·74 76·78
	→ 保温指示灯是否点亮？	→ 按下 [Cancel]，取消保温，然后进行操作。	→ 70
●电源插头有火花飞溅	→ 插拔电源插头时出现小火花是IH产品的特征，并非故障。		→ —
●产生树脂等的异味	→ 产品刚开始使用时会产生树脂等的异味，过段时间即会自动消失。在意时，请参照“清洗方法（在意异味时，在烹调后、制作蛋糕后，进行清洗）”进行清洁保养。		→ 87
●塑料部分有线状、波浪状的部位	→ 属于树脂成型时产生的痕迹，不影响使用上的品质。		→ —
●米饭没有煮熟 ●液晶显示屏显示“dE no”	→ 按下 [Cancel]，会显示如下图所示的图案。 	→ 产品进入了测试模式。请咨询购买本产品的销售店。	→ —


错误显示和处置方法

显示	请这样处理	参照 页面
●显示“E:02”，发出“哔哔哔哔哔哔...”声 	如将本体放置在地毯等物品上，可能导致吸气孔和排气孔堵塞，温度上升，按下按键后没有反应。此外，将本体放在室温较高的地方使用，也可能导致温度上升，出现同样的症状。此时，请按以下步骤进行处理。 (1)拔出电源插头。 (2)移到不会堵塞吸气孔、排气孔且室温较低的地方。 (3)重新将电源插头插入插座，进行按键操作。 *如果还是没有反应，则是本体出现异常。请拔出电源插头后，委托购买本产品的销售店进行修理。	→ 52
●显示“E:11” 		
●显示“E:02”、“E:11”之外“E”开头的代码		
	可能存在故障。请拔出电源插头后，咨询购买本产品的销售店。	→ —

关于树脂部件
接触热和蒸汽的树脂部件可能会随着使用而出现损坏。请咨询购买本产品的销售店。

焖饭时间的调整方法（“Exp. Limited Cups”菜单）

*请在电源插头插入插座的状态下完成以下①~⑦步，每一步的操作都在30秒内完成。30秒以上没有任何操作就会返回显示当前时间，无法继续设定。如需再次设定，请重新来过。
*煮饭（烹调、清洗）中、保温中、设定预约中、预约煮饭和吸水中、再加热中、追加加热中不能变更设定。
*在中途停止调整时，请按下 [Cancel] 。

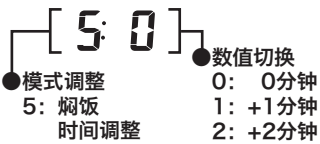

想调整焖饭时间时

想选择“Exp. Limited Cups”菜单调整煮饭时的焖饭时间时，请按照以下步骤调整时间。

- 1 按下 [◀] 或者 [▶]，选择“Plain”。

2 按住 [Timer] 约3秒以上。


3 按下 [Hour]，将模式调为 [5]。

- 4 按下 [Start]。

5 按下 [Hour] 或者 [Min]，调整时间。
调整焖饭时间
0: 0分钟（初始设定）
1: +1分钟
2: +2分钟


6 按下 [Start]。

7 如果按住 [Timer] 约3秒以上，设定完成，会返回显示当前时间。

音量调整方法

*请在电源插头插入插座的状态下完成以下❶~❷步，每一步的操作都在30秒内完成。30秒以上没有任何操作就会返回显示当前时间，无法继续设定。如需再次设定，请重新来过。

*煮饭（烹调、清洗）中、保温中、设定预约中、预约煮饭和吸水中、再加热中、追加加热中不能变更设定。

*在中途停止调整时，请按下 [Cancel] 。



想调整音量（按键音、提示音）时


如果您对按键音、提示音的音量不满意，请按以下步骤进行调整。

❶ 按下 [◀] 或者 [▶]，选择“Plain”。

❷ 按住 [Timer] 约3秒以上。




❸ 按下 [Hour]，将模式调为 [4] 。

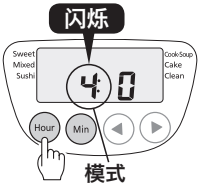

❹ 按下 [Start] 。

❺ 按下 [Hour] 或者 [Min]，调整音量。

音量调整
0: 大（初始设定）
-1: 中
-2: 小

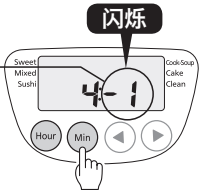

❻ 按下 [Start] 。

❼ 如果按住 [Timer] 约3秒以上，设定完成，会返回显示当前时间。

规格

规格			1.0L (5.5杯) 型	1.8L (10杯) 型
电源			220-230V~/50-60Hz	
额定功率 (W)			1088	1206
煮饭容量 (L)	Plain		0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Premium		0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Eco		0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Sushi		0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Quick		0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Exp. Limited Cups		0.09~0.36 (0.5~2杯)	0.18~0.54 (1~3杯)
	Long-grain		0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Multigrain		0.09~0.72 (0.5~4杯)	0.18~1.44 (1~8杯)
	Mixed		0.09~0.72 (0.5~4杯)	0.18~1.26 (1~7杯)
	Sweet		0.18~0.54 (1~3杯)	0.36~0.9 (2~5杯)
	Porridge	Firm	0.09~0.18 (0.5~1杯)	0.09~0.36 (0.5~2杯)
		Soft	0.09 (0.5杯)	0.09~0.27 (0.5~1.5杯)
	Brown Porridge	Firm	0.09~0.18 (0.5~1杯)	0.09~0.36 (0.5~2杯)
Soft		0.09 (0.5杯)	0.09~0.27 (0.5~1.5杯)	
Brown		0.18~0.63 (1~3.5杯)	0.36~1.08 (2~6杯)	
Brown GABA		0.18~0.63 (1~3.5杯)	0.36~1.08 (2~6杯)	
外形尺寸* (cm)		宽度	26.0	28.8
		长度	35.4	38.6
		高度	20.1	23.8
本体重量* (kg)			4.1	5.1
电源线的长度* (m)			1.5	

* 为大概数值。

●受室温、使用方法影响，时钟每个月可能会产生约30秒至120秒的误差。

●1杯=约150g。

中途停电时

若万一发生停电，再次通电后仍然能够正常工作。

停电时的状态	再次通电后的状态
预约煮饭和吸水中	定时器继续工作。 (如停电时间过长，导致超过了设定的时间，会在通电后立刻开始煮饭。)
煮饭（再加热）期间	继续煮饭（再加热）。可能会使煮好的米饭不可口。
保温中	停电超过30分钟时，取消保温。

关于消耗品、另购品的购买

- 垫圈类为消耗品。垫圈类的状态可能会因使用方法而异，但都会随着使用而出现老化。当脏污、异味、破损程度比较严重时，请咨询购买本产品的销售店。
- 内锅的氟涂层会随着使用而消耗、剥落。→P.55

目錄

前言

- 99-安全注意事項
- 104-選單介紹
- 111-各部名稱及附件
- 113-現在時刻的調整方法

基本煮飯方法

- 114-煮飯方法
- 118-關於保溫
- 119-再加熱方法

預約煮飯/預約浸泡

- 120-預約煮飯方法
- 122-預約浸泡方法

烹調、蛋糕

- 124-烹調方法 (Cook・Soup)
- 126-蛋糕的製作方法

食譜指南

- 128-食譜指南

清潔保養

- 132-清潔保養方法
- 134-各部位的安裝/拆卸方法
- 135-清洗方法

遇到困難時

- 136-覺得無法煮出美味可口的米飯時
- 139-覺得無法做出美味的菜餚、蛋糕時
- 140-認為可能故障時
- 143-錯誤顯示與應對方法

其他

- 143-燜飯時間的調整方法 (「Exp. Limited Cups」選單)
- 144-音量調整方法
- 145-規格
- 145-發生停電時
- 145-消耗性零件與另售品的購買方法

安全注意事項

使用前請仔細閱讀並請務必遵守。

- 此處所敘述的注意事項旨在防止對使用者或他人造成人身傷害或財產損失。屬於安全方面的重要內容，請務必遵守。
- 請勿撕下主體上所黏貼有關注意事項的貼紙。

使用以下標示區分並說明了無視標示內容、操作不當時產生的人身傷害或財產損失的程度。

**警告**

表示如果操作不當，可能導致使用者死亡或重傷^{*1}的內容。

**注意**

表示如果操作不當，可能會造成使用者受傷^{*2}或者出現財產損失^{*3}的內容。

^{*1} 重傷是指因失明、受傷、燙傷（高溫、低溫）、觸電、骨折或中毒等而留下後遺症的傷勢，以及需要住院或長期回診治療的傷勢。

^{*2} 傷害是指不需要住院或長期回診治療的受傷、燙傷或觸電等傷勢。

^{*3} 財產損失是指波及房屋、電器家具及家畜、寵物等的延伸性損失。

圖形符號的說明

- 

△ 符號表示警告、注意。具體注意內容會在圖形符號裡或者旁邊以圖片或文字表示。
- 

⊘ 符號表示該行為屬於禁止行為。具體禁止內容會在圖形符號裡或者旁邊以圖片或文字表示。
- 

● 符號表示強制行為或指示行為的內容。具體指示內容會在圖形符號裡或者旁邊以圖片或文字表示。

警告

- 

請勿使用額定電壓以外的電源。
＜否則＞可能導致火災或觸電。
- 

請單獨使用額定7A以上的插座。
如果與其他器具共用，多孔插座可能異常發熱，導致起火。
- 

電源線如果出現破損，請勿繼續使用。
此外，請勿損傷電源線。
（加工、過度彎曲、靠近高溫處、拉扯、扭轉、捆束、重壓或擠壓等）
可能導致火災或觸電。
- 

電源線插頭如有積塵，請仔細清除乾淨。
可能導致火災。
- 

若電源線損壞時，必須由製造商、其服務處或具有相關資格的人員加以更換以避免危險。
可能導致故障或事故。
- 

電源線插頭請切實插入到底。
可能導致觸電、短路、冒煙或起火。
- 

電源線或電源線插頭損壞，或電源插座鬆動時，請勿繼續使用。
可能導致觸電、短路或起火。
- 

請勿用濕手插拔電源線插頭。
可能導致觸電或受傷。
請勿用濕手觸碰本產品
- 

煮飯過程中/烹調過程中，請切勿打開鍋蓋。
可能導致內容物噴出溢出，造成燙傷或受傷。

安全注意事項

警告



請勿將臉或者手靠近蒸氣孔。
可能導致燙傷。特別要注意不要讓嬰幼兒碰觸。



孩童應受監護，以確保孩童不嬉玩電器。



本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者（包含孩童）使用，除非在對其負有安全責任的人員之監護或指導下安全使用。
可能導致燙傷、觸電或受傷。



此電器不得浸水。
可能導致觸電、短路或火災。




請勿改造。請勿讓非本公司專業修理技術人員對本產品進行分解或維修。
可能導致火災、觸電或受傷。




金屬物品，諸如刀子、叉、瓢和鍋蓋，不得放置在電器上，因為它們會變熱。其會變熱而導致危險。



電源線插頭請勿接觸到蒸氣。
可能導致火災、觸電或起火。在伸展桌上使用時，電源線插頭請勿在蒸氣影響範圍內使用。

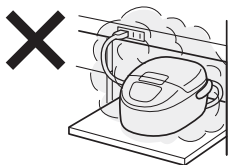

請勿在進氣孔、排氣孔或空隙中插入異物，例如別針、鐵絲等金屬物體。
可能導致觸電或因動作異常而導致受傷。

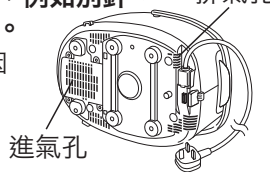

蓋上鍋蓋時，請清除上框及開蓋部位附近附著的飯粒、米粒等，並確保鍋蓋切實關閉。
可能因蒸氣洩漏、鍋蓋打開內容物噴出而導致燙傷或受傷。



請勿用於使用說明書記載用途以外的用途。
可能導致蒸氣或內容物噴出溢出，造成燙傷或受傷。
〈禁止進行的烹調範例〉
● 將食材或調味料放入塑膠袋中進行加熱的烹調
● 使用烹調紙、鋁箔、保鮮膜的烹調
● 用油量大的烹調或煮飯
● 加入了容易造成堵塞的莧菜籽等顆粒特別小的什穀煮飯



若產品任何表面破裂，關閉電器電源以避免電擊。
可能導致觸電。



發生異常或故障時，請立即停止使用。如果繼續使用，可能導致火災、觸電或受傷。
〈異常、故障範例〉
● 使用時，電源線或電源線插頭異常發熱。
● 電子鍋冒煙或出現焦味。
● 電子鍋的局部出現破裂、鬆動或晃動。
● 內鍋變形。
● 出現其他異常或故障。
請立即拔下電源線插頭，並洽詢原購買處進行檢查、維修。




請勿在不穩定場所、耐熱性差的桌子或墊子上面使用。
可能導致火災，或傷到桌子或墊子。

警告



請勿在靠近牆壁或家具的位置使用。
蒸氣或高溫可能導致損傷、變色或變形，因此請離牆壁或家具30cm以上使用。使用廚房專用收納櫃等時，請注意切勿在蒸氣無法散發的環境中使用。

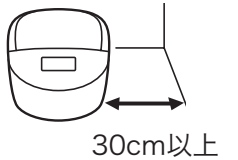

使用中，請小心並避免將水濺到連接器上。




使用後，加熱配件表面可能留有餘熱。使用時或使用後請勿觸碰高溫表面。
可能導致燙傷。



注意



請勿在蒸氣可能接觸到操作面板的狹小空間中使用。
蒸氣或高溫可能導致操作面板變形或主體損傷、變色、變形、故障。
放在伸展桌上使用時，請拉出到蒸氣接觸不到的位置使用。

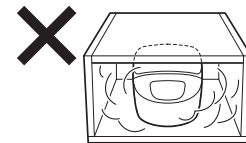

請勿在承重強度不足的伸展桌上使用。
可能因產品掉落而導致受傷、燙傷或故障。使用前請確認承重強度足夠。



請勿在可能沾水的場所或火源附近使用。
可能導致觸電、漏電、主體變形、火災或故障。



請勿使用非專用內鍋。
可能導致過熱或異常動作。



請勿在內蓋卡榫折斷的狀態下使用。
可能因蒸氣洩漏或內容物溢出而導致受傷或燙傷。可能導致無法煮出美味可口的米飯。



如使用方法不正確可引致受傷。



請待主體冷卻之後再進行清潔保養。（請參照P.132~135的記載內容來進行清洗保養。）



請勿空燒。
可能導致故障、過熱或異常動作。



本電器為家用或類似用途，如下列所示。
● 商店、辦公室及其他工作環境之員工廚房區域。
● 農莊。
● 旅館、汽車旅館及其他居住型環境之住戶。
● 提供床鋪及早餐型式之環境。
● 民宿型態之環境。



請勿在鋁板或電熱毯上使用。
可能因鋁材發熱而導致冒煙或起火。



請勿在會堵塞吸/排氣孔的場所或者室溫較高的場所使用。
請勿放在地毯或塑膠袋等的上面。可能導致觸電、漏電、火災或故障。



請勿在電磁爐上使用。
可能導致故障。




打開鍋蓋時請小心蒸氣。
可能導致燙傷。

安全注意事項

⚠ 注意

- 使用中或使用後觸摸內鍋提把時，要使用隔熱手套，請勿用手直接觸摸。因為該部位處於高溫狀態，可能導致燙傷。

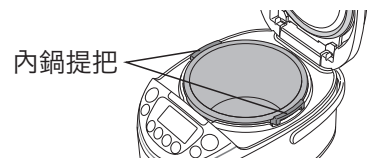

- 不使用時，請將電源線插頭從插座上拔下。可能導致受傷、燙傷，或因絕緣性能劣化而導致觸電、漏電或火災。

- 拔出時，請務必握住電源線插頭向外拔。可能導致觸電或因短路而導致起火。

- 禁止與其他電器共用一個插座。可能導致火災。

- 請小心對待本產品。如果掉落或受到強烈撞擊，可能導致受傷或故障。

- 本產品會產生磁力線，因此請勿靠近會受磁力影響的物體。可能導致電視、收音機等出現雜音。可能導致金融卡、捷運悠遊卡、卡匣式錄音帶、錄影帶等消磁。

- 醫療用心律調節器等的使用者，如果要使用本產品，請向專業醫生詳細諮詢後再使用。本產品運作時，可能會對心律調節器造成影響。


- 電器不得藉由外接計時器或分離遙控系統操作。可能導致故障。

- 不可整機清洗。請勿對主體進行整機清洗，或是讓主體內部或底部進水。可能導致觸電、短路或火災。

- 煮飯過程中請勿移動主體。可能導致燙傷或內容物溢出。

- 搬運主體時，請勿觸摸開蓋按鈕。可能因鍋蓋打開而導致受傷或燙傷。

- 移動主體時，請勿握住鍋蓋移動。可能導致燙傷或受傷。請務必握住主體提把移動。

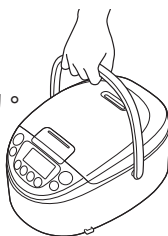


- 本產品具調理功能，請勿過度使用容易出現泡沫或容易膨脹的食材。以避免食材溢出導致事故的發生或產品故障。（如：黃豆、黑豆、白木耳..等，容易產生泡沫、溢出的食材。）

延長產品使用壽命的注意事項

- 請清除主體和內鍋上附著的米飯粒和米粒等。可能導致蒸氣洩漏、內容物溢出、故障或無法煮出美味可口的米飯。

- 煮飯過程中，請勿用布等覆蓋主體。可能導致主體或鍋蓋變形或變色。

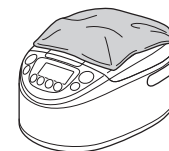

- 冷飯請勿重新加熱（保溫）。可能導致異味等。

- 為了維持本產品的功能與性能，產品中設有專用孔洞，但偶爾會有昆蟲等進入該孔洞內，導致產品發生故障。請多加注意，例如可以使用市售的防蟲產品等。另外，如果因昆蟲等進入而導致故障，需自費維修。請洽詢原購買處。

- 內鍋表面的氟素塗層隨著使用會逐漸損耗，有時會出現剝落，但對人體無害，也不影響煮飯或保溫性能。如果您介意出現以上情況或者出現了變形、腐蝕時，您可以重新購買。請洽詢原購買處。

- 請務必遵守下列使用方法，否則可能導致內鍋的氟素塗層膨脹、剝落或變形等。
 - 請勿將內鍋直接放置於瓦斯爐上加熱，或在電磁爐、微波爐等器具中使用。
 - 請勿將白米、免洗米以外的米飯（什錦飯等）進行保溫。
 - 請勿在內鍋中使用醋。
 - 請勿使用隨附或木製品以外的飯匙。
 - 請勿使用金屬製的勺子、湯匙、打蛋器等堅硬物體。
 - 請勿在內鍋上放置蒸籠等。
 - 請勿在內鍋中放入餐具等堅硬物體一起清洗。
 - 請勿使用鋼絲球刷或尼龍清潔球等堅硬物體進行清潔保養。
 - 請勿使用洗碗機或烘碗機等。

選單介紹

可選的 16 個選單

煮飯容量 內鍋刻度 煮飯所需的時間^{*1} 預約時間標準 保溫	01 Plain 煮白米時選擇。 標準的煮飯方法。 1.0L型 0.5~5.5杯 1.8L型 1~10杯 Plain 1.0L型 47~57分鐘 1.8L型 48~65分鐘 1小時10分鐘以上 可保溫	02 Premium 浸泡時間為「Plain」選單的2倍，且耗時慢慢加熱，因此可以煮出甘甜、鮮美又綿軟的風味極佳的米飯。 1.0L型 0.5~5.5杯 1.8L型 1~10杯 Premium 1.0L型 60~70分鐘 1.8L型 57~75分鐘 1小時20分鐘以上 可保溫	03 Eco 希望消耗更少電力（削減約3~16%）煮白米時選擇。與「Plain」選單相比，煮出的米飯略微偏硬。 1.0L型 0.5~5.5杯 1.8L型 1~10杯 Eco 1.0L型 46~58分鐘 1.8L型 48~64分鐘 1小時10分鐘以上 可保溫 要點 •如果您感覺煮好的米飯較硬，請使用「Plain」選單煮飯。 •有時內蓋會殘留較多水珠。	04 Sushi 煮壽司飯時選擇。煮出的米飯黏性較低而略硬。 1.0L型 0.5~5.5杯 1.8L型 1~10杯 Sushi 1.0L型 48~58分鐘 1.8L型 47~65分鐘 1小時10分鐘以上 可保溫	05 Quick 希望快速煮熟白米時選擇。與「Plain」選單相比，煮飯時間較短，因此煮出的米飯偏硬。 1.0L型 0.5~5.5杯 1.8L型 1~10杯 Plain 1.0L型 23~41分鐘 1.8L型 23~44分鐘 不可定時 可保溫	06 Exp. Limited Cups 希望更快速地煮熟少量白米時選擇。與「Plain」選單相比，煮飯時間較短，因此煮出的米飯偏硬。 1.0L型 0.5~2杯 1.8L型 1~3杯 Exp. Limited Cups 1.0L型 20~29分鐘 1.8L型 23~30分鐘 不可定時 可保溫 要點 •煮好的米飯過硬時，可藉由調整燜飯時間來調整硬度。 →P.143
---	--	---	---	---	---	--

^{*1}：煮飯所需的時間為馬上開始煮飯的情況下到燜好飯為止的時間。
（電壓220-230V/室溫23度/水溫23度/加水量按標準水位）
煮飯時間會根據煮飯量、米的種類、配料種類及份量、室溫、水溫、加水量、電壓、使用預約煮飯（浸泡）等條件而有些許差異。

選單介紹

可選的 16 個選單

07 Long-grain

煮長米時選擇。

- 煮飯容量
- 內鍋刻度
- 煮飯所需的時間^{*1}
- 預約時間標準
- 保溫

	1.0L型 0.5~5.5杯 1.8L型 1~10杯
	Long-grain
	1.0L型 30~40分鐘 1.8L型 31~43分鐘
	45分鐘以上
	可保溫

要點

- 用長米煮什錦飯時，請選擇「Mixed」選單。如果選擇其他選單，可能無法煮出美味可口的米飯。

08 Multigrain

白米中加入什穀（小米、稗米、黑米與紅米等）一起煮時選擇。

	1.0L型 0.5~4杯 1.8L型 1~8杯
	Plain
	1.0L型 52~62分鐘 1.8L型 53~65分鐘
	1小時10分鐘以上
	可保溫 請盡快食用 ^{*2}

要點

- 請將什穀的量控制在白米的2成之內。
- 煮飯時請將什穀鋪在白米上。如果混在一起，可能無法煮出美味可口的米飯。
- 如果市售的什穀或發芽糙米袋子上標註了加水量，請根據該內容及個人喜好加減水量。
- 請勿加入容易造成堵塞的莧菜籽等顆粒特別小的什穀煮飯。
- 煮發芽糙米、胚芽米與半精米時，請選擇「Multigrain」選單。

09 Mixed

煮什錦飯時選擇。

	1.0L型 0.5~4杯 1.8L型 1~7杯
	Mixed
	1.0L型 38~52分鐘 1.8L型 44~65分鐘
	不可定時
	可保溫 請盡快食用 ^{*2}

加入配料煮飯時的注意事項

- 可加入配料煮飯的選單有「Mixed」「Sweet」「Porridge · Firm」「Brown Porridge」「Brown」。
- 選擇其他選單時請勿加入配料，否則可能無法煮出美味可口的米飯。
- 一杯白米/糙米/糯米的配料請控制在約70g以下。（「Porridge」選單除外）
- 調味料請充分攪拌，配料請鋪在米上面。
- 請勿在煮飯過程中打開鍋蓋加入配料。
- 加入配料煮飯時，請務必遵守最大煮飯容量。

10 Sweet

煮糯米飯時選擇。


	1.0L型 1~3杯 1.8L型 2~5杯
	<糯米與粳米> Sweet與Plain之間 <糯米>Sweet
	1.0L型 36~46分鐘 1.8L型 38~48分鐘
	不可定時
	可保溫 請盡快食用 ^{*2}

要點

- 請將米鋪平，確保米不會露出到水面之上再開始煮飯。
- 使用糯米長米時，請以1/3刻度為上限，加水量調整至略多。

內鍋刻度（內側）

- 內鍋刻度為標準參考。請根據米的種類或個人喜好調節加水量。
- 加減水量時，加減幅度請勿超過基準水量刻度水量的三分之一。可能導致內容物溢出等。

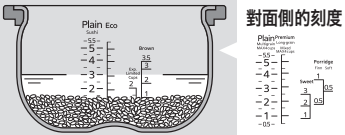

關於免洗米

- 免洗米也請使用隨附的量杯稱量。→P.112・114
- 免洗米請以內鍋刻度為參考，比標準略微多加一些（刻度線沒入水面的程度）。
- 煮免洗米時，可能會出現厚鍋巴。
- 加入免洗米與水後，為了讓每一粒米都充分吸水，請從底部開始仔細攪拌。如果僅從上方加水，可能出現米未能充分吸水的情況，導致無法煮出美味可口的米飯。
- 若加水後出現白色渾濁，建議更換水1到2次進行淘洗。雖然水變白是因為米中的澱粉，而非米糠造成，但直接煮可能導致焦底、內容物溢出或無法煮出美味可口的米飯。

關於浸泡（吸水）

- 各選單的煮飯時間內已包含浸泡程序（「Quick」「Exp. Limited Cups」選單除外），因此無須事先將米加水浸泡，也能馬上開始煮飯。
- 也可進行預約浸泡。→P.122

^{*1}：煮飯所需的時間為馬上開始煮飯的情況下到爛好飯為止的時間。
（電壓220-230V/室溫23度/水溫23度/加水量按標準水位）
煮飯時間會根據煮飯量、米的種類、配料種類及份量、室溫、水溫、加水量、電壓、使用預約煮飯（浸泡）等條件而有些許差異。

^{*2}：雖然會自動保溫，但可能有損米飯的美味，因此請盡快食用，避免保溫。

選單介紹

可選的 16 個選單

11 Porridge

煮粥時選擇。



1.0L型

<稠粥> 0.5~1 杯
<加配料的稠粥> 0.5杯
<稀粥> 0.5杯

1.8L型

<稠粥> 0.5~2杯
<加配料的稠粥> 0.5~1.5杯
<稀粥> 0.5~1.5杯



<稠粥> Porridge • Firm
<稀粥> Porridge • Soft



可在40~90分鐘範圍內設定烹調時間。



烹調時間+1分鐘



可保溫 請盡快食用^{*2}

要點

- 粥煮好後，若放置不管，會變成糊狀或是發黏，因此請盡快食用。
- 加入配料煮飯時的注意事項→P.107

12 Brown Porridge

煮糙米粥時選擇。



1.0L型

<稠粥> 0.5~1 杯
<加配料的稠粥> 0.5杯
<稀粥> 0.5杯

1.8L型

<稠粥> 0.5~2杯
<加配料的稠粥> 0.5~1.5杯
<稀粥> 0.5~1.5杯



<稠粥> Porridge • Firm
<稀粥> Porridge • Soft



1.0L型 82~92分鐘
1.8L型 88~104分鐘



1小時45分鐘以上



可保溫 請盡快食用^{*2}

要點

- 粥煮好後，若放置不管，會變成糊狀或是發黏，因此請盡快食用。
- 加入配料煮飯時的注意事項→P.107

13 Brown

煮糙米時選擇。



1.0L型

<糙米> 1~3.5杯
<加配料的糙米> 1~2杯

1.8L型

<糙米> 2~6杯
<加配料的糙米> 2~4杯



Brown



1.0L型 68~81分鐘
1.8L型 73~88分鐘



1小時30分鐘以上



可保溫 請盡快食用^{*2}

要點

- 加入配料煮飯時的注意事項→P.107
- 【糙米、什穀糙米中加入白米煮時】
- 什穀糙米為糙米中加入什穀的米。
- 糙米、什穀糙米比白米多時，請選擇「Brown」選單煮。
- 糙米、什穀糙米與白米等量，或白米較多時，請選擇「Plain」選單煮。這種情況下，請先將糙米、什穀糙米浸於水中1~2小時，使其充分吸水。
- 糙米、什穀糙米與白米的合計量，1.0L 型最多不超過3.5杯，1.8L 型最多不超過6杯。
- 【糙米和什穀一起煮時】
- 請務必選擇「Brown」選單。
- 糙米與什穀的合計量，1.0L 型最多不超過3.5杯，1.8L 型最多不超過6杯。

14 Brown GABA

想讓糙米綿軟易食時選擇。（煮飯時間會比「Brown」選單更長。）此外與「Brown」選單相比，有益健康的營養素GABA（ γ -氨基丁酸）也會有所增加。



1.0L型 1~3.5杯
1.8L型 2~6杯



Brown



1.0L型 4小時16分鐘~4小時26分鐘
1.8L型 4小時19分鐘~4小時31分鐘



4小時35分鐘以上



可保溫 請盡快食用^{*2}

*1：煮飯所需的時間為馬上開始煮飯的情況下到爛好飯為止的時間。（電壓220-230V/室溫23度/水溫23度/加水量按標準水位）
煮飯時間會根據煮飯量、米的種類、配料種類及份量、室溫、水溫、加水量、電壓、使用預約煮飯（浸泡）等條件而有些許差異。

*2：雖然會自動保溫，但可能有損米飯的美味，因此請盡快食用，避免保溫。

選單介紹

可選的 16 個選單

15 Cook • Soup

→P.124 • 125

烹調時選擇。可設定烹調時間進行充分燉煮。
以及燉湯時選擇。

要點

- 請務必使用「Cook • Soup」選單進行烹調。
- 如果使用煮飯選單烹調，可能因蒸氣或內容物噴出而導致燙傷或受傷，或是內鍋出現燒焦等損傷。
- 燉煮料理再加熱後，以保溫狀態靜置一陣子，會更加入味而柔軟。



16 Cake

→P.126 • 127

做蛋糕時選擇。

各部名稱及附件


◇開箱後，請先確認以下內容。

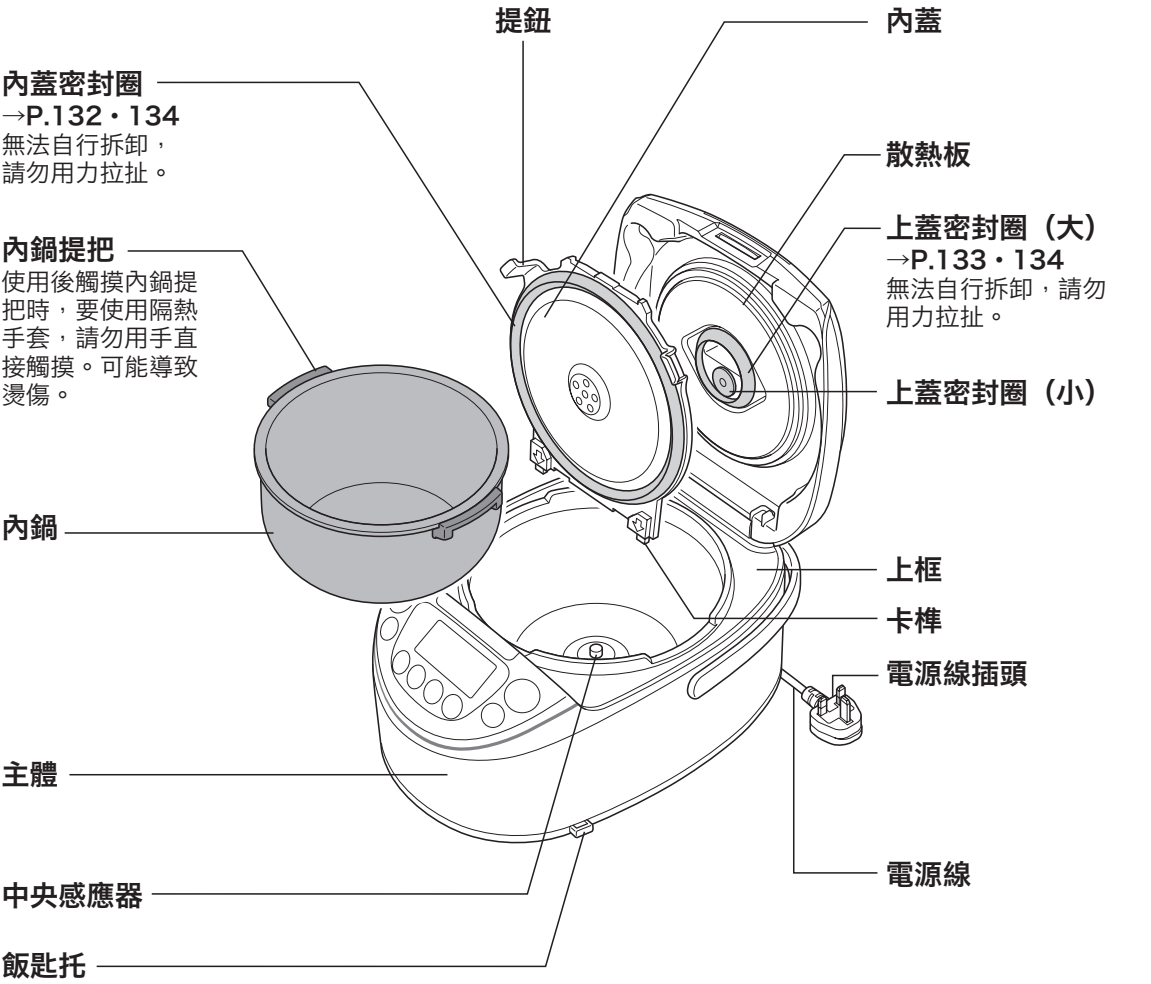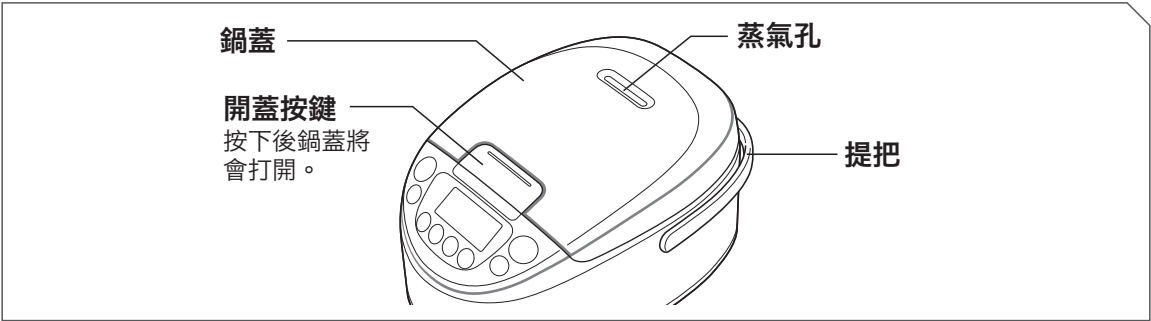

移動主體時，務必握住提把移動。
*主體處於高溫時，務必使用隔熱手套。
可能導致燙傷。


各部名稱及附件

操作面板

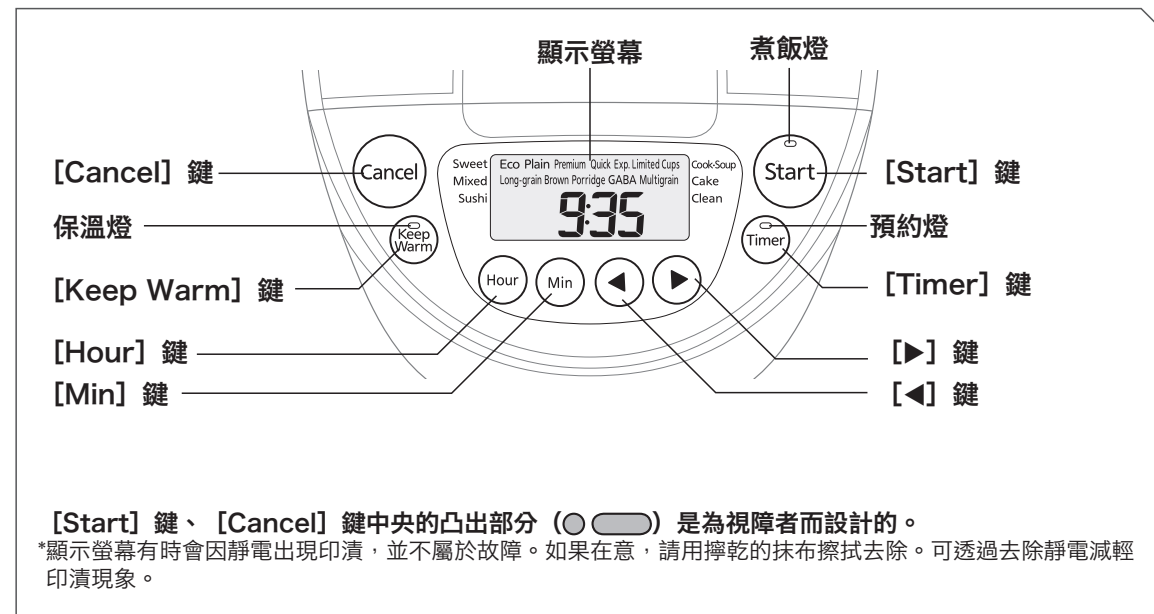

確認附件

〈飯匙〉
插入飯匙托。

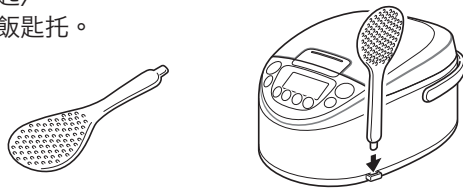

〈勺子〉



〈量杯〉

約1杯
(約0.18L)
1杯米約為
150g。



關於內鍋（土鍋塗層）

為了使煮出的米飯味道接近使用土鍋所煮出的口感，內鍋表面增添陶土材料塗層加工。

關於聲響

煮飯、保溫、再加熱過程中發出的下列聲音並不屬於異常。

- 「嗚嗚」聲（風扇轉動的聲音）
- 「噠」與「啾哩哩啾…」聲（IH運作的聲音）

關於鋰電池

電子鍋內建鋰電池，因此即使拔下電源線插頭，現在時刻或預約時刻也會持續記憶。

- 鋰電池電量耗盡後，如果插入電源線插頭，顯示螢幕會閃爍「0:00」。此時雖然可以進行一般的煮飯，但是一旦拔下電源線插頭，現在時刻、預約時刻以及保溫經過時間等記憶內容就會立刻消失。

⚠ 注意

- 顧客無法自行更換鋰電池。如果需要更換新的鋰電池，請至原購買處委託維修。（需自費）

第一次使用時

請先清洗內鍋、內蓋與附件再使用。
→P.132~134

確認時刻

時刻以24小時制顯示。如果時刻不準確，請根據現在時刻調整對時。→P.113


現在時刻的調整方法

時刻以24小時制顯示。

*煮飯（烹調、清洗）過程中、保溫期間、預約設定期間、預約煮飯（浸泡）期間以及選中「Porridge」「Cook・Soup」「Cake」期間，無法進行時刻調整。

例：將「9:30」調整為「9:35」時

1 將電源線插頭插入插座。

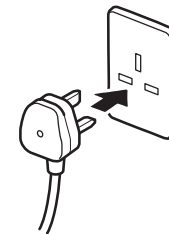

2 按下 [Hour] 或 [Min]，進入時刻設定模式。

◇按下 [Hour] 或 [Min] 後，⌚將會亮燈。



3 調整時刻。

- ◇按下 [Hour] 可以1小時為單位調整時間，按下 [Min] 可以1分鐘為單位調整時間。
- ◇持續按壓，可快速變換時間。
- ◇調整時刻過程中想要取消時，請按 [Cancel]。



4 按下 [Start]。

◇⌚熄滅，時刻調整完畢。



煮飯方法

正確的稱量示例 錯誤的稱量示例



量杯平口盛滿一杯：約0.18L=約150g

- 注意**
- 煮飯時請勿超過指定的煮飯容量。可能會無法煮出美味可口的米飯。→P.104~110・145
 - 請勿加入容易造成堵塞的莧菜籽等顆粒特別小的什穀煮飯。


1 使用隨附的量杯來稱量米。

- 請務必使用隨附的量杯。
- 如果使用計量米箱等器具，可能導致出現誤差。
- 免洗米也請同樣使用隨附的量杯進行稱量。



可用內鍋洗米。


- 注意**
- 請勿使用溫熱水（約35度以上）洗米。可能會無法煮出美味可口的米飯。

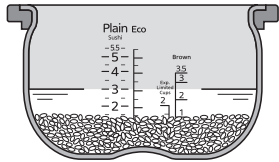

3 調整加水量。


- 請將內鍋水平放置，將米攤平整。
- 請對照內鍋內側的水量刻度，根據個人喜好調整加水量。→P.107

- 注意**
- 請勿使用溫熱水（約35度以上）來調節加水量。可能會無法煮出美味可口的米飯。

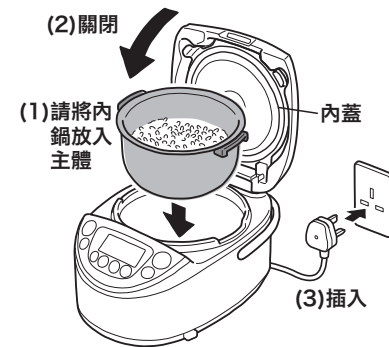


4 將內鍋放進主體，關閉鍋蓋，並將電源線插頭插入插座。

- 請充分擦乾後附著在內鍋外壁上的水滴，然後再放入主體內。可能會無法煮出美味可口的米飯。
- 請用雙手確實關閉鍋蓋。
- 保溫燈亮燈時，請按 [Cancel] 使其熄滅。

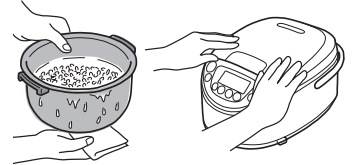



- 注意**
- 附著在上框、開蓋按鍵附近與內蓋上的飯粒、米粒等，請務必擦拭乾淨。否則可能導致鍋蓋無法閉合、煮飯過程中鍋蓋打開。
 - 如果內蓋沒有放好，鍋蓋將無法關閉。
 - 請務必確認鍋蓋是否已確實蓋緊。
- 關於聲響**
- 在未放入內鍋的狀態下按下 [Start] 時或是按下 [Keep Warm] 時，會發出「嗶嗶」的提示音。
 - 如果介意提示音的聲響，可以調整音量。→P.144

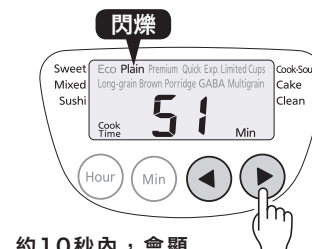

約10秒內，會顯示該選單的煮飯時間（標準時間）。

5 按下 [◀] 或 [▶]，選擇選單。→P.104~110


◇每按一下，選單或◀▶便會閃爍，選單會進行切換。

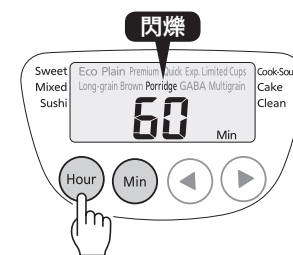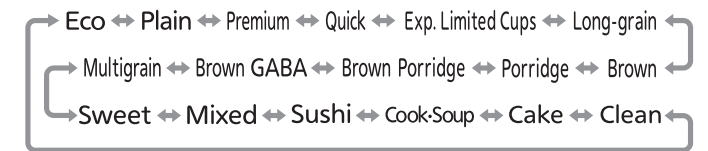

6 選擇「Porridge」選單時，按下 [Hour] 或 [Min] 調整煮飯時間。

- ◇初始設定為60分鐘。請根據個人喜好調整時間。
- ◇可在40~90分鐘範圍內，以5分鐘為單位進行設定。
- ◇每按1次 [Hour]，會增加5分鐘，每按1次 [Min]，會減少5分鐘。

煮飯方法

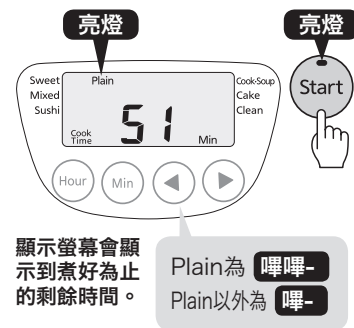

7 按下 [Start]。

⚠ 警告

- 煮飯過程中請勿將臉或者手靠近蒸氣孔。可能導致燙傷或受傷。
- <不得已須停止煮飯時>**
 - (1) 按下 [Cancel]，停止煮飯。
 - (2) 確認不再冒蒸氣後，按下開蓋按鍵。

*如果按下 [Cancel] 後便立刻打開鍋蓋，可能導致燙傷。


• <重新煮飯時>

將內鍋裡的米和水全部換新，主體充分冷卻後，再重新開始煮飯。

*如果先按下 [Cancel]，則會在中途停止煮飯。若未將內鍋裡的米和水全部換新，便重新開始煮飯，剛才煮到一半的米會再次從頭開始煮，可能導致燒焦或無法煮出美味可口的米飯。

⚠ 注意

- 以下情況下，請務必待主體冷卻之後再煮飯。
 - 連續煮飯時
 - 停止保溫後立即煮飯時
- 可能導致煮飯時間延長或者無法煮出美味可口的米飯。
- *各選單的煮飯時間（標準時間）→P.104~110

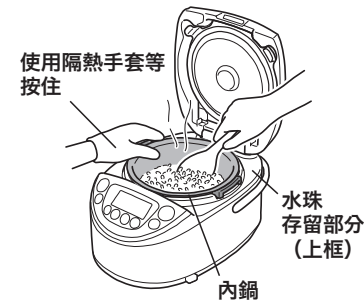

8 煮好後，請立刻將米飯攪拌均勻。

- ◇米飯煮好後，會發出8次「嗶-」的提示音，並自動保溫。（可保溫的選單→P.104~110／關於保溫→P.118）
- ◇藉由立刻將米飯攪拌均勻，可以讓多餘的水分蒸發。
- ◇攪拌米飯時，請確保沒有飯粒附著在內鍋的側面。（由於內鍋形狀的特性，米飯中央有時會稍微呈現凹陷。）
- ◇使用後，請先按 [Cancel] 並拔下電源線插頭，待冷卻後再進行清潔保養。
- ◇在「Porridge」，「Brown Porridge」選單中添加食材時，或煮飯時間不足時，請在保溫燈亮燈或閃爍的狀態下，按下 [Hour]、[Min]，調整追加煮飯時間，然後按 [Start]。以1分鐘為單位，每次最長可追加15分鐘，最多可追加3次。
- ◇追加加熱時，請先充分攪拌均勻，然後再按 [Start]。
- ◇粥如果長時間保溫，會變成糊狀，因此請盡快食用。


⚠ 警告

⚠ 注意


- 打開鍋蓋時，請先確認蒸氣孔中不再有蒸氣冒出，然後再打開。可能導致燙傷或受傷。
- 如果在未取消保溫的狀態下拔下電源線插頭，則下次使用時保溫燈將會亮燈，無法煮飯。
- 如果在剛煮好飯後或保溫過程中打開鍋蓋，蒸氣水珠流到上框或外面時，請擦拭乾淨。有幾個選單可能會殘留較多蒸氣水珠。

關於保溫

保持白米（免洗米）的光澤美味。
煮飯結束後會自動切換為保溫。
（可保溫的選單→P.104~110）

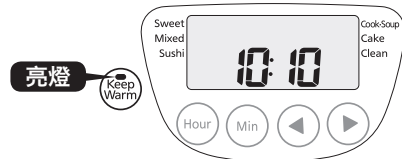

持續按住 [Hour]，將以1小時為單位顯示保溫經過時間，最長為24小時（24h）。如果超過24小時，則會閃爍顯示「24」，且「h」亮燈。

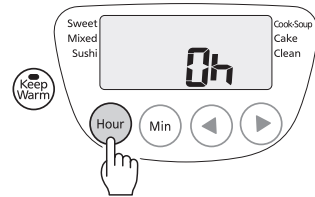

停止保溫時

按下 [Cancel]。（保溫燈熄滅）




再次保溫時

按下 [Keep Warm]。



保溫少量米飯時

將米飯集中到內鍋中央保溫，並請盡快食用。

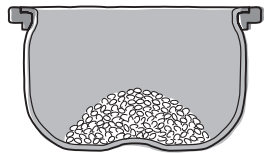


△ 注意

- 請勿進行如下形式的保溫，以免造成米飯出現異味、變乾、變色、變質或內鍋腐蝕等。
 - 拔掉電源線插頭保溫
 - 在盛放著米飯的狀態下取消保溫
 - 冷飯保溫
 - 添加冷飯
 - 飯匙放在鍋中一起保溫
 - 米飯的量較少時（1.0L 型：1杯以下、1.8L 型：2杯以下）
 - 白米（免洗米）以外的保溫
 - 米飯沒有集中內鍋中央
 - 保溫24小時以上
- 如果在剛煮好飯後或保溫過程中打開鍋蓋，蒸氣水珠流到上框或外面時，請擦拭乾淨。有幾個選單可能會殘留較多蒸氣水珠。
- 在保溫中如果拿起內鍋，保溫就會被取消，請多加注意。
- 內鍋邊緣與密封圈類如果沾有飯粒等，請擦拭乾淨。可能導致乾燥、變色、異味或發黏。
- 如果在嚴苛的環境條件下（寒冷地帶或周圍溫度較高時等）使用，請盡快食用。

再加熱方法

◇ 保溫中的米飯可於食用前進行再加熱，便能熱騰騰地品嚐。

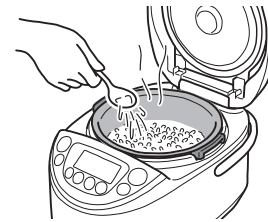

1 將保溫中的米飯撥散，均勻灑入1~2大匙的水。

◇ 灑水可避免米飯變乾，口感更飽滿。




2 確認保溫燈亮燈。

◇ 如果保溫燈未亮燈，將無法進行再加熱。
未亮燈時，請按下 [Keep Warm]。



3 按下 [Start]。

◇ 在再加熱的剩餘時間到剩下5分鐘時，會顯示剩餘時間。
再加熱結束後，「嗶-嗶-嗶-」連響3次提示音，保溫燈亮燈。

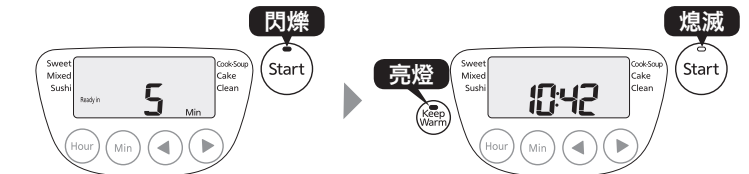

◇ 希望中途停止再加熱時，按下 [Cancel]。
◇ 米飯較涼（約55度以下）時，將發出「嗶嗶」的提示音，不可再加熱。



4 將加熱後的米飯攪拌均勻。

◇ 攪拌翻動完米飯後，請用雙手確實關閉鍋蓋。




△ 注意

- 如果米飯超過內鍋一半以上，因米飯的量多，可能無法充分加熱。
- 如果在下列情況下進行再加熱，米飯可能會偏乾。
 - 米飯還很燙時（例如剛煮好時等）
 - 米飯的量較少時（1.0L 型：1杯以下、1.8L 型：2杯以下）
 - 重複加熱3次以上時
- 「Porridge」「Brown Porridge」「Cake」「Clean」無法進行再加熱。

預約煮飯方法

- ◇ 可以按照用餐的時刻煮好米飯。
- ◇ 選擇「Timer1」或「Timer2」後設定預約時刻，便可在預約的時刻煮好米飯。
- ◇ 設定好的時刻將會保留記錄，可以設定「Timer1」「Timer2」2個時刻。
- ◇ 事先分別設定好常用的時刻，將會十分便利。

例：如果在「Timer1」上設定13:30，則米飯會在13時30分煮好。

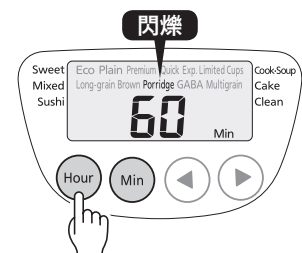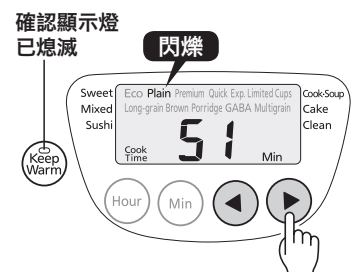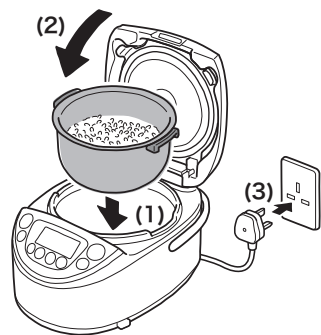

1 將內鍋放進主體，關閉鍋蓋，並將電源線插頭插入插座。

◇ 煮飯方法請按照→P.114・115 的①～④的步驟操作。

2 確認現在時刻。

- ◇ 現在時刻的調整方法→P.113
- ◇ 保溫燈亮燈時，請按 [Cancel] 使其熄滅。（在保溫燈亮燈時無法預約）

3 按下 [◀] 或 [▶]，選擇選單。

◇ 如果已經事先選好選單，就無需再次選擇選單。

4 選擇「Porridge」選單時，按下 [Hour] 或 [Min] 調整煮飯時間。

- ◇ 初始設定為60分鐘。請根據個人喜好調整時間。
- ◇ 可在40～90分鐘範圍內，以5分鐘為單位進行設定。
- ◇ 每按1次 [Hour]，會增加5分鐘，每按1次 [Min]，會減少5分鐘。



時刻以24小時制顯示。



5 按下 [Timer]，選擇「Timer1」或「Timer2」。

- ◇ 每按1次，即會依「Timer1」→「Timer2」→「Soak Timer」的順序切換。
- ◇ 由於會顯示上次設定的預約時刻，因此如要預約同一時刻煮飯，則無需再次調整時刻。（前往步驟⑦）
- ◇ 無法預約煮飯的選單將不會顯示。

6 按下 [Hour] 或 [Min] 調整希望米飯煮好的時刻。

- ◇ 按下 [Hour] 可以1小時為單位調整時間，按下 [Min] 可以10分鐘為單位調整時間。
- ◇ 持續按壓，可快速變換時間。
- ◇ 如果設定的時間短於預約設定的標準時間→P.104～110，可能不會依照預約的時刻煮好飯。

7 按1次 [Start]。

◇ 預約設定錯誤時，請按下 [Cancel] 後，再重新設定。

△ 注意

- 在下列情況下無法設定預約煮飯。
 - 「Quick」「Exp. Limited Cups」「Mixed」「Sweet」「Cook・Soup」「Cake」「Clean」時
 - 顯示螢幕的時間閃爍顯示「0:00」時
 - 未放入內鍋時
- 設定的預約時間較長時，可能會出現鍋巴現象。如果介意鍋巴的顏色，請將米仔細洗淨。
- 預約煮飯的設定時間請控制在12小時以內，以免食物腐壞。


《關於聲響》

- 按下 [Timer] 後，如果30秒之內未進行任何操作，將會發出「嗶嗶」的提示音。
- 在無法預約煮飯的狀態下按下 [Timer] 時，會發出「嗶嗶」的提示音。
- 如果介意提示音的聲響，可以調整音量。→P.144

預約浸泡方法

- ◇可設定讓米自然吸水（預先浸泡）的時間。
- ◇選擇「Soak Timer」並設定好浸泡時間後，即會在設定之時間過後開始煮飯。
- ◇浸泡時間可在10～60分鐘範圍內，以10分鐘為單位進行設定。

例：如果在「Soak Timer」中設為50分鐘，則會在50分鐘後開始煮飯。

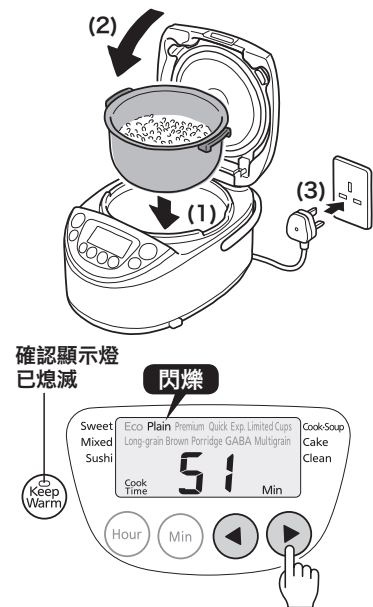

1 將內鍋放進主體，關閉鍋蓋，並將電源線插頭插入插座。

- ◇煮飯方法請按照→P.114・115 的①～④的步驟操作。
- ◇保溫燈亮燈時，請按 [Cancel] 使其熄滅。（在保溫燈亮燈時無法預約）

2 按下 [◀] 或 [▶]，選擇選單。

- ◇如果已經事先選好選單，就無需再次選擇選單。




3 選擇「Porridge」選單時，按下 [Hour] 或 [Min] 調整煮飯時間。

- ◇初始設定為60分鐘。請根據個人喜好調整時間。
- ◇可在40～90分鐘範圍內，以5分鐘為單位進行設定。
- ◇每按1次 [Hour]，會增加5分鐘，每按1次 [Min]，會減少5分鐘。




4 按下 [Timer]，選擇「Soak Timer」。

- ◇每按1次，即會依「Timer1」→「Timer2」→「Soak Timer」的順序切換。
- ◇無法預約浸泡的選單將不會顯示。

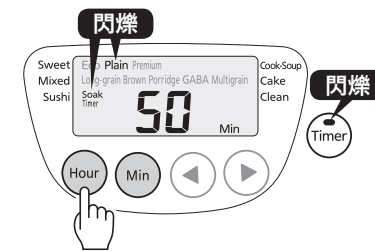

時刻以24小時制顯示。

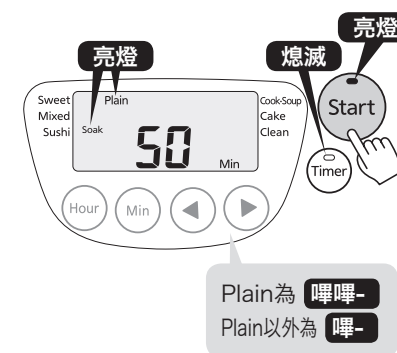

5 按下 [Hour] 或 [Min] 調整浸泡時間。

- ◇可在10～60分鐘範圍內，以10分鐘為單位進行設定。
- ◇每按1次 [Hour]，會增加10分鐘，每按1次 [Min]，會減少10分鐘。
- ◇若浸泡時間長，煮出來的飯便會變軟。

6 按1次 [Start]。

- ◇預約設定錯誤時，請按下 [Cancel] 後，再重新設定。

△ 注意

- 在下列情況下，無法預約浸泡。
 - 「Quick」「Exp. Limited Cups」「Mixed」「Sweet」「Cook・Soup」「Cake」「Clean」時
 - 顯示螢幕的時間閃爍顯示「0:00」時
 - 未放入內鍋時

《關於聲響》

- 按下 [Timer] 後，如果30秒之內未進行任何操作，將會發出「嗶嗶」的提示音。
- 在無法預約浸泡的狀態下按下 [Timer] 時，會發出「嗶嗶」的提示音。
- 如果介意提示音的聲響，可以調整音量。→P.144

烹調方法 (Cook・Soup)

◇先以接近沸騰溫度的高溫燉煮後，再調低溫度燉煮一會兒。然後再次調低溫度繼續燉煮。逐漸降低加熱溫度進行燉煮能夠更好地入味，即使長時間加熱也不用擔心煮乾。烹調方法請參照食譜指南。

禁止進行的烹調範例



- 將食材或調味料放入塑膠袋中進行加熱的烹調
- 使用烹調紙、鋁箔、保鮮膜的烹調
- 用油量大的烹調

1 事先處理好食材，並倒入內鍋。


◇放入食材時，請以內鍋內側的「Plain」刻度為標準。

	1.0L 型	1.8L 型
最大量	刻度 5.5以下	刻度 8以下
最小量	刻度 2以上	刻度 3以上

2 將內鍋放進主體，關閉鍋蓋，並將電源線插頭插入插座。

⚠ 注意

- 超過最大量時，可能出現無法煮熟或是溢出的情況，請多加注意。少於最小量時，也可能出現溢出的情況，請多加注意。
- 烹調時請先充分攪拌，以免調味料沉澱到內鍋鍋底。
- 使用熱高湯或滷汁時，可能出現風味不佳的情況。請待高湯或滷汁冷卻後再開始烹飪。
- 請勿使用金屬製的勺子、湯匙、打蛋器等堅硬物體。
- 烹調食譜指南上未記載的料理時，可能發生內容物溢出或焦底等情況，請多加注意。
- 由於牛奶與豆漿等食材很容易溢出，請在加熱結束後再加，並視情況以每次5分鐘分次追加加熱。

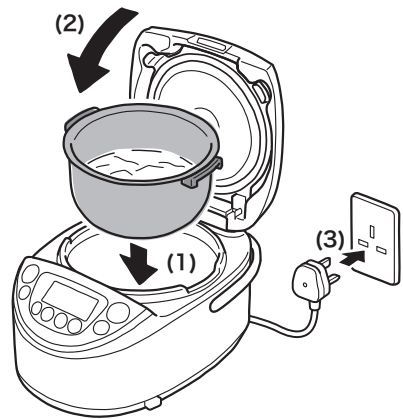

3 按下 [◀] 或 [▶]，選擇「Cook・Soup」。

◇初始設定為60分鐘。



顯示剩餘時間。



以0~6小時 (0~6h) 的範圍顯示保溫經過時間。

4 按下 [Hour] 或 [Min] 調整烹調時間。

- ◇可在5~180分鐘範圍內，以5分鐘為單位進行設定。
- ◇每按1次 [Hour]，會增加5分鐘，每按1次 [Min]，會減少5分鐘。
- ◇持續按壓，可快速變換時間。

5 按下 [Start]。

◇開始烹調。

⚠ 注意

- 請勿中途打開鍋蓋。

6 煮好後…

- ◇「嗶——」鳴響8次，並自動切換至保溫模式，此時保溫燈會亮燈，顯示螢幕顯示「0h」。
- ◇追加加熱的方法（烹調時間不足時，或者使用料理塊或澱粉進行烹調時）
 - (1)請確認保溫燈是否已亮燈。
 - (2)按下 [Hour]，調整追加的烹調時間。（最長30分鐘）
 - (3)按下 [Start]。（追加烹調最多可追加3次）
- ◇保溫中的料理如欲重新加熱（加熱至最佳品嚐溫度）時，請在保溫燈亮燈的狀態下，按下 [Start] 進行再加熱。
- ◇烹調結束後會繼續保溫，並以1小時為單位顯示保溫經過時間，最多顯示至6小時。如果超出6小時，會閃爍顯示「6」。請盡快食用。
- ◇烹調結束後，請按 [Cancel]，去除異味。（清洗方法→P.135）

⚠ 注意

- 有些料理若是持續保溫，可能會影響風味，請多加注意。
- 烹調時間不足時，追加烹調前請勿按下 [Cancel]。保溫燈熄滅後將無法繼續烹調。如果已經按下了，按照以下步驟烹調。
 - (1)取出內鍋，放在濕布上。
 - (2)拆下內蓋，打開主體的鍋蓋，放置10分鐘，冷卻主體與內鍋。
 - (3)再次將內鍋放入主體中。
 - (4)按照從P.124的②開始的要領進行烹調。

蛋糕的製作方法




1 事先處理好食材，將麵團倒入內鍋，去除麵團的空氣。

◇將內鍋放置在布上，從大約5cm的高度將整個內鍋扔下3次左右，去除空氣。

⚠ 注意

- 製作食譜指南中未記載的蛋糕時，可能會出現麵糊溢出或是無法烤出美味的蛋糕等情況，請多加注意。
- 去除麵團的空氣時，請在柔軟的布上進行。可能導致內鍋變形或破損。

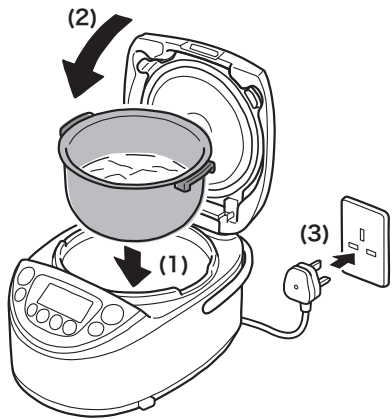

2 將內鍋放進主體，關閉鍋蓋，並將電源線插頭插入插座。



3 按下 [◀] 或 [▶]，選擇「Cake」。

◇初始設定為40分鐘。



4 按下 [Hour] 或 [Min] 調整加熱時間。

- ◇可在5~80分鐘範圍內，以5分鐘為單位進行設定。
- ◇每按1次 [Hour]，會增加5分鐘，每按1次 [Min]，會減少5分鐘。
- ◇持續按壓，可快速變換時間。




5 按下 [Start]。

◇開始加熱。

⚠ 注意

- 請勿中途打開鍋蓋。

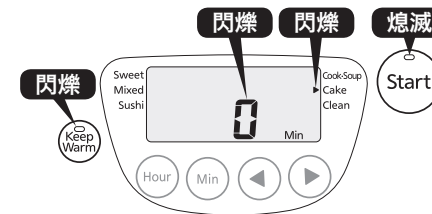

6 完成後，打開鍋蓋，用竹籤戳入蛋糕的中央。

- ◇烘烤完成後，會發出8次「嗶-」的提示音，保溫燈和「0」閃爍。
- ◇如果竹籤沒沾到麵團就表示內部烤熟了。
- ◇竹籤沾到麵團時，請在保溫燈閃爍的狀態下按 [Hour]，調整追加加熱時間，然後按下 [Start]。（每次最長可追加15分鐘，最多可追加3次。）

⚠ 注意


- 追加加熱前請勿按下 [Cancel]。保溫燈停止閃爍後將無法繼續烘烤。如果已經按下了，按照以下步驟加熱。
- (1)取出內鍋，放在濕布上。
- (2)打開主體的鍋蓋，放置10分鐘，冷卻主體與內鍋。
- (3)再次將內鍋放入主體中。
- (4)按照從P.126的③開始的要領進行加熱。

7 使用隔熱手套等取出內鍋，將蛋糕取出冷卻。

◇製作完蛋糕後，按下 [Cancel]，去除異味。（清洗方法→P.135）

⚠ 注意

- 取出內鍋時，請注意務必使用隔熱手套等，而不要用手直接觸摸。可能導致燙傷。
- 蛋糕烤好後，請立刻取出。如果持續放在內鍋，可能會因為沾在內蓋上的蒸氣水珠滴落，而造成發黏。

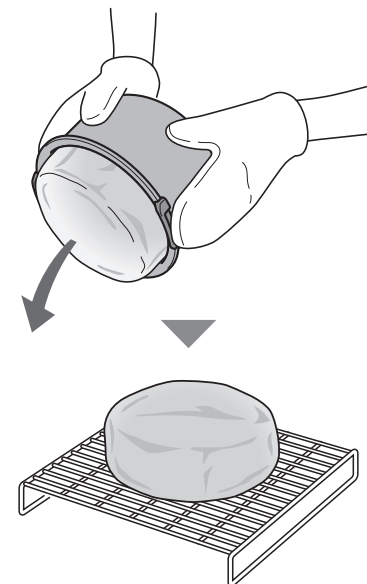

食譜指南

- 本食譜指南中所使用的量杯為0.18L（隨附的量杯）。
- 1大匙為15mL。 • 1小匙為5mL。
- 醬油或味醂等調味料太多時，可能無法煮出美味可口的米飯。
- *煮免洗米時無需洗米。 *各道料理所記載的熱量僅為參考。

Mixed 選單

什錦飯



322kcal/1人份

材料(6人份)

- 米…3杯
- 昆布…3cm見方1片
- 調配醬料 [醬油…2大匙、酒…1大匙、味醂…1/2大匙、鹽…1/2小匙]
- 雞腿肉…60g
- 油豆腐皮…1/2片
- 胡蘿蔔…40g
- 牛蒡…35g
- 茼蒿…1/8塊
- 乾香菇…2朵
- 甜豌豆…8顆
- 酒、醬油、鹽、醋…各適量

製作方法

- (1)將雞腿肉切成1cm小丁，淋上米酒、醬油各少許後醃漬一下。
- (2)油豆腐皮去油後縱向切半，再切成細絲。
- (3)將胡蘿蔔去皮後切成3cm長的粗絲。
- (4)將牛蒡以刀背刮皮後，削成薄片泡入醋水裡。
- (5)茼蒿用水煮4～5分鐘後，再用冷水清洗，與胡蘿蔔一樣切絲。
- (6)將乾香菇浸入水中泡軟，去蒂後切成細絲。
- (7)將甜豌豆去絲，用鹽水汆燙後，泡入冷水定色，最後再切條。
- (8)用內鍋將米洗淨後，加入調配醬料，並加水至「Premium」的刻度3位置，充分混合拌勻。接著加入甜豌豆以外的材料和昆布，選擇「Mixed」選單開始煮飯。
- (9)(8)烹煮完成後，取出昆布，加入甜豌豆拌勻，並盛裝至容器中。



注意

- 請按照配料種類調節加水量。
- 一開始便加入一起煮飯的配料量，請勿超過白米重量的約45%。配料太多，可能會影響煮出的米飯風味。（1杯米的配料請控制在約70g以下）

Sweet 選單

油飯



426kcal/1人份

材料(6人份)

- 糯米…3杯
- 豬五花肉…110g
- 乾香菇…2朵
- 蝦米…10g
- 竹筍…20g
- 胡蘿蔔…10g
- 松子…1小匙
- 栗子（去殼）…6顆
- 薑絲…10g
- 雞骨高湯…300mL
- 豬肉醃漬調料 [酒…2小匙、醬油…2小匙、薑汁…1小匙]
- 調配醬料 [酒…3大匙、醬油…3大匙、砂糖…1小匙]
- 蔥花…3根份
- 豬油或沙拉油…2大匙

製作方法

- (1)乾香菇和蝦米分別用水泡軟，竹筍過一下熱水。（乾香菇和蝦米的浸泡汁留下備用。）
- (2)豬肉切成1cm肉丁，調味後備用。胡蘿蔔、香菇、竹筍切成1cm小丁。
- (3)在平底鍋熱油，放入(2)的材料拌炒，放冷備用。
- (4)用內鍋將糯米洗淨，加入(1)的乾香菇浸泡汁、蝦米浸泡汁和調配醬料，接著加入雞骨高湯至「Sweet」的刻度3位置，充分混合拌勻。
- (5)將(3)以及蝦米、松子、生薑鋪平在(4)上，選擇「Sweet」選單開始煮飯。
- (6)煮好後放入栗子，以揮切的手法混合拌勻，盛裝在容器中，再撒上蔥花即可。

Sushi 選單

手卷壽司

341kcal/1人份
(僅壽司飯的熱量)

材料(5人份)

- 壽司飯 [米…3杯、昆布…3cm見方1片]
- 調配醋 [醋…4又1/2大匙、砂糖…1又1/2大匙…1又1/2小匙]
- 烤海苔…適量
- 配料（依個人喜好準備）
[鮭魚、青魷、鮭魚、花枝、蝦子、鮭魚子、星鰻、小黃瓜、豆苗、蘆筍、胡蘿蔔、厚煎蛋、醃蘿蔔、紫蘇葉等…適量]
- 醬油…適量 • 芥末…適量

製作方法

- (1)用內鍋將米洗淨，加水至「Sushi」的刻度3位置，鋪上昆布後，選擇「Sushi」選單開始煮飯。
- (2)在調理盆裡加入醋、砂糖、鹽混合拌勻，製作調配醋。
- (3)將煮好的米飯移到木盆中，灑上(2)的調配醋，用飯匙以揮切的手法混合拌勻，以扇子或電風扇吹涼。
- (4)將配料全部切成長條狀。
- (5)將(3)的飯鋪平在烤海苔上，再擺上喜歡的配料後捲起。



注意

- 請勿以內鍋拌均醋和米飯。



《要點》

- 將昆布以擰乾水份的抹布擦拭好備用。
- 木盆請以醋水稍稍浸濕後備用。

Multigrain 選單

鹹魚羊栖菜什穀拌飯



362kcal/1人份

材料(6人份)

- 米…3杯
- 什穀…4又1/2大匙（40g）
- 鹹魚（梭魚、馬頭魚等）…1條
- 蔥花…2根份
- 燉煮羊栖菜
[羊栖菜（乾燥）…12g、油豆腐皮…1/2片、胡蘿蔔…30g、芝麻油…1大匙]
- 滷汁
[砂糖…1大匙、味醂…1大匙、酒…1大匙、醬油…2大匙、高湯…200mL]

製作方法

- (1)用內鍋將米洗淨，加水至「Plain」的刻度3位置，將什穀鋪在上方。加入什穀後，再追加3大匙的水，並選擇「Multigrain」開始煮飯。
- (2)將鹹魚烤過後去刺，再將魚肉撥成小塊。
- (3)羊栖菜浸入水中泡軟後洗淨，濾去多餘水分。油豆腐皮去油後切成細絲，胡蘿蔔同樣切成細絲。
- (4)起油鍋倒入麻油與(3)的材料拌炒，再加入滷汁的燉煮。
- (5)瀝乾(4)的滷汁後，與(2)的羊栖菜一起加入煮好的米飯，以揮切的手法拌勻。
- (6)裝盛至容器，並灑上蔥花。

食譜指南

Porridge
選單

海鮮澆汁粥



261kcal/1人份

| 材料(4人份)

- 米…1杯
- 花枝…60g
- 白蔥…1/2根
- 沙拉油…適量
- 蝦子…8只
- 胡蘿蔔…20g
- 中華高湯…400mL
- 海鮮醃漬調料〔酒、鹽、胡椒…各少許、蛋液、澱粉…各1/2小匙〕
- 豆沙調料〔酒…2大匙、砂糖…1小匙、胡椒…少許、蠔油…1小匙、鹽…2/3小匙〕
- 鹽…1/3小匙
- 扇貝…4個
- 木耳…5g
- 水溶澱粉…3大匙
- 青菜…1棵
- 生薑…10g
- 芝麻油…2小匙

| 製作方法

- (1)用內鍋將米洗淨，放入鹽並加水至「Porridge・Firm」的刻度1位置，充分混合拌勻後選擇「**Porridge**」選單，加熱時間調至60分鐘，開始煮飯。
- (2)花枝切出刀口，斜切至一口大小。蝦子去殼並去除蝦線，扇貝橫向對半切開。
- (3)對(2)進行調味，放置10分鐘左右，灑上蛋液和澱粉。
- (4)青菜切至一口大小，白蔥切成大塊，胡蘿蔔和生薑切薄片。
- (5)木耳用溫水泡發，去蒂。
- (6)平底鍋內倒入沙拉油熱鍋，放入(3)、(4)、(5)的材料拌炒，加入澆汁的調味料和中華高湯。
- (7)煮開後略微燉煮，用水溶澱粉勾芡，灑上芝麻油。
- (8)完成後，盛裝至容器中，灑上(7)的澆汁。

⚠ 注意

- 海鮮如果加熱時間過長會變硬。請盡快做成澆汁。

Brown
選單

味噌奶油醬炒鮭魚糙米拌飯



422kcal/1人份

| 材料(6人份)

- 糙米…3杯
- 蒜頭切末…1片份
- 薑切末…1片份
- 奶油…25g
- 調配醬料〔酒…1又1/2大匙、砂糖…1/2大匙、味醃…1又1/2大匙、醬油…1/2大匙、味噌…30g〕
- 蔥花…3根份
- 蘆筍…3根
- 舞菇…100g
- 洋蔥…1/2個
- 胡蘿蔔…50g
- 薄鹽鮭魚…3片
- 沙拉油…適量

| 製作方法

- (1)用內鍋將糙米洗淨，加水至「Brown」的刻度3位置，選擇「**Brown**」選單開始煮飯。
- (2)平底鍋內倒入沙拉油熱鍋，煎熟鮭魚並將鮭魚撥成小塊。
- (3)撕開舞菇，切成2cm寬，將洋蔥、胡蘿蔔切成粗末。
- (4)剝掉蘆筍的粗纖維，去皮後切成1cm寬。
- (5)在平底鍋內融化奶油，加入蒜頭、生薑拌炒。加入(3)的材料拌炒，待食材軟化後加入(4)的材料拌炒。
- (6)將調配醬料加入(5)的材料中，炒至收汁加入蔥花與(2)所製作的鮭魚。
- (7)混合煮好的糙米與(6)的成品，盛裝在容器裡。

《要點》

- 可依個人喜好灑上七味辣椒粉。

Cook・Soup
選單

蔬菜雞肉濃湯



156kcal/1人份

| 材料(1.0L 型：4人份/1.8L 型：6人份)

	【1.0L 型】	【1.8L 型】
● 二節翅	8隻	12隻
● 胡蘿蔔 (小)	1根	1又1/2根
● 芹菜	1根	1又1/2根
● 洋蔥 (中)	1個	1又1/2個
● 馬鈴薯 (小)	2個	3個
● 水	650mL	1,000mL
● 西式高湯粉 (顆粒)	1又1/2大匙	2又1/3大匙
● 鹽、胡椒	各少許	各少許

| 製作方法

- (1)切掉二節翅的翅尖。
- (2)將胡蘿蔔切成4等份，芹菜去掉粗纖維後切成5cm寬，洋蔥切成8等份，馬鈴薯則切成4等份。
- (3)將(1)與(2)的材料全部放入內鍋，加入水、西式高湯粉、鹽和胡椒混合拌勻，選擇「**Cook・Soup**」選單，加熱時間調至60分鐘，按〔Start〕。
- (4)完成後，盛裝至容器中。

Cake
選單

海綿蛋糕

309kcal/1/8塊
(1.0L 型)
水果除外

| 材料(1個量)

	【1.0L 型】	【1.8L 型】
● 雞蛋(M)	4顆	5顆
● 砂糖 (綿白糖)	120g	150g
● 低筋麵粉	120g	150g
● 無鹽奶油	40g	50g
● 無鹽奶油 (塗內鍋用)	適量	適量
<裝飾用>		
● 鮮奶油 (動物性)	200mL	250mL
● 細砂糖	24g	30g
● 草莓、藍莓	各適量	各適量

| 製作方法


- (1)讓雞蛋恢復常溫，低筋麵粉過篩。預先融化無鹽奶油。
 - (2)將雞蛋、砂糖放入調理盆中輕輕拌勻。
 - (3)將(2)的調理盆放入40度的熱水中，將材料混合拌勻，直至看不見砂糖顆粒，拌勻後從熱水中取出。
 - (4)使用手持式攪拌器的高速攪拌功能，將(3)打發。當(3)變白，拿起手持式攪拌器時材料大量殘留在攪拌器上並會慢慢滴落才算打發完成。最後再用低速攪拌功能攪打1分鐘左右，打出均勻的泡沫。
 - (5)將(1)的低筋麵粉放入(4)，使用矽膠刮刀拌勻到看不到麵粉顆粒。再加入融化的無鹽奶油拌勻。
 - (6)將(5)的麵團倒入塗過奶油的內鍋中，在柔軟的布上輕敲排出空氣，然後選擇「**Cake**」選單，烘烤35分鐘(1.8L 型為40分鐘)。
 - (7)烤完後，將蛋糕體從內鍋中取出冷卻，用加入細砂糖打發後的鮮奶油和草莓、藍莓進行裝飾。
- *如果烘烤不足，請在保溫燈閃爍的狀態下，按下〔Hour〕，調整追加烘烤時間，然後按下〔Start〕，追加烘烤。

⚠ 注意

- 蛋糕製作完成後，請去除異味。(清洗方法→P.135)

清潔保養方法

- ◇本書中未記載的修理，請委託獲認可的服務代理商。
- ◇請務必拔下電源線插頭，等待主體、內鍋、內蓋冷卻後再進行清潔保養。
- ◇使用後，為了保持鍋體乾淨，請務必在當天進行清潔保養。
- ◇烹調完成後或是製作蛋糕後，容易留下異味，因此請務必在當天內清洗，並去除異味。→P.135

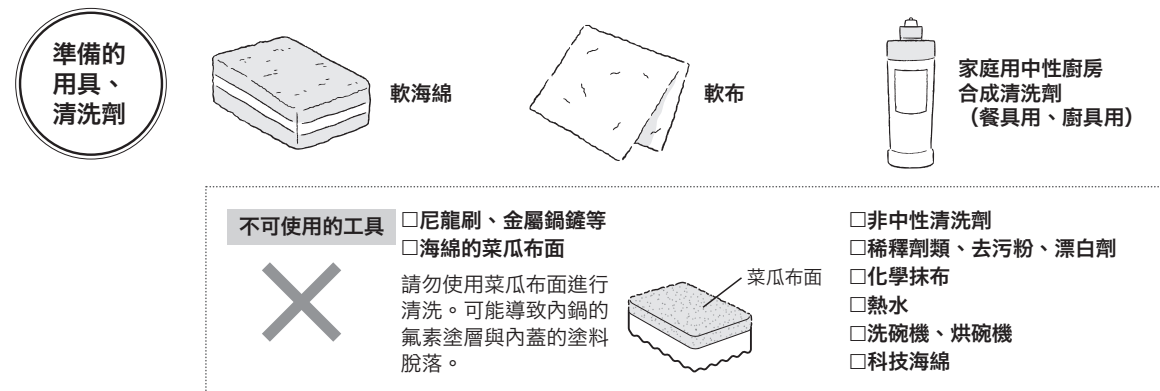

使用後每次都需清洗的物品

1. 用海綿沾取加入冷水或溫水稀釋後的清潔劑，仔細沖洗乾淨。
2. 用乾布擦拭乾淨水分，並充分乾燥。



△注意


- 為了防止腐蝕或產生異味，請隨時保持內鍋及內蓋的清潔。
- 如果殘留清潔劑成分，會造成樹脂劣化或變色，因此請確實將清潔劑沖洗乾淨。（僅限可清洗的部件）
- 加入什穀混合煮後，請務必對內蓋進行清潔保養。可能因堵塞鍋蓋無法打開等故障、內容物溢出或無法煮出美味可口的米飯。
- 清洗內蓋後，請立即用乾布拭去水分。如未確實擦乾水分，可能會留下水痕。
- 請務必清除附著在內蓋上的飯粒等。否則可能導致鍋蓋無法閉合、煮飯過程中蒸氣洩漏、鍋蓋打開內容物噴出等，進而導致燙傷或受傷。
- 請勿將餐具類放入內鍋中，及把內鍋當作洗碗池使用。此外在晾乾內鍋時，請勿與餐具重疊放置。可能劃傷氟素塗層，或造成剝離。



每次使用後都要清潔保養的部位

主體（外側、內側）請用擰乾的布擦拭乾淨。

電源線、電源線插頭請用乾布擦拭。

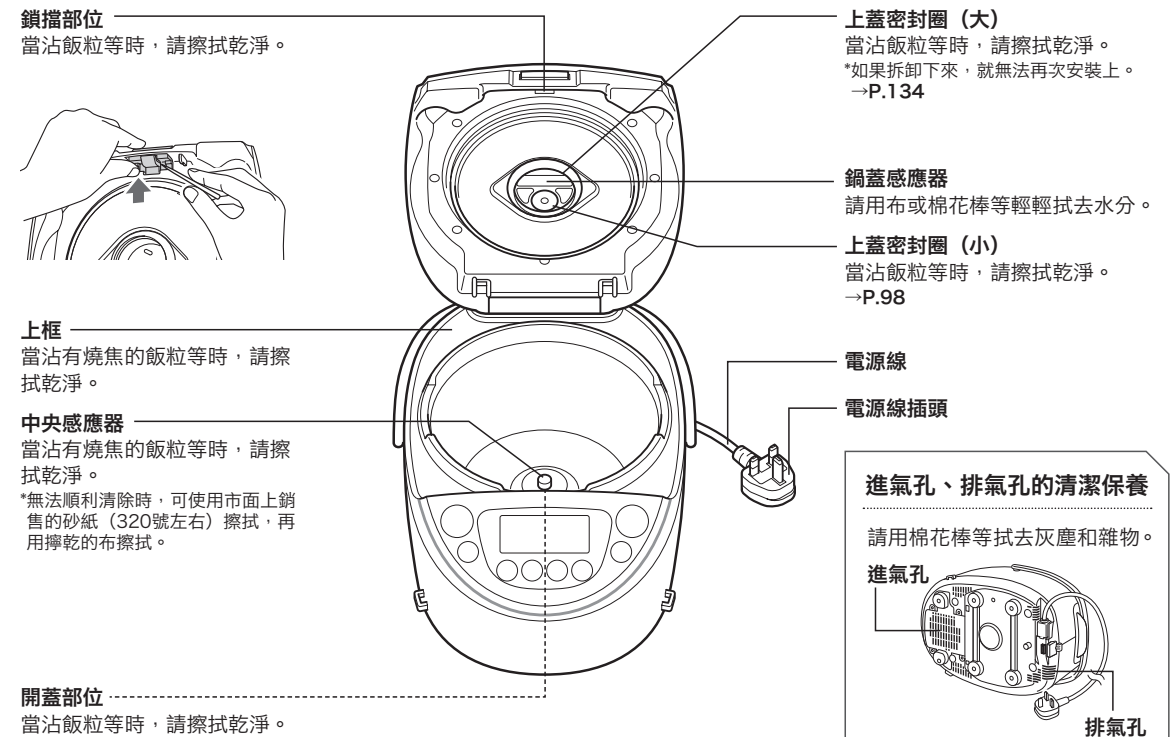


△注意

- 主體內部嚴禁進水。可能導致觸電、漏電、主體變形、火災或故障。
- 當進氣孔、排氣孔有灰塵等附著時，請勿直接使用。可能導致主體內部溫度上升，進而引起故障或火災。

各部位的安裝/拆卸方法


內蓋的拆卸

握住內蓋的旋鈕，向前拉下拆卸。

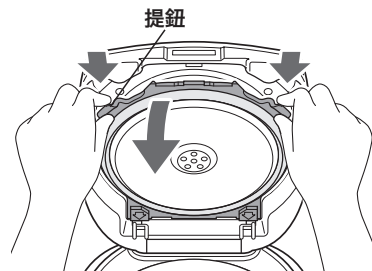


內蓋的安裝

1 請將內蓋左右卡榫牢牢嵌入凹槽內。

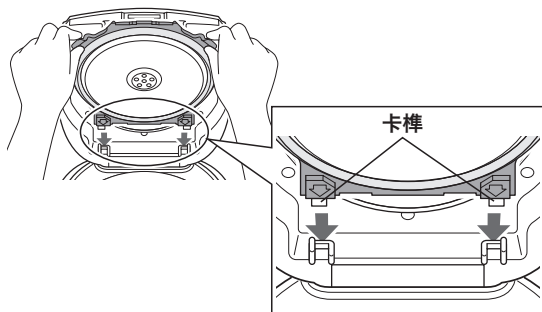


2 插到底，直到響起「喀噠」的聲響。

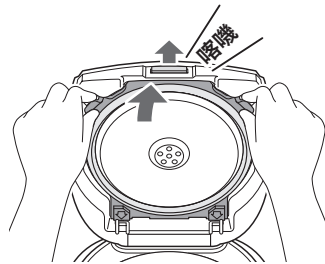


上蓋密封圈（小）的安裝

上蓋密封圈（小）脫落時請切實嵌入到底。

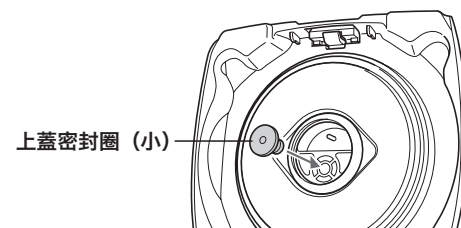


△注意

- 請勿拉扯上蓋密封圈（大）、內蓋密封圈。如果拆卸下來，就無法再次安裝上。
- 上蓋密封圈（大）、內蓋密封圈脫落時，請洽詢原購買處。
- 請勿拆下上蓋密封圈（大）、內蓋密封圈。請勿用力按壓或過度拉扯。可能導致蒸氣外漏或鍋蓋無法打開等故障。

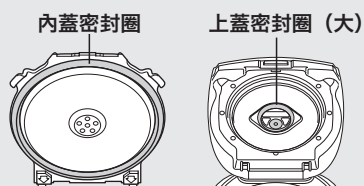

清洗方法


感覺有異味時、烹調後或是製作蛋糕後，請進行清洗。

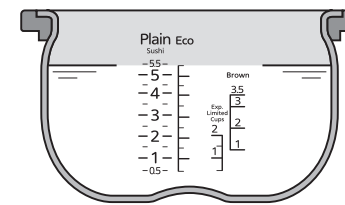

1 請在內鍋加水後，放進主體裡。

- ◇ 1.0L 型請加水至「白米」的刻度5.5位置，1.8L 型請加水至「白米」的刻度10位置。
- ◇ 將內鍋放進主體，將電源線插頭插入插座。→P.115
- ◇ 希望清除異味時，可在清潔保養時，在水中加入檸檬酸（約20g）攪拌均勻，清除異味的效果會更佳。

2 按下 [◀] 或 [▶]，選擇「Clean」。

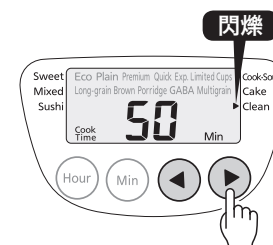

3 按下 [Start]。（開始清洗）



4 清洗結束後，「嗶-嗶-嗶-」連響8次提示音，▶和保溫燈閃爍。



- ◇ 按下 [Cancel]，將電源線插頭從插座上拔下。
- ◇ 待主體冷卻之後，倒掉內鍋的熱水，再進行清潔保養。→P.132

△注意

- 清洗前、後，內鍋和主體會產生高溫，請多加注意。
- 如欲連續清洗時，請務必待主體冷卻之後再重新清洗。主體呈現高溫，可能會影響清洗效果。
- 有些異味可能無法徹底去除乾淨。如果無法徹底去除時，請洽詢原購買處。

覺得無法煮出美味可口的米飯時

無法煮出美味可口的米飯時，請調查以下事項。

● 中央感應器或鍋蓋感應器沾有燒焦的飯粒或水滴等

● 內鍋變形
● 內鍋外側的水滴沒有擦乾淨

● 沒有確實蓋緊鍋蓋

● 內蓋邊緣或密封圈等處沾有飯粒等

● 清潔保養不徹底

● 中途發生停電

● 選單選擇錯誤

煮飯的困惑事項

有下述情況時	米	水	煮飯
蒸氣洩漏	- 米量及配料量、什穀量錯誤 - 煮飯時超過最大煮飯容量→P.104 ~ 110・145	加水量錯誤→P.104~110	
溢出	- 米量及配料量、什穀量錯誤 - 混合了很多碎米 - 煮飯時超過最大煮飯容量→P.104 ~ 110・145	- 加水量錯誤→P.104~110 - 未充分洗米（免洗米除外） - 洗完米後，將水瀝乾後閒置過久	- 混入配料或什穀一起煮 - 未仔細攪勻調味料
需要很長時間才能煮好	- 米量及配料量、什穀量錯誤 - 煮飯時超過最大煮飯容量→P.104 ~ 110・145	加水量錯誤→P.104~110	- 連續煮飯→P.116 - 停止保溫後立即煮飯→P.116
產生一層薄膜	米紙狀薄膜是澱粉融解乾燥後形成的，對人體無害。		

煮飯的困惑事項


有下述情況時	米	水	煮飯
米飯黏內鍋	太軟的米飯或黏度較高的米飯較容易黏內鍋。		
有米糠味、異味		未充分洗米（免洗米除外）	預約煮飯設定時間超過12小時以上
太軟	- 米量及配料量、什穀量錯誤 - 混合了很多碎米	- 加水量錯誤→P.104~110 - 煮飯時使用鹼性水（pH9以上） - 使用了溫熱水（35度以上）洗米或調整加水量 - 洗完米後，長時間浸泡於水中 - 洗完米後，將水瀝乾後閒置過久	- 使用了預約煮飯 - 混入配料或什穀一起煮 - 未仔細攪勻調味料 - 煮好的米飯未充分翻動 - 連續煮飯→P.116 - 停止保溫後立即煮飯→P.116
太硬	- 米量及配料量、什穀量錯誤 - 煮飯時超過最大煮飯容量→P.104~110・145	- 加水量錯誤→P.104~110 - 煮飯時使用礦泉水等硬度較高的水 - 使用了溫熱水（35度以上）洗米或調整加水量	- 混入配料或什穀一起煮 - 未仔細攪勻調味料 - 煮好的米飯未充分翻動 - 連續煮飯→P.116 - 停止保溫後立即煮飯→P.116
出現鍋巴、焦底	- 米量及配料量、什穀量錯誤 - 煮飯時超過最大煮飯容量→P.104~110・145 - 混合了很多碎米	- 加水量錯誤→P.104~110 - 煮飯時使用鹼性水（pH9以上） - 煮飯時使用礦泉水等硬度較高的水 - 使用了溫熱水（35度以上）洗米或調整加水量 - 未充分洗米（免洗米除外） - 洗完米後，長時間浸泡於水中 - 洗完米後，將水瀝乾後閒置過久	- 使用了預約煮飯 - 混入配料或什穀一起煮 - 未仔細攪勻調味料
半生熟	- 米量及配料量、什穀量錯誤 - 煮飯時超過最大煮飯容量→P.104~110・145 - 混合了很多碎米	- 加水量錯誤→P.104~110 - 使用了溫熱水（35度以上）洗米或調整加水量	- 混入配料或什穀一起煮 - 未仔細攪勻調味料 - 連續煮飯→P.116 - 停止保溫後立即煮飯→P.116 - 使用後，沒有取消保溫就直接按[Start]然後放置不管

煮飯的困惑事項

有下述情況時	米	水	煮飯
保溫中的米飯有異味	●米量及配料量、什穀量錯誤	●未充分洗米（免洗米除外）	●對白米、免洗米以外的米類保溫 ●添加冷飯 ●飯匙放入鍋中一起保溫 ●1.0L 型：1杯以下、1.8L 型：2杯以下的量進行保溫或再加熱→P.118・119 ●持續保溫24小時以上 ●內鍋仍有米飯情況下取消保溫 ●預約煮飯設定時間超過12小時以上 ●烹調或是製作蛋糕後，未去除異味
保溫中的米飯變色	●米量及配料量、什穀量錯誤	●未充分洗米（免洗米除外）	●煮好的米飯未充分翻動 ●對白米、免洗米以外的米類保溫 ●米飯堆成環狀保溫 ●添加冷飯 ●飯匙放入鍋中一起保溫 ●1.0L 型：1杯以下、1.8L 型：2杯以下的量進行保溫或再加熱→P.118・119 ●持續保溫24小時以上 ●反覆進行3次以上再加熱
保溫中的米飯偏乾	●米量及配料量、什穀量錯誤	●加水量錯誤→P.104~110	●煮好的米飯未充分翻動 ●對白米、免洗米以外的米類保溫 ●米飯堆成環狀保溫 ●添加冷飯 ●飯匙放入鍋中一起保溫 ●1.0L 型：1杯以下、1.8L 型：2杯以下的量進行保溫或再加熱→P.118・119 ●持續保溫24小時以上 ●反覆進行3次以上再加熱
保溫中的米飯變黏	●米量及配料量、什穀量錯誤	●加水量錯誤→P.104~110	●煮好的米飯未充分翻動 ●對白米、免洗米以外的米類保溫 ●米飯堆成環狀保溫 ●添加冷飯 ●飯匙放入鍋中一起保溫 ●1.0L 型：1杯以下、1.8L 型：2杯以下的量進行保溫或再加熱→P.118・119 ●持續保溫24小時以上 ●內鍋仍有米飯情況下取消保溫 ●預約煮飯設定時間超過12小時以上
再加熱後的米飯偏乾	●米量及配料量、什穀量錯誤	●加水量錯誤→P.104~110	●反覆進行3次以上再加熱 ●1.0L 型：1杯以下、1.8L 型：2杯以下的量進行保溫或再加熱→P.118・119 ●米飯才剛煮好，還很燙時，就進行再加熱

覺得無法做出美味的菜餚、蛋糕時

無法做出美味的菜餚、蛋糕時，請調查以下事項。

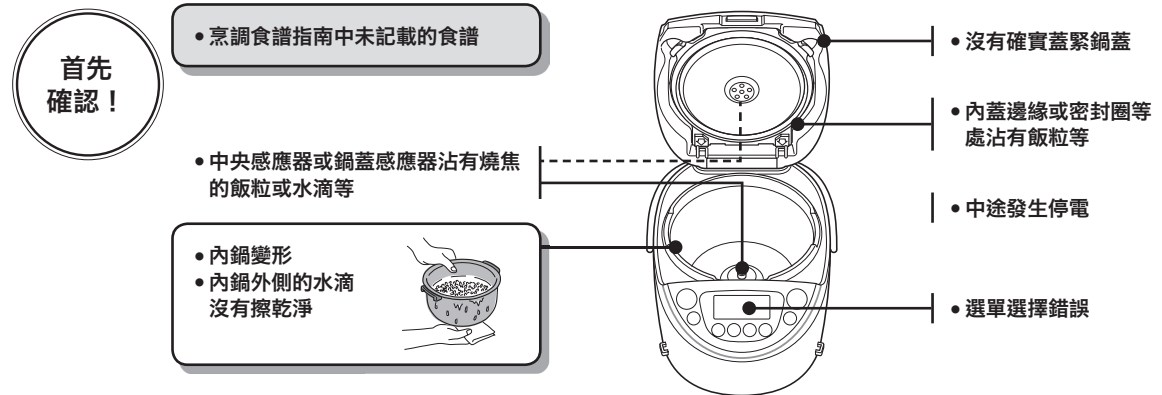

烹調的困惑事項

有下述情況時	材料	時間
煮不透	●食材種類、份量錯誤 ●加入的食材超過最大量標準	●烹調時間過短
溢出	●食材種類、份量錯誤 ●加入的食材超過最大量標準 ●加入的食材少於最小量標準	
煮乾	●食材種類、份量錯誤 ●加入的食材少於最小量標準	●烹調時間過長
焦底	●食材種類、份量錯誤 ●加入的食材超過最大量標準 ●加入的食材少於最小量標準	●烹調時間過長

烘烤蛋糕時的困惑事項

有下述情況時	材料	時間
烤不透	●食材種類、份量錯誤	●烘烤時間過短
溢出	●食材種類、份量錯誤	
烤焦	●食材種類、份量錯誤	●烘烤時間過長
烘烤的顏色不均	●請確認P.139的「首先確認！」內容	
表面發黏		●蛋糕烤好後未立刻取出，繼續擺在內鍋保溫

認為可能故障時

◇在委託維修前請確認。

有下述情況時	請確認這裡	請這樣處理	參照頁面
●無法煮飯 ●無法烹調 ●無法製作蛋糕	→ 是否已把電源線插頭已插入插座？	→ 將電源線插頭切實插入插座。	→ 115 120 122 124 126
●不能在預約好的時刻煮好飯	→ 現在的時刻設置是否正確？ → 請確認P.136「需要很長時間才能煮好」的項目，採取相應處理。 → 如果設定的時刻短於預約設定的標準時間，可能不會依照預約的時刻煮好飯。	→ 請正確設置時刻。 → →	→ 113 → 136 → 104~110
●無法進行預約煮飯/預約浸泡的設定	→ 顯示時間是否閃爍顯示「0:00」？ → 是否選擇了「Quick」「Exp. Limited Cups」「Mixed」「Sweet」「Quick Cook」「Cook・Soup」「Cake」「Clean」？這些選單無法進行預約設定。	→ 請設置現在時刻。 →	→ 113 → 121 123
●無法再加熱	→ 按 [Start] 後出現「嗶嗶」的提示音。 → 保溫燈是否熄滅？ → 是否選擇了「Porridge」「Brown Porridge」「Cook・Soup」「Cake」「Clean」？這些選單無法進行再加熱。	→ 米飯已經冷了。約55度以下的米飯，無法進行再加熱。 → 按下 [Keep Warm]，確認保溫燈亮燈後，再次按下 [Start]。 →	→ → 119 →
●顯示螢幕起霧	→ 密封圈類或內鍋邊緣等處是否沾有燒焦的飯粒或米粒等？ → 內鍋外側是否潮濕？ → 有時會因為電子鍋主體內部與室溫的溫差，在液晶面板上發生結露現象。使用幾次後便會改善。如未改善時，請至原購買處委託維修。	→ 請清除乾淨。 → 請用乾布擦拭。 →	→ 136 139 → -
●煮飯過程中、保溫期間與再加熱過程中有聲音發出	→ 「嗚嗚」聲是風扇轉動的聲音，並不屬於故障。 「噠」與「啾哩哩哩…」聲是IH運作的聲音，並不屬於故障。 → 聽到了與上述聲響完全不同的聲音。	→ → 請至原購買處委託維修。 →	→ 112 → -

有下述情況時	請確認這裡	請這樣處理	參照頁面
●按下 [Start] 或 [Keep Warm] 時，發出「嗶嗶」的提示音	→ 是否已放入好內鍋？	→ 請將內鍋放進主體。	→ 115
●剩餘時間一直顯示「〇〇分」不改變，或是顯示的時間突然改變	→ 受到煮飯條件和調整內容的設定變更的影響，剩餘時間的顯示可能會不更新，或是非逐漸更新而是突然變短或變長。這些都不屬於故障。 → 是否在主體依然發燙時煮飯，例如連續煮飯或是中止保溫後立即煮飯等？	→ 請務必待主體冷卻之後再煮飯。 →	→ 116 → 116 136
●進行預約煮飯（浸泡）設定時，發出「嗶嗶」的提示音	→ 按下 [Timer] 後，大約30秒內如果都沒有進行任何操作，就會發出聲音提醒，但仍可繼續進行預約設定。	→	→ 121 123
●主體內進水或掉入米粒	→ 可能會導致故障，請至原購買處委託維修。	→	→ -
●調整時刻時，即使按下 [Hour] 或 [Min]，也無法轉換成時刻設定模式	→ 煮飯（烹調）過程中、保溫期間、預約設定期間、預約煮飯/浸泡期間、再加熱期間、追加加熱期間及選中「Porridge」「Cook・Soup」「Cake」期間，無法進行時刻調整。	→	→ 113
●保溫燈閃爍 ●未進行保溫	→ 是否選擇了「Cake」「Clean」選單？	→ 「Cake」「Clean」無法進行保溫。若放置不管，蛋糕會發黏，因此請盡快食用。	→ 118 127
●顯示螢幕上有線狀黑色印漬	→ 顯示螢幕有時會因靜電出現印漬，並不屬於故障。 → 如果在意，請用擰乾的抹布擦拭去除。可透過去除靜電減輕印漬現象。	→	→ 112
●烹調選單的保溫期間，閃爍顯示「6」	→ 烹調後是否持續保溫了6小時以上？如果超出6小時，會閃爍顯示「6」。（烹調後請勿持續保溫超過6小時。）	→	→ 125
●保溫期間按下 [Hour]，閃爍顯示「24」	→ 是否持續保溫了24小時以上？保溫時間超過24小時以後，會閃爍顯示「24」提醒。	→	→ 118
●插入電源線插頭時，顯示螢幕處閃爍顯示「0:00」	→ 重新插上電源線插頭後，現在時刻、預約時刻或保溫經過時間的記憶是否消失？ → 同時按了 [Cancel] 和 [Timer]。	→ 內建鋰電池耗盡。（仍可進行一般的煮飯）請至原購買處委託維修。 → 請正確設定時刻。	→ 112 → 113

認為可能故障時

有下述情況時	請確認這裡	請這樣處理	參照頁面
●鍋蓋無法蓋上，或在煮飯過程中鍋蓋打開	→ 上框、內蓋密封圈、開蓋固定處附近是否有飯粒或米粒附著？	→ 請清除乾淨。	→ 133
●鍋蓋與主體之間有間隙	→ 蓋上鍋蓋時，由於結構原因，鍋蓋與主體之間會產生間隙，但只要煮飯、保溫過程中沒有出現蒸氣洩露，就不是異常。		→ -
●鍋蓋無法蓋上	→ 是否裝好內蓋？	→ 請裝好內蓋。	→ 134
●上框殘留水	→ 剛煮好飯或保溫期間，有時上框會殘留水，並不屬於故障。存留於上框時，請用乾布擦拭。		→ -
	→ 是否選擇了「Eco」？ 選擇「Eco」煮飯時，有時會殘留較多水。 如果介意時，建議選擇「Plain」煮飯。		→ 104
●按鍵無反應	→ 是否已把電源線插頭已插入插座？	→ 將電源線插頭切實插入插座。	→ 113・115 120・122 124・126
	→ 保溫燈是否亮燈？	→ 按下 [Cancel]，取消保溫後再進行操作。	→ 118
●電源線插頭冒出火花	→ 插拔電源線插頭時，有時會冒出小火花，這是IH式產品特有的現象，並不屬於故障。		→ -
●有樹脂等異味	→ 剛開始使用時，可能會聞到樹脂等異味，隨著您使用次數增多就會減少。如果您在意這種現象，請參照「清洗方法（感覺有異味時、烹調後或是製作蛋糕後，請進行清洗）」的內容進行清潔保養。		→ 135
●塑膠部分有線狀或波狀部位	→ 這屬於樹脂成型時出現的痕跡，對使用品質方面不會造成障礙。		→ -
●米飯煮不好 ●顯示螢幕顯示「dE no」	→ 按下 [Cancel] 後，會顯示下圖所示字樣。	→ 進入展示模式。請洽詢原購買處。	→ -

錯誤顯示與應對方法

顯示	請這樣處理	參照頁面
●顯示「E:02」，並發出「嗶嗶嗶嗶嗶」音	→ 若將主體放在地毯上，有時可能會因為進氣孔、排氣孔堵塞，而使得溫度上升，導致即使按下操作鍵也沒有反應。此外，若將主體放在室溫較高的地方，有時可能會因為溫度上升而出現相同症狀。如有此種情況，請按照以下步驟處理。 (1)拔下電源線插頭。 (2)移到不會堵塞進氣孔、排氣孔且室溫較低的地方。 (3)重新將電源線插頭插入插座，並操作按鍵。 *進行上述處理後，按鍵仍無反應時，應為主體異常。請拔下電源線插頭後，至原購買處委託維修。	→ 100
●顯示「E:11」		
●顯示「E:02」「E:11」以外的「E」開頭的代碼	→ 可能是故障。請拔下電源線插頭後，洽詢原購買處。	→ -

關於樹脂部件
受熱或接觸到蒸氣的樹脂部件，可能因長期使用出現老化、損壞。請洽詢原購買處。

燜飯時間的調整方法（「Exp. Limited Cups」選單）

*在把電源線插頭插入插座的狀態下，分別在30秒以內完成以下的步驟①～⑦。
如果超過30秒未進行任何操作時，會恢復至現在時刻顯示，無法進行設定。如果想再次設定，請從頭開始重新進行設定。
*煮飯（烹調、清洗）過程中、保溫期間、預約設定期間、預約煮飯/浸泡期間、再加熱過程中與追加加熱過程中，無法變更設定。
*若想在途中停止調整，請按 [Cancel]。



想要調整燜飯時間時

選擇「Exp. Limited Cups」選單煮飯時，如果想要調整燜飯時間，請按以下步驟調整時間。

1 按下 [◀] 或 [▶]，選擇「Plain」。

2 長按 [Timer] 約3秒以上。

3 按下 [Hour]，將模式設為 [5]。

4 按下 [Start]。

5 按下 [Hour] 或 [Min] 調整時間。

6 按下 [Start]。

7 長按 [Timer] 約3秒以上，便會完成設定，並恢復至現在時刻顯示。

 
142

143

繁體中文

音量調整方法

*在把電源線插頭插入插座的狀態下，分別在30秒以內完成以下的步驟
●1~7。如果超過30秒未進行任何操作時，會恢復至現在時刻顯示，無法進行設定。如果想再次設定，請從頭開始重新進行設定。
*煮飯（烹調、清洗）過程中、保溫期間、預約設定期間、預約煮飯/浸泡期間、再加熱過程中與追加加熱過程中，無法變更設定。
*若想在中途停止調整，請按 [Cancel] 。



想要調整音量（按鍵操作音、提示音）時

如果介意按鍵操作音、提示音的音量，請依照以下步驟調整音量。

1 按下 [◀] 或 [▶]，選擇「Plain」。

2 長按 [Timer] 約3秒以上。




3 按下 [Hour]，將模式設為[4]。



4 按下 [Start]。

5 按下 [Hour] 或 [Min] 調整音量。

音量調整
0：大（初始設定）
-1：中
-2：小

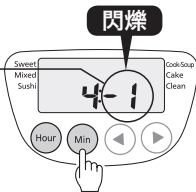

6 按下 [Start]。

7 長按 [Timer] 約3秒以上，便會完成設定，並恢復至現在時刻顯示。

規格

尺寸		1.0L (5.5杯) 型	1.8L (10杯) 型
電源		220-230V~/50-60Hz	
額定消耗電功率 (W)		1088	1206
煮飯容量 (L)	Plain	0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Premium	0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Eco	0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Sushi	0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Quick	0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Exp. Limited Cups	0.09~0.36 (0.5~2杯)	0.18~0.54 (1~3杯)
	Long-grain	0.09~1.0 (0.5~5.5杯)	0.18~1.8 (1~10杯)
	Multigrain	0.09~0.72 (0.5~4杯)	0.18~1.44 (1~8杯)
	Mixed	0.09~0.72 (0.5~4杯)	0.18~1.26 (1~7杯)
	Sweet	0.18~0.54 (1~3杯)	0.36~0.9 (2~5杯)
	Porridge	Firm	0.09~0.18 (0.5~1杯)
		Soft	0.09 (0.5杯)
	Brown Porridge	Firm	0.09~0.18 (0.5~1杯)
		Soft	0.09 (0.5杯)
	Brown		0.18~0.63 (1~3.5杯)
	Brown GABA		0.18~0.63 (1~3.5杯)
外形尺寸* (cm)	寬度	26.0	28.8
	深度	35.4	38.6
	高度	20.1	23.8
主體重量* (kg)		4.1	5.1
電源線長度* (m)		1.5	

* 數值為大致估算值。
●時鐘有時會受室溫、使用方法的影響，每月發生約30秒~120秒的誤差。
●1杯=約150g。

發生停電時

即使發生停電，待電力恢復後，各部功能仍可正常運作。

這種情況下發生停電時	待電力恢復後
預約煮飯/浸泡期間	定時器會繼續接著運作。 (如果長時間停電，且已過了設定時刻時，則會立即開始煮飯。)
煮飯（再加熱）過程中	會繼續煮飯（再加熱）。可能會影響煮出的米飯風味。
保溫期間	停電超過30分鐘時，則停止保溫。

消耗性零件與另售品的購買方法

- 密封圈類的部件屬於消耗品。根據使用方法的^{不同}，其磨損程度會有差異，但都會隨著使用年限而損耗。當髒汙、異味或破損嚴重時，請洽詢原購買處。
- 內鍋的氟素塗層會隨著使用而逐漸損耗，有時會出現剝落。→P.103