MCLA

Specifications

Model No.	MCZ-A060	MCZ-A080
Capacity	0.60 L / 20.3oz	0.80 L / 27.1oz
Heat retention (1 hour)	Greater than 85°C / 185°F	Greater than 86°C / 186°F
(6 hours)	Greater than 67°C / 152°F	Greater than 72°C / 161°F
Cold retention (6 hours)	Less than 9°C / 49°F	Less than 8°C / 47°F
Size*	W 7.8 x D 7.8 x H24.5 cm W 3.07 x D 3.07 x H 9.65 inch	W 7.8 x D 7.8 x H29.4cm W3.07 x D3.07 x H11.57inch
Weight*	0.29kg / 0.64lbs	0.32kg / 0.71 lbs

*Approximate value

- ** Heat retention has been calculated under the condition of adding hot water at 95°C ±1°C / 203°F±2°F and leaving it in a room temperature of 20°C±2°C / 68°F±4°F for 1hour or 6hours.
- Cold retention has been calculated under the condition of adding cold water at 4°C ±1°C / 39°F±2°F and leaving it in a room temperature of 20°C±2°C / 68°F±4°F for 6hours.
- Capacity is the actual volume of water that can be stored in the product when the stopper is closed. This
 is not the "Maximum level" volume described in "Safety Precautions".

Replacing and Purchasing Consumable Parts

The gaskets and stopper are consumable parts. Check once a year for damage/deterioration. If heavily stained or loose, replace them.

For replacement parts, contact customer service or the shop where you purchased this product.

Before Contacting Customer Service

The utmost measures have been taken to ensure the quality of this product. However, should the product be defective, contact your dealer and provide the following information.

1. Product name

- 2. Model Number (bottom of the product)
- 3. Description of trouble (As detailed as possible) 4. Purchase date

Feel free to send any questions or comments about this product to the shop where you purchased it. **For the purpose of performance improvement, designs, specifications and parts shown in this publication are subject to change without notice.



TIGER CORPORATION

Head Office: 3-1 Hayami-cho, Kadoma City, Osaka 571-8571, Japan

TIGER CORPORATION HONG KONG LIMITED

Rm. 1006B, 10/FI., Join-in Hang Sing Centre, 71 - 75 Container Port Road, Kwai Chung, N.T.

Tel: (852) 2418-0912 Fax: (852) 2418-0911 **URL: http://tiger-corporation.hk/**

TIGER CORPORATION U.S.A.

1815 W 205th Street, Unit 106, Torrance, CA 90501

Tel: 1-866-55-TIGER (84437)

Email: support@japantigercorp.com

URL: https://tiger-corporation-us.com





For household use


Stainless Steel Mug

Instructions

Thank you for purchasing a "TIGER" Stainless Steel Mug.

Please read the instructions completely before use.

Keep these instructions for future reference.

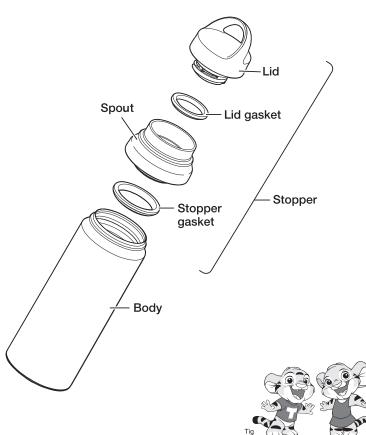

*Make sure that all parts are present before use.

Safety Precautions Be sure to follow all instructions.

- All safety instructions described below are intended to protect the user and other individuals from physical harm and household damage.
- ◆ Safety instructions are classified and described according to the level of harm and damage caused by improper use, as shown below.



This symbol indicates there is a Warning possibility of death or serious injury.

This symbol indicates there is a Caution possibility of injury or damage to property.

Description of Symbols



This symbol indicates a prohibited action.



This symbol indicates an action that must be taken or an instruction that must be followed.

Warning



Keep out of reach of children. Do not let children play with the product.

There is a risk of burns or injuries.



Caution



Do not put dry ice or carbonated beverages in the product.

The air pressure inside the product may increase, causing the stopper and lid to become stuck or prone to shattering, or the parts to be damaged.



Be sure to set the stopper in proper position.

Contents may leak and cause soiling or skin burns.



Do not store milk, dairy products, or certain fruit juices in the product,

The contents may decay or spoil. Long-time spoilage can create gases that raise the air pressure inside the product due to decay or spoil, causing the stopper and lid to become stuck or prone to shattering, or the parts to be damaged, and result in scattering of fragments.



Do not touch the brim of the product with a kettle spout.

The product may fall over, causing burns or injuries to the skin, or a scratch or deformation to the



Do not place the product near stoves, open flames, or other sources of extreme

There is a risk of burns or deformation or discoloring of the product.

Do not remove the caution sticker on the product.

Caution

Do not heat the product in a microwave oven.

There is a risk of injury or failure due to sparks.



Do not open the lid if the product is tilted or placed near your face when it contains a hot beverage.

This may cause the internal air pressure of the product to increase and the contents to burst out and scatter, potentially causing burns.



Drink slowly and do not tilt the product abruptly when the product contains a hot beverage.

Do not tilt the product abruptly. This may cause the contents to burst out, potentially causing burns.



 
Do not use the product in a moving vehicle.

This may result in burns or soiling of clothes or of the interior of the vehicle. (Using the product while you are driving is very dangerous, as you may be distracted.)



Be sure to fill the product with drink below the maximum level shown in the diagram.

If the contents exceed the specified line, they may leak or overflow, potentially causing burns.



Do not use the product if its ability to retain heat declines.

Hot beverages can make the product very hot, potentially causing burns.



Do not use the product for any purpose other than keeping beverages warm or cold for drinking.



Do not swing the product while holding the handle on the lid.



When carrying by the lid handle, use caution not to turn or produce any other action that may cause the lid to loosen.



Do not knock over, drop or expose the product to excessive shocks.

There is a risk of damage to the product, a reduction of its heat- or cold-retention ability, rusting, flaking of the exterior paint, or leakage of contents.



Do not disassemble or attempt to repair the product by yourself.

There is a risk of failure or accident. The contents may leak.



Do not put the product in a freezer.

Contents may leak or the product may be damaged.



Do not store tea leaves or peeled fruit.

They may clog the spout, resulting in leakage of the contents.

A Caution



Be sure to clean the product immediately after use, especially after consuming sports drinks.

Rinse the inside of the product well, even if you are going out, for example, and don't have time to wash it thoroughly. Mold, rust, or holes may appear.



Do not store soups or beverages containing salt in the product.

The product may become decayed, spoiled, or rusted.



Do not leave the product in a bag for a long time.

The storage conditions may change and there is a risk of rust or odors.



Do not place the product in a bag if its exterior is wet.

There is a risk of rust, odor, or soiling.



Do not use chlorine-based bleaches.

This may cause rusting, flaking of the exterior paint, or a hole on the product.



Do not scrape or rub the patterns on the surface of the product, and stickers on the underside of the product using your nails or a hard object.

The exterior paint may come off.



Do not pour the beverage into the bottle while the spout is set.

The contents may leak or the product may fall over, causing burns or injuries to the skin. The product may also be scratched or deformed.

For can holder



Before using the can holder, check its intensity.

If the holder is not strong enough, it may come off and get damaged. This may result in burns or soiling of clothes or of the interior of the vehicle.



When using a commercially available can holder, use the stationary type.

If the suspension holder that is attached to the window or air conditioning outlet is used, it may come off. This may result in burns or soiling of clothes or of the interior of the vehicle.

How to Use

Before the first use

Cleaning

You may notice an unusual odor coming from the material of the product.


In this case, clean the product by following the steps below.

- (1) Check that the lid gasket and stopper gasket are attached to the stopper.
- (2) Pour hot water into the body and securely close the stopper and lid.
- (3) Hold the body and gently shake it several times to rinse the inside thoroughly. (Do not shake it excessively. The hot water may splash out, potentially causing burns.)
- (4) Discard the hot water, and then clean each part.



Turn the stopper to remove it.


 Check that the lid gasket, and stopper gasket are attached to the stopper.

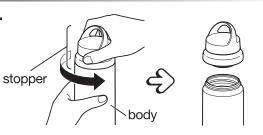

- To keep your beverage warm/cool longer, first pour a small amount of hot/cold water into the main body and let it sit for one or two minutes.
 - Discard the hot/cold water after preheating/precooling.
- 3 Pour your hot/cold beverage into the main body.
 - Pour appropriate amount of beverages.
 - Do not insert large cubes of ice. Use small cubes or crushed ice.

Place the main body in an upright position and turn the stopper to close it.

• Turn the stopper as far as it will go to securely close it.

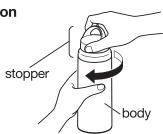


Hold the main body and spout, and turn the lid, and then drink the beverage.



Caution

 Do not tilt the body immediately after pouring in a hot beverage and closing the lid. The contents may leak.

 After drinking the beverage, keep the product in an upright position and securely close the lid.



Caution

 Make sure the handle on the lid does not suffer any strong impact while carrying it. The lid may open.

- If you place the product in a bag, make sure it is upright to prevent any accidental leakage. The product may leak if you place it on its side.
- •If you place the product in a bag, make sure the handle on the lid keeps away from bag contents. The lid may open.
- •When carrying by the lid handle, use caution not to turn or produce any other action that may cause the lid to loosen.
- •Do not use the bottle by hanging it with any metal fittings or strings attached to the handle on the lid. Doing so may cause the main unit to fall off due to the loosen stopper.

If marks start to become visible on the inside of the main body -

For red, rust-like spots or rough areas

Such staining can be caused by minerals in water, such as calcium, magnesium, and iron. It is recommended to clean them with citric acid, which is available at supermarkets and drug stores.

- (1) Dilute the citric acid (approximately 10 g) in lukewarm water, and then pour it into the main body.
- (2) After a few hours have elapsed, wash the main body with a soft brush and then thoroughly rinse it.
- (3) Dry the main body completely.

Note: Do not use detergents for other brands' pots or insulated bottles. The gasket may be broken.

If an odor remains on the gasket

Depending on the contents, the odor may remain on the gasket. In this case, leave the gasket in boiling water for approximately 30 minutes to reduce the odor. If the odor is still noticeable, purchase a new gasket (sold as an optional part).

How to Clean

- ◆ Clean the product on the same day after every use.
- Use mild kitchen detergent (for table or cookware).
- Use a soft sponge or cloth.
- ◆ Clean the product thoroughly to prevent any odor.
- (1) Wash each part using a sponge with diluted detergent water or lukewarm water, and then thoroughly rinse it with water.
- (2) Wipe the water off with a dry cloth and dry the parts thoroughly.

Caution

- Do not soak the body and lid when washing them. (Water may enter.)
- After washing the whole body, immediately use a dry cloth to wipe off the moisture on its outer surface. Not wiping off all droplets could leave water stains or cause rust and other marks.
- Do not use thinners, cleansers, bleaches, cleaning wipes, metallic scrubbing brushes, or nylon scrubbing brushes.
- Do not use a dishwasher or dish dryer, and do not wash with boiling water. (Except gasket)
- Be sure to attach the gaskets.
- Dry the body and lid completely after removing stains when not in use for a long time.

Attaching and Removing the gasket

Caution

 Do not attach the gasket in the incorrect place or direction. The contents may leak.

Attaching and Removing the lid gasket

To remove



∠Lid gasket

Slowly remove the lid gasket while holding and turning it.





When attaching the lid gasket, make sure to fit it completely in the proper direction.

Attaching and removing the stopper gasket

 
■ To remove



stopper gasket

Slowly remove the stopper gasket while holding its edge.

To attach



When attaching the stopper gasket, make sure to fit it completely in the proper direction.