How to Clean



- ◆Clean after every use.
- ◆Use mild kitchen detergent.
- ◆Use a sponge or soft cloth.
- ◆Be sure to clean the stopper unit every use.



Cup







(Be sure to separate the stopper unit before wash → P.6)

Stopper ®

Stopper





gasket

(Be sure to separate the gaskets before wash → P.6)

Stopper unit

Stopper unit

■To Remove

1) Wash it with soft sponge

and diluted dish soap or

warm water. Rinse well

2)Wipe off the moisture on

the outer surface with dry

wiped from the product

with running water.

(3)Ensure all moisture is


after cleaning.

cloth.

Separate stopper unit: squeeze button toward inward as shown, and then lift Stopper (A) from Stopper (B).






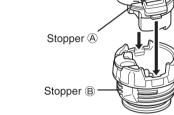

Gasket

Ensure the gaskets are attached properly.

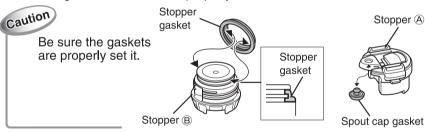

Caution

- Do not leave the product soaked in the cleaning solution.
- ●Do not use paint thinner, heavy duty cleanser, bleach, duster wipe, metal brush and nylon brush.
- Do not use dish washer, dryer and scalder.
- ●Always make sure to set the gaskets properly. → P.6
- If you do not use the product for a long time, clean the bottle, cup, stopper and gaskets. Wipe them all with a dry cloth, and allow them to air dry. Then store the product.

[Reddish rust like spot] or [Rough surface] appear on the product, clean it with Citric Acid.

Decalcifying the unit.

- ①Add 10g of Citric Acid and mix with warm water. And then leave Citric Acid solution for 2-3 hours.
- 2) Wash with soft brush, then rinse out thoroughly with running water.
- 3 Ensure all moisture is wiped from the product after cleaning.
- *Contact customer service for Citric Acid.
- *Do not use ordinary water heater/bottle cleaner. Ordinary cleaner may contain chlorine bleach and it may damage the gaskets.

The bottle rattles when shaken.

This is caused by a copper sheet moving inside the bottle and it doesn't affect the performance of the bottle. The copper sheet is used for boosting the performance of heat retention.

Replacing and Purchasing Consumable Parts

The gaskets and stopper unit are consumable parts. Check once a vear for damage/deterioration. If heavily stained or loose, replace them. For replacement parts, contact customer service or the shop where vou purchased this product.

Before contact customer service

The utmost measures have been taken to ensure the quality of this product. Should the product be defective. however, contact your dealer and provide the following information.

- 1. Product name
- 2. Model Number
- 3. Description of trouble (As detailed as possible) Feel free to send any questions or comments about this product to the shop where you purchased it.

*For the purpose of performance improvement, designs, specifications and parts shown in this publication are subject to change without notice.

Specifications

	Capacity	Heat retention	Cold retention
	0.4 liters	Greater than 39°C • 102°F (24hours)	
		Greater than 68°C • 154°F (6hours)	46°F (6hours)
	0.5 liters	Greater than 43°C • 109°F (24hours)	Less than 8°C •
		Greater than 71°C • 160°F (6hours)	46°F (6hours)

*Heat retention has been calculated under the condition of adding hot water at 95°C ±1°C • 203°F±2°F and leaving it in a room temperature of 20°C±2°C • 68°F±4°F for 24hours or 6hours.

*Cold retention has been calculated under the condition of adding cold water at 4°C ±1°C • 39°F±2°F and leaving it in a room temperature of 20°C±2°C • 68°F±4°F for

*Capacity is actual volume that water can be stored into the product when the stopper is closed.



MODEL **MSE-A**

Stainless Steel Bottle/

SAHARA

Instructions


Thank you for purchasing a "TIGER" Stainless Steel Bottle. Please read the instructions completely before use. Keep these instructions for future reference.









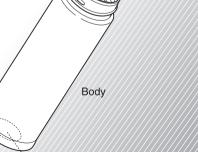

Protective sheet

Stopper



TIGER CORPORATION

Head Office: 3-1 Hayamicho, Kadoma-City, Osaka, 571-8571 Japan URL: http://www.tiger.jp/global.html

Safety Precautions


Do not remove caution sticker and protective sheet on the bottom.

Important!

Keep out of reach of children.

Do not put dry ice or carbonated beverages in the bottle.

Do not fill the bottle above the maximum level shown below.

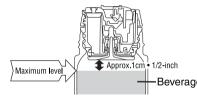

Do not place the bottle near stoves, open flames, or other sources of extreme heat.

Do not store milk, dairy products, or certain fruit juices in the bottle.

Do not touch the brim with hot tea kettle spout.

Do not open the lid when the bottle is tilted or near face.

Be sure to attach stopper uni securely and close the spout.

Be sure to use cup for hot drink.

Do not use the bottle for any purposes other than keeping beverages warm or cold.

Do not knock over, drop or expose the bottle to excessive shocks.

Do not disassemble or attempt to repair the bottle by yourself.

Do not store in the freezer.

Be sure to close the spout and keep the body in upright position and the close the lid securely.

Do not add tea leaves and fruits juice with pulp.

Be sure to clean the product immediately specially after sports drink.

Do not store soups or beverages containing salt in the bottle.

Do not use chlorine-based bleaches when cleaning the bottle.

Do not remove the protective sheet on the underside of the bottle.

Do not scratch or rub the stickers and a design with nail or hard objects.


How to Use



Remove the stopper unit and cup.



- ■Be sure to clean it prior use.**→P.5**
- Be sure to set the gasket in proper position.

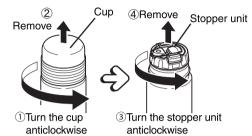




To keep your beverage warm or cool longer. Pour hot (or cold) water into the bottle, and let it sit for one or two minutes to allow the inside of the bottle to heat (or cool).

Preheat with hot water. Precool with cold water.



Pour desired drink.

- ■Do not fill the bottle above the maximum level shown right.
- •Do not push into big ice cube. Use small or crushed ice.
- Hot tea may change color of tea. Loose tea may clog the stopper. Use tea bag.

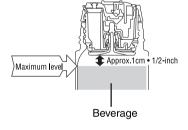




Wipe off outer body.



Close the stopper unit and cup.


Be sure to close securely.

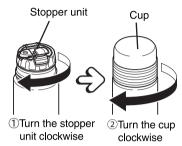

There is small gap between the stopper unit and body. This is not malfunction.





Remove the cup, push [Open] Button down, tilt the main body to pour drink.

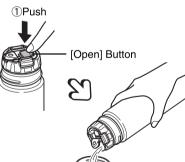


Do not push [Open] Button when it tilted

Drink may gush out.

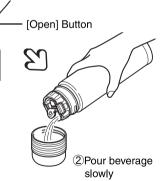


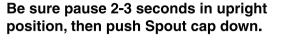

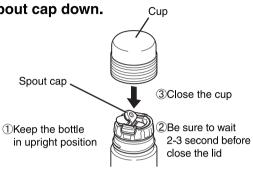



Do not push Spout cap when it tilted. Moisture stayed in the stopper unit and it may leak.

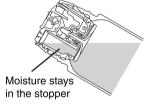



Close the cup. \rightarrow P.3

Wipe off inner cup before set it back.



•Keep the main body upright position all the time.

