 


For household use

Stainless Steel Bottle

Instructions

Thank you for purchasing a “TIGER” Stainless Steel Bottle.
Please read the instructions completely before use.
Keep these instructions for future reference.

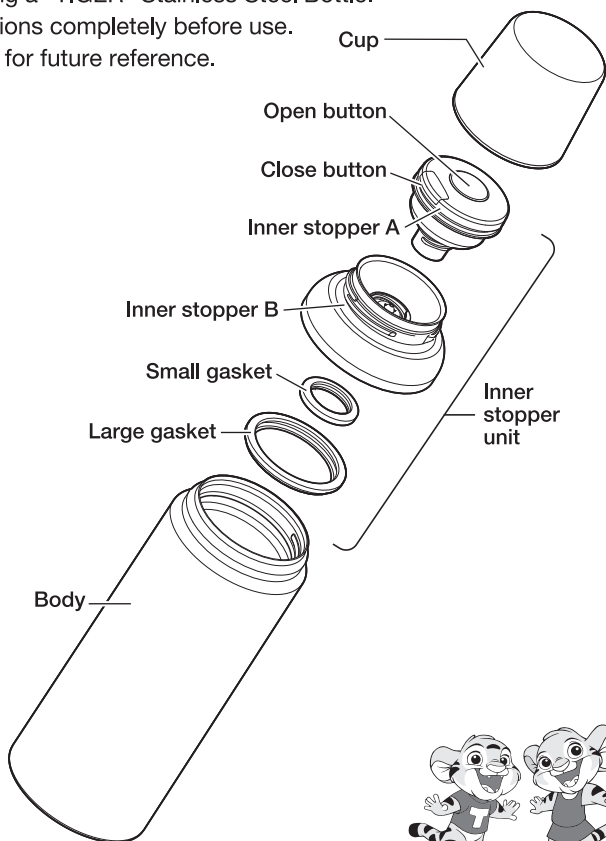

*Make sure that all parts are present before use.



Safety Precautions

Be sure to follow all instructions.

- ◆ All safety instructions described below are intended to protect the user and other individuals from physical harm and household damage.
- ◆ Safety instructions are classified and described according to the level of harm and damage caused by improper use, as shown below.

 **Warning** This symbol indicates there is a possibility of death or serious injury.

 **Caution** This symbol indicates there is a possibility of injury or damage to property.

Description of Symbols

 This symbol indicates a prohibited action.

 This symbol indicates an action that must be taken or an instruction that must be followed.

Warning

-  **Keep out of reach of children. Do not let children play with the product.**
There is a risk of burns or injuries.



Caution

-  **Do not put dry ice or carbonated beverages in the product.**
The air pressure inside the product may increase, causing the inner stopper unit to become stuck or prone to shattering, or the parts to be damaged.
-  **Be sure to set the inner stopper unit in proper position.**
Make sure to press the close button.
Contents may leak and cause soiling or skin burns.
-  **Do not store milk, dairy products, or certain fruit juices in the product.**
The contents may decay or spoil. Long-time spoilage can create gases that raise the air pressure inside the product due to decay or spoil, causing the inner stopper unit to become stuck or prone to shattering, or the parts to be damaged, and result in scattering of fragments.
-  **Do not touch the brim of the product with a kettle spout.**
The product may fall over, causing burns or injuries to the skin, or a scratch or deformation to the product.
-  **Do not place the product near stoves, open flames, or other sources of extreme heat.**
There is a risk of burns or deformation or discoloring of the product.

Do not remove the caution sticker on the product or the sticker on the bottom.

Caution



Do not heat the product in a microwave oven.

There is a risk of injury or failure due to sparks.



Do not press the open button if the product is tilted or placed near your face when it contains a hot beverage.

This may cause the internal air pressure of the product to increase and the contents to burst out and scatter, potentially causing burns.



 
Do not use the product in a moving vehicle.

This may result in burns or soiling of clothes or of the interior of the vehicle. (Using the product while you are driving is very dangerous, as you may be distracted.)



Be sure to fill the product with drink below the maximum level shown in the diagram.

If the contents exceed the specified line, they may leak or overflow, potentially causing burns.

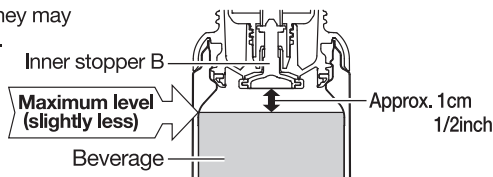

Do not use the product if its ability to retain heat declines.

Hot beverages can make the product very hot, potentially causing burns.



Do not use the product for any purpose other than keeping beverages warm or cold for drinking.



Do not knock over, drop or expose the product to excessive shocks.

There is a risk of damage to the product, a reduction of its heat- or cold-retention ability, rusting, flaking of the exterior paint, or leakage of contents.



Do not disassemble or attempt to repair the product by yourself.

There is a risk of failure or accident. The contents may leak.



Do not put the product in a freezer.

Contents may leak or the product may be damaged.



Do not store tea leaves or peeled fruit.

They may clog the spout, resulting in leakage of the contents.



Be sure to clean the product immediately after use, especially after consuming sports drinks.

Rinse the inside of the product well, even if you are going out, for example, and don't have time to wash it thoroughly. Mold, rust, or holes may appear.

Caution

-  **Do not store soups or beverages containing salt in the product.**
The product may become decayed, spoiled, or rusted.
-  **Do not leave the product in a bag for a long time.**
The storage conditions may change and there is a risk of rust or odors.
-  **Do not place the product in a bag if its exterior is wet.**
There is a risk of rust, odor, or soiling.
-  **Do not use chlorine-based bleaches.**
Causes of rust, paint/printing/plating peeling*, and holes.
*Limited to products with processing such as painting, printing and plating.
-  **Do not scratch or rub the surface of the body, resin parts, or seals with nails or hard objects.**
Causes of damage and peeling.
-  **Use the cup to drink when the product contains a hot beverage.**
May cause spillage or burns if drunk directly from the body.
(Due to the heat insulation effect, the outside will not become hot even if hot things are put in.)
-  **Do not tilt the product abruptly when pouring the beverage into the cup.**
May cause burns if it tilts abruptly and the beverage comes out suddenly.
-  **After pouring the beverage, stand the product upright, wait for 2 or 3 seconds, press the close button, and then close the cup.**
The contents may leak.
-  **Do not place the body horizontally.**
The contents may leak.
-  **Ice changes the inner pressure so the gasket may dislocate. If this happens, set it back into its proper position.**
-  **Do not add drinks with the inner stopper B is set.**
Risk of burns, injuries, scratches and deformation if spilled or falls.

For can holder



Before using the can holder, check its intensity.

If the holder is not strong enough, it may come off and get damaged. This may result in burns or soiling of clothes or of the interior of the vehicle.



When using a commercially available can holder, use the stationary type.

If the suspension holder that is attached to the window or air conditioning outlet is used, it may come off. This may result in burns or soiling of clothes or of the interior of the vehicle.

How to Use

Before the first use

● Cleaning

You may notice an unusual odor coming from the material of the product.

In this case, clean the product by following the steps below.

- (1) Check that the lid gasket and stopper gasket are attached to the stopper.
- (2) Pour hot water into the body and securely close the inner stopper unit.
- (3) Hold the body and gently shake it several times to rinse the inside thoroughly. (Do not shake it excessively. The hot water may splash out, potentially causing burns.)
- (4) Discard the hot water, and then clean each part.

1 Turn the cup and the inner stopper unit to remove it.

- Check that the large gasket and small gasket are attached to the stopper.

2 To keep your beverage warm/cool longer, first pour a small amount of hot/cold water into the main body and let it sit for one or two minutes.

- Discard the hot/cold water after preheating/precooling.

 
3 Pour your hot/cold beverage into the main body.

- Pour appropriate amount of beverages.
- Do not insert large cubes of ice. Use small cubes or crushed ice.
- When you add hot tea, the color of the tea may change.
Please use a tea bag, etc., as the inner stopper unit may become clogged with tea leaves.
- Be sure to wipe off any spilled drink on the outside of the body.

4 Place the main body in an upright position and turn the cup and the inner stopper unit to close it.

- Turn the cup and the inner stopper unit as far as it will go to securely close it.

- 5 Remove the cup, press the open button, tilt the product, and then pour the beverage.**

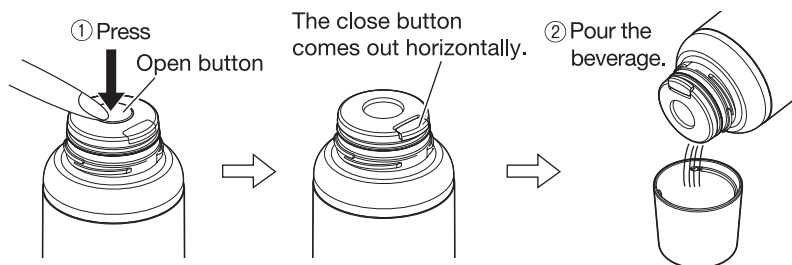


- Do not shake the body.
- Pour slowly without tilting the body.

- 6 After pouring the beverage, stand the product upright, wait for 2 or 3 seconds, close the inner stopper unit and then close the cup.**

- Shake off the "water drop" remaining inside the cup, wipe it well and close it.

Caution

 - If you place the product in a bag, make sure it is upright to prevent any accidental leakage. The product may leak if you place it on its side.
- Do not push the close button while tilting the body. Liquid remains in the inner stopper unit.

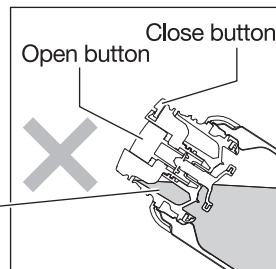

The product rattles when shaken.

This is caused by a metal sheet moving inside the product that is used for boosting heat retention.

How to Clean

- ◆ Clean the product on the same day after every use.
- ◆ Use mild kitchen detergent (for table or cookware).
- ◆ Use a soft sponge or cloth.
- ◆ Clean the product thoroughly to prevent any odor.

(1) Wash each part using a sponge with diluted detergent water or lukewarm water, and then thoroughly rinse it with water.

(2) Wipe the water off with a dry cloth and dry the parts thoroughly.

Caution

- Do not wash by leaving the body and each part (cup, inner stopper unit) attached. Also, do not wash the main body with each part attached.
- After washing the whole body, immediately use a dry cloth to wipe off the moisture on its outer surface. Not wiping off **all** droplets could leave water stains or cause rust and other marks.
- Do not use thinners, cleansers, bleaches, cleaning wipes, metallic scrubbing brushes, or nylon scrubbing brushes.
- Do not use a dishwasher or dish dryer, and do not wash with boiling water. (Except gasket)
- Be sure to attach the gaskets.
- Dry the body and lid completely after removing stains when not in use for a long time.

 
If an odor remains on the gasket

Depending on the contents, the odor may remain on the gasket. In this case, leave the gasket in boiling water for approximately 30 minutes to reduce the odor. If the odor is still noticeable, purchase a new gasket (sold as an optional part).

Attaching and Removing the inner stopper A


■ To remove

Screw the inner stopper A off the inner stopper B.

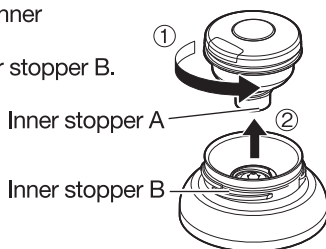

■ To attach

 
Screw the inner stopper A into the inner stopper B, and press the close button.

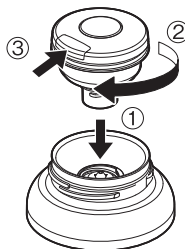

Attaching and removing the small and large gasket

Large gasket

 Small gasket

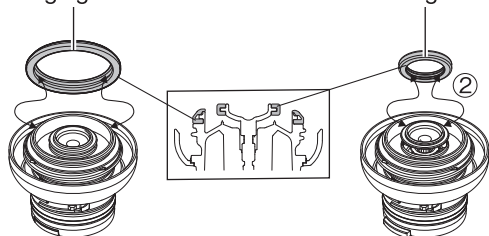

Caution

Remove the gasket slowly while holding its edge.
When attaching the stopper gasket, make sure to fit it completely in the proper direction.
The contents may leak.

↑ ① Press the open button.

If marks start to become visible on the inside of the main body

For red, rust-like spots or rough areas

Such staining can be caused by minerals in water, such as calcium, magnesium, and iron. It is recommended to clean them with citric acid, which is available at supermarkets and drug stores.

(1) Dilute the citric acid (approximately 10 g) in lukewarm water, and then pour it into the main body.

(2) After a few hours have elapsed, wash the main body with a soft brush and then thoroughly rinse it.

(3) Dry the main body completely.

Note: Do not use detergents for other brands' pots or insulated bottles. The gasket may be broken.

Specifications

Model No.	MSI-A060	MSI-A080
Capacity	0.60 L / 20.3 oz	0.80 L / 27.1 oz
Heat retention	Greater than 86°C / 186°F (1 hour)	Greater than 87°C / 188°F (1 hour)
	Greater than 71°C / 159°F (6 hours)	Greater than 75°C / 167°F (6 hours)
Cold retention	Less than 8°C / 47°F (6 hours)	Less than 7°C / 45°F (6 hours)
Size *	W 7.8 x D 7.8 x H 24.8 cm	W 7.8 x D 7.8 x H 29.7 cm
	W 3.07 x D 3.07 x H 9.76 inch	W 3.07 x D 3.07 x H 11.69 inch
Weight *	0.31kg / 0.68 lbs	0.35kg / 0.77 lbs

*Approximate value

※ Heat retention has been calculated under the condition of adding hot water at 95°C ±1°C / 203°F±2°F and leaving it in a room temperature of 20°C±2°C / 68°F±4°F for 1hour or 6hours.

※ Cold retention has been calculated under the condition of adding cold water at 4°C ±1°C / 39°F±2°F and leaving it in a room temperature of 20°C±2°C / 68°F±4°F for 6hours.

※ Capacity is the actual volume of water that can be stored in the product when the stopper is closed. This is not the "Maximum level" volume described in "Safety Precautions".

Replacing and Purchasing Consumable Parts

The cup, gasket and stopper are consumable parts. Check once a year for damage/deterioration. If heavily stained or loose, replace them.

For replacement parts, contact customer service or the shop where you purchased this product.

Before Contacting Customer Service

The utmost measures have been taken to ensure the quality of this product. However, should the product be defective, contact your dealer and provide the following information.

1. Product name
2. Model Number (bottom of the product)
3. Description of trouble (As detailed as possible)
4. Purchase date

Feel free to send any questions or comments about this product to the shop where you purchased it.

※ For the purpose of performance improvement, designs, specifications and parts shown in this publication are subject to change without notice.



TIGER CORPORATION

Head Office: 3-1 Hayami-cho, Kadoma City, Osaka 571-8571, Japan

TIGER CORPORATION HONG KONG LIMITED

Rm. 1006B, 10/FI., Join-in Hang Sing Centre, 71 - 75 Container Port Road, Kwai Chung, N.T.

Tel: (852) 2418-0912 Fax: (852) 2418-0911

URL : <http://tiger-corporation.hk/>

TIGER CORPORATION U.S.A.

1815 W 205th Street, Unit 106, Torrance, CA 90501

Tel: 1-866-55-TIGER (84437)

Email: support@japantigercorp.com

URL : <https://tiger-corporation-us.com>