TIGER


MODEL
MKP-Z

For household use

Bottle Sling for Tiger Vacuum Insulated Bottle

Instructions

Thank you for purchasing this product.
Please read all information in this manual
before using the product.
Afterward, keep this manual in a handy
location for future reference
by anyone who
will use this product.

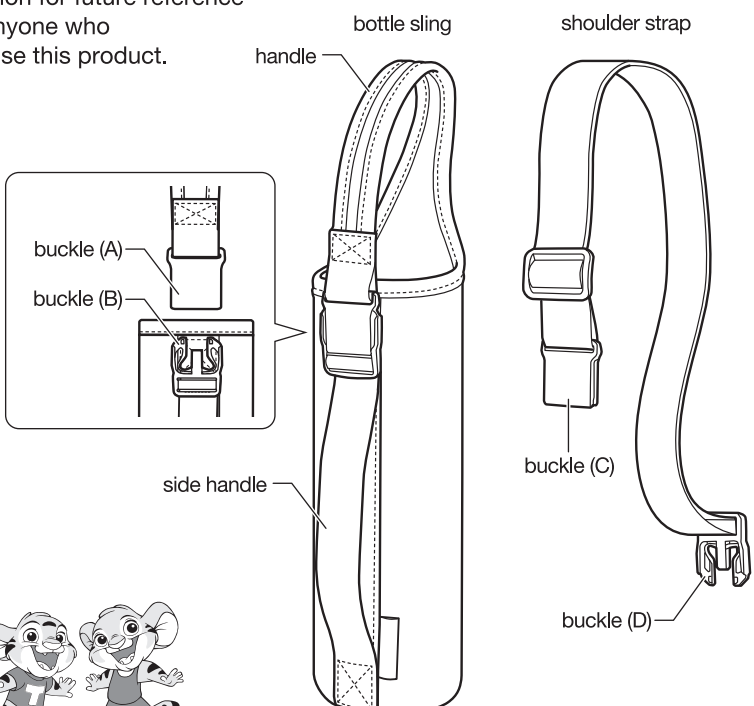

© 2003 TIGER CORPORATION

* Make sure that all parts are present before use.

Safety Precautions

Be sure to follow all instructions.

- All safety instructions described below are intended to protect the user and other individuals from physical harm and household damage.
- Safety instructions are classified and described according to the level of harm and damage caused by improper use, as shown below.

⚠ **WARNING**	This symbol indicates there is a possibility of death or serious injury.
⚠ **CAUTION**	This symbol indicates there is a possibility of injury or damage to property.

Description of Symbols	
This symbol indicates a prohibited action.	This symbol indicates an action that must be taken or an instruction that must be followed.

⚠ WARNING

Do not hang the bottle sling's shoulder strap around your neck.

There is a risk of choking or injuries.

Use only under adult supervision. Keep out of reach of infants to prevent accidental play.

Small parts pose a choking hazard. Failure to follow instructions may cause scalds* or injuries.

*When using products that keep beverages hot.

Be careful about the following when hanging the bottle sling's shoulder strap from your shoulder.

- Do not run.
- Do not exercise.
- Do not play.
- Do not get the product caught on things around you.
- Keep the product away from right in front of your stomach.

There is a risk of injury if you fall.



The shoulder strap should be worn diagonally across your shoulder with the bottle at your side or back.



Bottle sling around your neck



Bottle at the front of your body

Safety Precautions

Be sure to follow all instructions.

⚠ CAUTION

Do not use for any purpose other than holding Tiger vacuum insulated bottle of applicable model number (applicable capacity).

Do not use this product with silicone bottle boot attached.

Do not place the product near stoves, open flames, or other sources of extreme heat.

There is a risk of burns or deformation or discoloring of the product.

Do not use the bottle sling when it is wet.

The color may transfer to clothes and other items.

Do not hold the bottle sling upside down if the body is inside it.

The body may fall out of the bottle sling, resulting in injury or damage.

Do not swing bottle sling by its top handle, side handle, or shoulder strap.

Doing so may cause it to strike people or objects, or damage the connecting parts, leading to product fall, resulting in injury or damage.

Do not use chlorine or oxygen bleach for the bottle sling.

Doing so may result in color loss, discoloration, or color fading.

Do not use clothes dryer or drying function of washer-dryer, and do not iron bottle sling.

Doing so may cause shrinkage.

Be sure to securely attach the handle or shoulder strap of the bottle sling before use.

Otherwise, the product may fall, causing injury or damage.

Put the product aside when playing with playground equipment.

Always clean after use.

Wash in a laundry net on a delicate or hand-wash cycle, or wash by hand, then dry thoroughly in the shade.

Store in a well-ventilated place when not in use.


- Color fading or color transfer may occur depending on usage conditions.
- There may be a smell typical of new products, but this will gradually decrease with use. If smell is strong, we recommend removing bottle sling from packaging and leaving it in a well-ventilated place for a few days.

How to Use

1

Unlock the buckle on the handle.

- While pressing both ends of buckle (B), pull buckle (A) straight out.

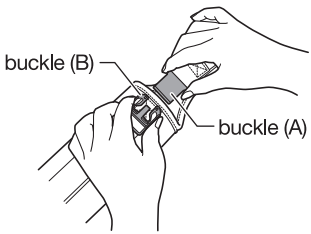


2

Insert the bottle body securely all the way to the bottom of the bottle sling.

CAUTION

- Failure to insert it all the way to the bottom may cause the product to fall over and be damaged.

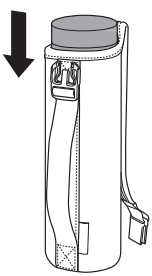


3

Attach buckle (A) to buckle (B).

- Insert it straight in until it clicks into place, ensuring it locks securely.

CAUTION


- Make sure the buckle is securely locked. Otherwise, the bottle body may fall out of the bottle sling, causing injury or damage.
- Be careful not to pinch your fingers when locking the buckle.
  Risk of injury.

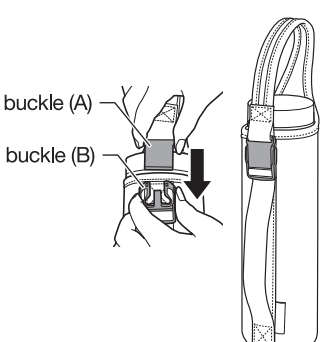

How to Use

4

To remove the bottle body, unlock the buckle first.

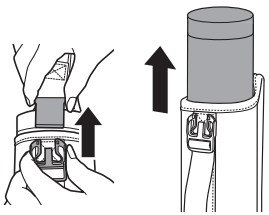


How to use a shoulder strap

1


Unlock the buckle on the handle.

- While pressing both ends of buckle (B), pull buckle (A) straight out.

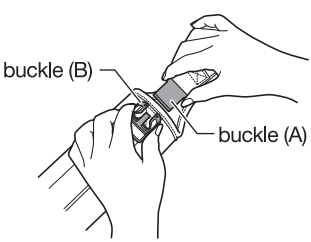

2

Insert the bottle body securely all the way to the bottom of the bottle sling.

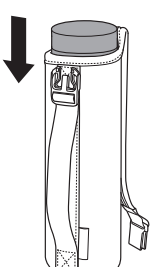


CAUTION

- Failure to insert it all the way to the bottom may cause the product to fall over and be damaged.

3

Attach buckle (D) to buckle (A), and buckle (C) to buckle (B).

- Insert it straight in until it clicks into place, ensuring it locks securely.

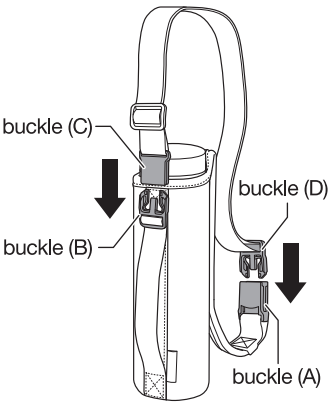

CAUTION

- Make sure all buckles are securely locked. Otherwise, the bottle body may fall out of the bottle sling, causing injury or damage.
- Be careful not to pinch your fingers when locking the buckle.
  Risk of injury.
- Adjust shoulder strap length to leave sufficient slack.

4

To remove the bottle body, unlock all buckles first.

How to Clean

1

Place the bottle sling and shoulder strap in a laundry net.



Use a laundry net



Do not tumble dry

2

Wash on a delicate or hand-wash cycle, or wash by hand, then dry thoroughly in the shade.

CAUTION

- Do not use chlorine or oxygen bleach for the bottle sling.
  Doing so may result in color loss, discoloration, or color fading.
- Do not use clothes dryer or drying function of washer-dryer, and do not iron bottle sling.
  Doing so may cause shrinkage.

Specifications

Model No.	MKP-Z100	MKP-Z200	MKP-Z300	MKP-Z400
Size (approx.)*	W 7.5×D 7.0× H 13.5 cm W 2.95×D 2.76× H 5.32 inch	W 7.5×D 7.0× H 19.5 cm W 2.95×D 2.76× H 7.68 inch	W 8.5×D 8.0× H 20.5 cm W 3.35×D 3.15× H 8.07 inch	W 8.5×D 8.0× H 23.5 cm W 3.35×D 3.15× H 9.25 inch
Weight (approx.)	46g / 0.10 lbs	55g / 0.12 lbs	65g / 0.14 lbs	70g / 0.15 lbs

*The figures do not include the handle and shoulder strap.